



# PACKAGED STANDBY SYSTEM


---

## INSTALLATION AND OPERATORS MANUAL

**PSS15B2W-4/A**

**PSS15B2W-17/A**

**PSS15B2W-18/A**

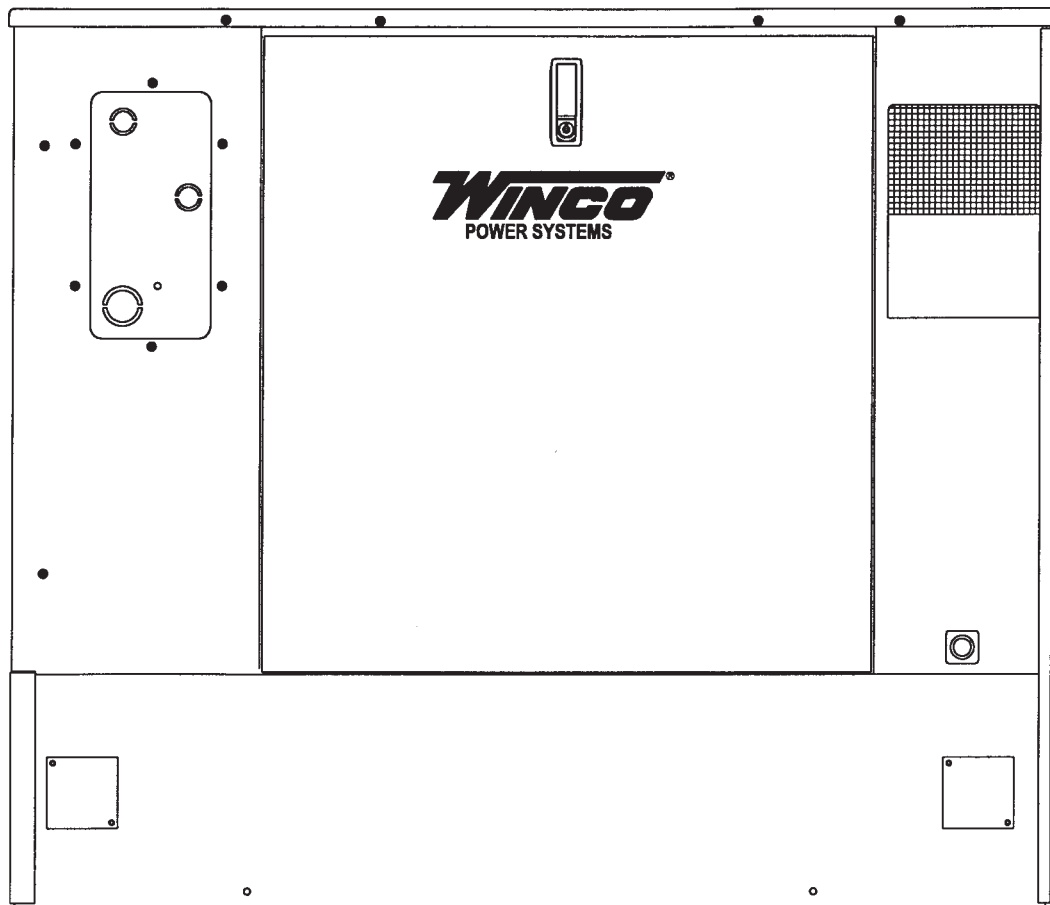

**Engine Generator Set**

**Read and understand all instructions in the manual before starting and operating the generator set.**

## USING THIS MANUAL

Congratulations on your choice of a Winco generator set. You have selected a high-quality, precision-engineered generator set designed and tested to give you years of satisfactory service.

To get the best performance from your new engine generator set, it is important that you carefully read and follow the operating instructions in this manual.

Should you experience a problem please follow the "Things To Check" near the end of this manual. The warranty listed in this manual describes what you can expect from WINCO should you need service assistance in the future.

### TABLE OF CONTENTS

INTRODUCTION	i
GUIDE TO PRODUCT SAFETY	1
<b>BASIC INFORMATION</b>	2
Description	2
Specification Table	2
<b>PREPARING THE UNIT</b>	3
Unpacking the Unit	3
<b>ENGINE GENERATOR INSTALLATION</b>	3
Installation	3
Fuel Installation	4
Vapor Fuel Pressure Tables	5
Fuel Conversions	6
Lubrication	6
Battery Installation	6
Connecting Battery Charger	6
<b>TRANSFER SWITCH INSTALLATION</b>	6
AC Electrical Connections	7
DC Electrical Connections	8
<b>INITIAL START-UP</b>	8
<b>TROUBLESHOOTING INFORMATION</b>	9
Preventive Maintenance	10
<b>WIRING DIAGRAMS</b>	
Generator Schematic	11
120/240 Volt AC & DC Schematic	12
120/208 Volt AC & DC Schematic	13
277/480 Volt AC & DC Schematic	14
Generator Layout	15
<b>12 MONTH WARRANTY</b>	16
<b>MAINTENANCE LOG</b>	17

## PROPER USE AND INSTALLATION

You must be sure your new engine generator set is:

- \* Properly serviced before starting
- \* Operated in a well ventilated area
- \* Properly exhausted and gases safely dispersed
- \* Wired by a qualified electrician
- \* Operated only for its designed purposes
- \* Used only by operators who understand its operation
- \* Properly maintained

## COPY YOUR MODEL AND SERIAL NUMBER HERE

No other WINCO generator has the same serial number as yours. It is important that you record the number and other vital information here. If you should ever need to contact us on this unit it will help us to respond to your needs faster.

MODEL \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

PURCHASE DATE \_\_\_\_\_

DEALER \_\_\_\_\_

DEALER PHONE # \_\_\_\_\_

## SAFETY INFORMATION

This engine generator set has been designed and manufactured to allow safe, reliable performance. Poor maintenance, improper or careless use can result in potential deadly hazards; from electrical shock, exhaust gas asphyxiation, or fire. Please read all safety instructions carefully before installation or use. Keep these instructions handy for future reference. Take special note and follow all warnings on the unit labels and in the manuals.

## ANSI SAFETY DEFINITIONS

\*\*\*\*\*

### DANGER:

*DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.*

\*\*\*\*\*

\*\*\*\*\*

### WARNING:

*WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.*

\*\*\*\*\*

\*\*\*\*\*

### CAUTION:

*CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.*

\*\*\*\*\*

### NOTE:

*CAUTION is also used on the unit labels and in this manual to indicate a situation that could result in serious damage or destruction of the equipment and possible personal injury.*

**1. ELECTRIC SHOCK** - The output voltage present in this equipment can cause a fatal electric shock. This equipment must be operated by a responsible person.

- Do not allow anyone to operate the generator without proper instruction.
- Guard against electric shock.
- Avoid contact with live terminals or receptacles.
- Use extreme care if operating this unit in rain or snow.
- Use only three-prong grounded receptacles and extension cords.
- Be sure the unit is properly grounded to an external ground rod driven into the earth.

**2. FIRE HAZARD** - Natural gas and L.P. present a hazard of possible explosion and/or fire.

- Do not refuel when the engine is running or hot. Allow the engine to cool at least two minutes

before refueling.

- Keep fuel containers out of reach of children.
- Do not smoke or use open flame near the generator set or fuel tank.
- Keep a fire extinguisher nearby and know its proper use. Fire extinguishers rated ABC by NFPA are appropriate.
- Store fuel only in an approved container, and only in a well-ventilated area.
- Follow local codes for closeness to combustible material.

**3. DEADLY EXHAUST GAS** - Exhaust fumes from any gasoline engine contain carbon monoxide, an invisible, odorless and deadly gas that must be mixed with fresh air.

- Operate only in well ventilated areas.
- Never operate indoors.
- Never operate the unit in such a way as to allow exhaust gases to seep back into closed rooms (i.e. through windows, walls or floors).

**4. NOISE HAZARD** - Excessive noise is not only tiring, but continual exposure can lead to loss of hearing.

- Use hearing protection equipment when working around this equipment for long periods of time.
- Keep your neighbors in mind when permanently installing this equipment.

**5. CLEANLINESS** - Keep the generator and surrounding area clean.

- Remove all grease, ice, snow or materials that create slippery conditions around the unit.
- Remove any rags or other material that could create potential fire hazards.
- Carefully clean up any gas or oil spills before starting the unit.
- Never allow leaves or other flammable material to build up around the engine intake or exhaust area.

**6. SERVICING EQUIPMENT** - All service, including the installation or replacement of service parts, should be performed only by a qualified technician.

- Use only factory approved repair parts.
- Do not work on this equipment when fatigued.
- Never remove the protective guards, cover, or receptacle panels while the engine is running.
- Use extreme caution when working on electrical components. High output voltages from this equipment can cause serious injury or death.
- Always avoid hot mufflers, exhaust manifolds, and engine parts. They all can cause severe burns instantly.
- Installing a generator set is not a "do-it-yourself" project. Consult a qualified, licensed electrician or contractor. The installation must comply with all national, state, and local codes.

## TESTING POLICY:

Before any generator is shipped from the factory, it is fully checked for performance. The generator is loaded to its full capacity, and the voltage, current, and frequency are carefully checked.

Rated output of generators is based on engineering tests of typical units, and is subject to, and limited by, the temperature, altitude, fuel, and other conditions specified by the manufacturer of the applicable engines.

## INTRODUCTION AND DESCRIPTION

The package standby system includes all items necessary for a completely automatic standby power system as standard equipment.

## DESCRIPTION

This packaged standby system is designed to automatically provide standby power to unattended loads during electrical outages. Upon an interruption of normal electrical service the packaged standby system electrical control circuits will automatically start the engine. The generator will produce electrical power and the Automatic Transfer Switch (A.T.S.) will automatically transfer the electrical loads to the engine-generator set. Upon restoration of normal electrical service the emergency transfer switch will sense return of the normal commercial power. The Automatic Transfer Switch will retransfer the load back to the normal commercial power source. The engine control circuits will begin a cool-down cycle, after which the fuel supply will be shut off and the engine ignition system disabled.

These packaged standby systems consist of two major components:

### 1) AUTOMATIC TRANSFER SWITCH

A wall mounted Automatic Transfer Switch (A.T.S.) designed for inside installation. The NON-UL A.T.S. consists of a line side contactor and a generator side contactor. The contactors are both electrically and mechanically interlocked. A seven day electronic exerciser clock is installed in the A.T.S. as standard equipment. The A.T.S. also contains the power failure sensing circuitry necessary to send a start/stop signal to the engine generator set.

#### Automatic Transfer Switch Sizes (NON-UL)

UNIT	LINE SIDE CONTACTOR	GENERATOR SIDE CONTACTOR
PSS15B2W	230 AMPS	150 AMPS

#### UL Automatic Transfer Switch Sizes

UNIT	LINE SIDE CONTACTOR	GENERATOR SIDE CONTACTOR
PSS15B2W	100 AMPS	100 AMPS
	200 AMPS	200 AMPS

Both the 100 amps and the 200 amps UL Switches are available in single and three phase. **The UL A.T.S. have a 14 day electronic exerciser circuit.**

Additional optional A.T.S. sizes are available to meet specific needs. Contact your local WINCO dealer, or the WINCO Sales Department for a quote.

### 2) ENGINE/GENERATOR

The engine generator set consists of a Briggs & Stratton, twin cylinder, four cycle air cooled engine. The engine is factory equipped to run on L.P. or N.G. fuel. The engine operates at 3600 rpm and frequency regulation is maintained by the engine governor within 4 cycles variation (62.5 Hz - 58.5 Hz) from no load to rated load. The generator is a brushless, single bearing, direct drive, rotating field design. Voltage regulation is provided by an external voltage regulator mount on the generator, variation is +/- .5% steady state. The generator is connected to the engine's tapered (quill) crankshaft extension. The engine generator is mounted in a NEMA 3R enclosure for outside installation. Connection boxes are provided for all customer connections (both AC output and DC control). A customer supplied 500 CCA (BCI group 26) battery is required to complete the installation. Engine operation is controlled by an Electronic Engine Control Module (E.C.M.) mounted in the engine generator enclosure. The E.C.M. is equipped standard with a 10 second start delay, 90 second cool down delay and cycle cranking.

### COLD WEATHER OPERATION

**Extreme cold weather operation requires special considerations. Higher CCA batteries are required for cold weather starting, 650 CCA or larger are recommended. In addition you should consider installing an oil heater kit and a battery warmer for reliable starting during cold weather.**

#### \*\* NOTICE \*\*

*This unit will automatically transfer if a power outage occurs while running in an exercise mode.*

## SPECIFICATIONS

### GENERATOR

MODEL	WATTS*	VOLTS	AMPS*	HZ	PH	RPM
PSS15B2W-4	15,000	120/208	52.1	60	.8	3600
PSS15B2W-17	15,000	120/240	45.2	60	.8	3600
PSS15B2W-18	15,000	277/480	22.6	60	.8	3600

\*Derate 16% for Natural Gas operation. Derate 3.5% per 1000 feet elevation above sea level.

## FUEL CONSUMPTION

	NG		L.P. VAPOR		
	1000 BTU/CU FT		2520 BTU/CUFT		
MODEL	CF/HR	BTU/HR	#/HR*	GAL/HR	CF/HR BTU/HR*
<b>PSS15B2W</b>	260	260,000	12.7	2.96	108 272,160

\*Based on full load operation

## L.P. TANK SIZING

Required L.P. Tank size for L.P. Vapor withdrawal operating at various outside temperatures given in degrees Fahrenheit (Celsius)

### TANK TEMPERATURE

MODEL	60 f(16 c)	32 f(0 c)	0 f(-18 c)	-20 f(-29 c)
<b>PSS15B2W</b>	150 Gal.	250 Gal.	500 Gal.	1000 Gal.

## ENGINE SPECIFICATIONS:

Refer to engine operating and maintenance instructions.

### \*\* NOTICE \*\*

*Regarding Engines - This manual covers the generator portion of these units. See the separate engine instruction manual for engine-related problems, detailed engine information and engine warranty.*

### \*\* CAUTION \*\*

*Be sure to check the engine oil level frequently, as specified in the engine manual.*

The engine manufacturer has established an excellent worldwide engine service organization; engine service is available from a nearby authorized dealer or distributor; check the yellow pages of the telephone directory under "engines," or ask the dealer from whom you purchased the power plant.

The rated power of each engine-generator is limited by the temperature, altitude and all other ambient conditions specified by the engine manufacturer. Engine power will decrease 3-1/2% for each 1000 ft. above sea level, and will decrease an additional 1% for each 10 degrees Fahrenheit above 60 degrees Fahrenheit.

## UNPACKING INSTRUCTIONS

### \*\* NOTICE \*\*

*When unpacking the generator set, be sure to inspect it carefully for freight loss or damage. If loss or damage is noted at the time of delivery, require that the person making the delivery make note of the loss or damage on the freight bill, or affix his signature under the consignor's memo of the loss or damage. Contact the carrier for claim procedures.*

When loss or damage is noted after delivery, segregate the damaged material, and contact the carrier for claim procedures. Be sure to retain the packaging material for carrier inspection.

"Concealed Damage" is understood to mean damage to the contents of a package which is not evident at the time of delivery by the carrier, but which is discovered later. The carrier or carriers are responsible for merchandise lost or damaged in transit. The title to goods rests with the consignee when generators are shipped F.O.B. factory, and only the consignee can legally file a claim. Please note, most carriers have a time limit for filing concealed damage claims.

### \*\*\*\* CAUTION \*\*\*\*

*These units are shipped with oil. Be sure to check oil levels before operating. See engine manufacturer's instruction manual for recommended oil requirements before initial starting.*

## UNPACKING:

1. Carefully remove the carton.
2. After inspecting the engine-generator and transfer switch for external physical damage, check for the following items packed inside the carton.
  - a. Owner's manual, wiring diagram and parts list.
  - b. Engine manufacturer's instruction manual.
3. Remove main frame hold down bolts, (4).
4. Unit can now be lifted from shipping pallet.

## INSTALLATION

### General Information

\*\*\*\*\*

### \*\*\*\* WARNING \*\*\*\*

\*\*\*\*\*

*Before proceeding with the installation, be sure the operation selector switch is in the stop position.*

**These engine/generator sets are designed to be mounted on a concrete pad outdoors only.** The transfer switch is mounted next to your electrical entrance or distribution panel inside the building. Consult a qualified, licensed electrician or contractor to install and wire the transfer switch. The installation must comply with all national, state and local codes.

Before beginning the installation process recheck the rating of the generator set and its transfer switch rating. Be certain they can handle the intended load and are compatible with the entrance voltage, phase and current ratings. Plans for installation should be prepared with proper attention to mechanical and electrical engineering detail to assure a satisfactory system installation. The information in this manual is offered only as a guide to finalizing your installation plans.

## ENGINE GENERATOR SET MOUNTING

The unit's main frame should be bolted solid to a four to six inch thick cement pad. The engine-generator is mounted on a sub-frame which is isolated with special shock mounts on the main frame. This allows the engine-generator to vibrate without affecting the control panel on the main frame.


Do not install any shock mounts between the base frame and the concrete pad. Engine vibration will be transmitted to the control panel causing erroneous start/stop cycles and premature control failure.

The unit should be mounted to allow for ample working room around it. A general rule to follow is three (3) feet clearance on all sides. NFPA 37 requires at least 5 feet clearance from any structures having combustible adjacent walls and 5 feet from openings in walls. Particular attention should be paid to the direction of the hot air discharge and exhaust discharge. Unit location should be such that these discharges are not allowed to be drawn back in through an open window or door.

## FUEL INSTALLATION

The fuel supply should be as close as possible to the engine. This will reduce the installation cost of fuel runs. The information in this manual is offered to assist you in providing the proper fuel for your engine. However, this information is only provided to inform you of the engine's requirements and assist in making you aware of the decisions you must make. In no case should the instructions or information provided be interpreted to conflict with any local, state or national codes. If in doubt, always consult your local fire marshal or gas supplier.

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*

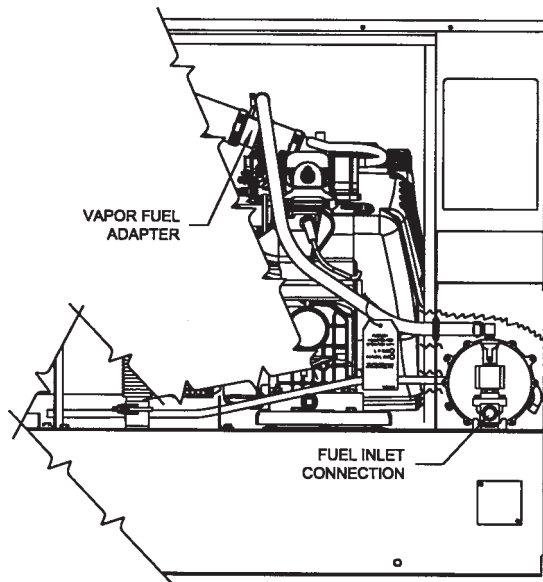

**FIRE HAZARD** - All fuel runs should be installed by a licensed fuel supplier.

To connect the fuel line, locate the 3/4 inch NPT fuel inlet fitting on the side of the enclosure. This inlet is shipped with a plastic cap plug installed to insure the fuel system stays clean.

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*

**FIRE HAZARD** - DO NOT OVERTIGHTEN THE FUEL LINE. THIS IS A TAPERED FITTING, OVERTIGHTENING WILL CAUSE THE FITTING TO CRACK AND LEAK FUEL.

For all vapor fuel systems the delivery pressure of the fuel to the fuel solenoid on the unit must be four to six ounces psi (per square inch) or 7 to 11 inches W.C. (Water column). These fuel pressures are critical; failure to provide the proper fuel pressure can cause many problems ranging from a unit that will not start to causing damage to the fuel system.

## INSTALLING THE FUEL LINE

\*\* **NOTICE** \*\*

The engine generator sets are properly adjusted before they leave the factory. A tag is attached to the unit that specifies the fuel, natural gas (NG) or propane vapor (LP) that the unit was set up and tested on.

### Line Size

Unit location will determine the size of fuel line that is required to supply the engine with a constant fuel pressure and volume. Refer to the tables below for fuel line size, fuel consumption and recommended tank size. For distances of 50 feet and over, a two regulator fuel system is recommended. This is accomplished by installing a primary regulator at the tank which will reduce the tank pressure down to 10 to 15 lbs. A secondary regulator is installed to further reduce the fuel pressure to the required four (4) to six (6) oz operating pressure. This secondary regulator must be at least 10 feet from the engine generator set, any closer installation will require a larger line be installed to provide a fuel reservoir. This is also true for the single dual stage regulators, it should also be minimum of 10 feet from the unit. If this is not done the demand regulator on the unit and the pressure regulator in the fuel line will interfere with each other.

When the two (2) stage regulator system is used, a fuel line size of 1/2 to 5/8 inch is generally adequate for distances up to 300 feet from the primary to the secondary regulator. (Consult your local fuel supplier for your exact requirements.) The appropriate line size from the table below is then installed from the secondary regulator to the generator set.

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*



## LP/NG FUEL CONVERSION

The PSS15B2W-XX/A generator systems have been tested on **NATURAL GAS** prior to shipment. If you are going to use them on **LP vapor**, follow the procedures outlined below to change the fuel type.

1. Connect your LP supply to the unit, making sure that you have the correct fuel pressure.
2. Locate the vapor fuel adapter mounted between the air filter and the carburetor body.
3. Using an end wrench loosen the locking ring on the adjustment screw.
4. Start the unit up and lean out the fuel to air mixture by turning the adjustment screw in (clockwise). Keep adjusting until the engine is running smooth. If you lean it out too far the engine will start to hunt in speed at no-load..
5. Check the unit to make sure it is still operating at the proper speed (61.5 to 62 Hz). If it is correct retighten the locking ring.
6. Test the unit under load to make sure it will work properly.

If it should become necessary to change back to NG from LP, just turn the adjustment out (counter clockwise) until the engine is running smooth.

## LUBRICATION

Before starting the engine, check the oil level and fill the crankcase with the proper weight/grade of oil, as recommended by the engine manufacturer's maintenance instructions. The necessity of using the correct oil, and keeping the crankcase full cannot be over emphasized.

## INSTALLING THE BATTERY

\*\*\*\* CAUTION \*\*\*\*

*In the following battery installation procedure, check to be sure the right hand toggle switch is in the disabled position and the left hand toggle switch in the off position. This should be your last step before initial start-up.*

A customer supplied twelve-volt battery is required to complete the installation. Installation of the highest CCA rated battery, within the correct BCI group, will increase cold weather starting performance. *Gel batteries should not be used* with the battery tender installed in the generator enclosure.

Model	BCI Group	MINIMUM CCA Rating
PSS15B2W	26	500*

\* 650 CCA Recommended for cold weather starting.

\*\*\*\*\*CAUTION\*\*\*\*\*

**EQUIPMENT DAMAGE** - Always connect the positive cable first and the negative cable last, when disconnect-

*ing, it is negative cable first and positive last. Failure to connect and disconnect in the proper sequence can cause equipment damage.*

Observe polarities: connect the positive (+) battery terminal to the (+) cable from the control panel; the negative (-) battery terminal is connected to the negative cable (ground) from the engine generator assembly.

All connections must be clean and tight. Check the electrolyte (fluid) in the battery periodically to be sure it is above the plates. Never allow the battery to remain in a discharged condition.

\*\*\*\*\*CAUTION\*\*\*\*\*

**EQUIPMENT DAMAGE - NEVER JUMP START** these units. *Doing so will destroy the engine control module rendering the unit non-operational. Remove and fully recharge the battery before attempting to start.*

## CONNECTING THE BATTERY CHARGER

A two-stage battery tender is provided on all PSS series generators. This battery tender charges at a rate of 750 mA until the battery is fully charged and then automatically switches to a 13.2 VDC float charger. The charger has an indicator light on it, red indicates it is charging, and green indicates it is in the storage mode (float charge). This charger is mounted on the engine generator set in the same location as the other AC and DC connections.

This battery tender requires a circuit breaker protected AC circuit from your distribution panel be run out to the engine generator set. These AC wires can be run in the same conduit as the other AC leads from the generator. It is suggested that this circuit be fused for 15 amps.

A 120 volt receptacle is mounted in the generator connection box. The receptacle is prewired with black, white and green leads attached to it, this is where you will connect your 120 volt fused power feed. This receptacle can also be used when installing the oil heater kit and the battery warmer.

\*\* NOTICE \*\*

*The battery tender is not intended to recharge a battery which has become completely discharged. It is designed to produce enough current to recharge a slightly low battery, maintaining it fully charged.*

## MOUNTING THE AUTOMATIC TRANSFER SWITCH (A.T.S.)

\*\*\*\*\*

\*\*\*\*\* WARNING \*\*\*\*\*

\*\*\*\*\*

**EQUIPMENT DAMAGE-** *Protect the switch from construction grit and metal chips to prevent a malfunction or shortened life of the switch. Contactors returned for warranty consideration with foreign material inside of them will not be warranted.*

The Automatic Transfer Switch connects the load (lights, furnace, outlets, etc.) to the normal power line during standby. When normal power fails, the A.T.S. starts the engine generator set, disconnects the power line and then connects the load to the standby generator set. When normal power is restored, the automatic switch retransfers the electrical load to the normal service and stops the engine. The A.T.S. panel should be mounted as close to the distribution panel as possible.

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*

*All wiring must be done by a licensed electrician, and must conform to the national electrical code and comply with all state and local codes and regulations. Check with your electrical inspectors before proceeding!*

\*\*\*\*\*  
\*\*\*\* **DANGER** \*\*\*\*  
\*\*\*\*\*

*Be certain the operation selector switch on the front of the A.T.S. Control is in the "stop" position and the main power switch "off". For your own protection, verify these important safety precautions yourself with reliable instruments before proceeding.*

## A.C. ELECTRICAL CONNECTIONS

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*

*A FUSED DISCONNECT OR CIRCUIT BREAKER MUST BE INSTALLED BETWEEN THE GENERATOR AND THE A.T.S. PANEL TO PREVENT OVERLOADING AND BURNING OUT THE GENERATOR. FAILURE TO PROVIDE A FUSED DISCONNECT OR CIRCUIT BREAKER, RATED AT GENERATOR RATING WILL VOID YOUR WARRANTY IN CASE OF GENERATOR FAILURE.*

### Generator Connections

To gain access to the customer connections, remove the end panel opposite the hot air discharge end. All connections including AC & DC connections to the ATS, 120 Volt power connection for battery charger, and battery installation are made behind this panel. After removing the end panel you will need to remove the cover over the connection box in the upper right hand corner. Knockouts are provided on the outside of the enclosure for your convenience. See page 15 for unit layout.

Five AC power leads are required between the generator and the A.T.S. Three hot leads are connected generator leads G1, G2 and G3, a neutral lead connected to generator lead N. A ground wire is also required, which is connected to the ground lug mounting bolt. **These units are shipped with no neutral to ground bond.** You will need to run both the neutral and ground leads in addition to the three power leads all the way back to your distribution panel. Your distribution panel should contain your only neutral to ground bond.

All power leads from the generator to the A.T.S. must be sized to handle rated generator output amperage at a minimum, the type of wire you use will determine the gauge required. Consult your local wire supplier for proper gauge and type for your installation.

In addition to the power leads you will also need to run a three wire 120 volt, 15 amp GFCI protected circuit from your distribution panel to the generator. This circuit will be used to power the battery charger.

The last two wires you will need are the DC control leads for the start circuit in the A.T.S. These last two connections will be discussed later in more detail.

## AUTOMATIC TRANSFERS SWITCH CONNECTIONS

See the manual shipped with the Automatic Transfer switch for connection locations in the switch. Connections in each switch will vary depending on the type of switch and the manufacturer.

## INSTALLATION NOTES

The load current carrying wires must be sized to handle the maximum load current without excessive voltage drop. By code, the wire must be heavy enough to handle the full current rating of the main line circuit-breaker (or fuse) in the entrance (or sub-panel) protecting the contactor switch.

All wires should be installed in rigid or flexible conduit. (Knockouts are provided in the control box)

Because of the many different types of service, feeder, and distribution equipment, no specific wiring instructions can be provided. It is, however, recommended that only copper wire be used. In all cases it is essential that while the load is connected to the generator, there can be absolutely no feedback from the generator to the power line or the power line to the generator. When properly installed, the normal A.T.S. control and safety systems will eliminate all paths for feedback. Check with your local electrical inspector on applicable local, state and federal codes.

\*\*\*\*\*  
\*\*\*\* **WARNING** \*\*\*\*  
\*\*\*\*\*

*A service disconnect must be installed in front of the A.T.S. panel as the A.T.S. is not service entrance rated. This will allow you to test the generator under load. Should you ever have to work on the switch, you will be able to disconnect the power and work on the switch cold without having the power company pull your meter.*

To wire the automatic transfer switch into the existing wiring, first determine which circuits will be on the emergency load circuit. If the entire load is to be transferred, the transfer switch can be wired in directly after the watt-hour meter and the service entrance, providing the service entrance ampere rating is within the transfer switch's rated capability.

If only specific circuits are to be powered under emergency power failure conditions, an additional distribution panel designated "emergency distribution panel" must be installed.

All selected emergency circuits are removed from main distribution panels and reinstalled in the emergency distribution panel. Suggested circuits: freezer, refrigerator, furnace, emergency lights, sump pump, emergency outlet circuits, etc. Total running load must not exceed generator rating.

### D.C. ELECTRICAL INTERCONNECTION

\*\*\*\*\*CAUTION\*\*\*\*\*

Never run the AC and DC wiring in the same conduit.

### WINCO NON-UL ATS


Two control wires are required to be installed between the A.T.S. panel and the generator control terminal box. Depending on the distance 14 to 16 gauge stranded wire should be used. These wires will be labeled "Bat -", and "Start".

The control wires will be connected as follows in the ATS and the generator control terminal box:

ATS Panel	Generator Control Panel
Start 1	to Wire # S1, (Bat Neg)
Start 23	to Wire # S23 (Start)


### WINCO UL ATS

Your DC connection points in the UL ATS are marked "X1" and "X2" in the lower right hand corner of the control board. The wire labeled "S1" is routed to start contact "X1" and the wire labeled "S23" is routed to start contact "X2"

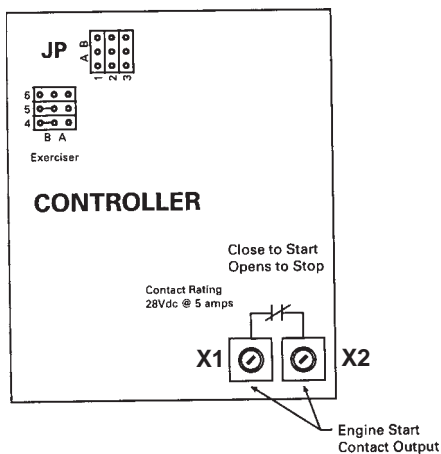


### ASCO 300 UL SWITCH

Your DC connection points in the ASCO UL ATS are terminals "14" and "15". Depending on the size of the switch they are located in different locations. See below

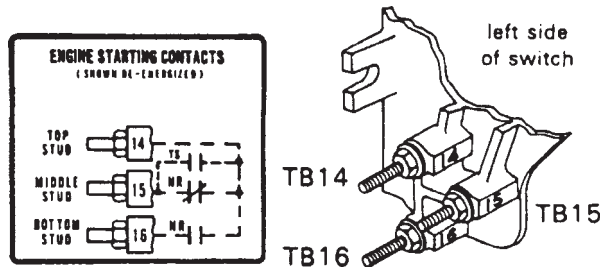

Engine starting contact label and location for 30 - 200 amp switches.

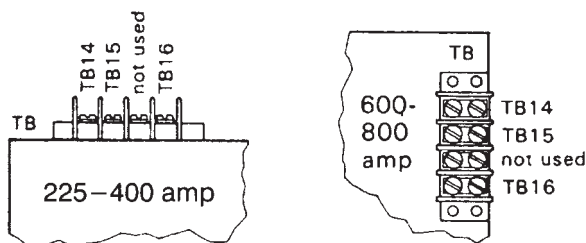

### INITIAL START UP

\*\*\*\*\*  
 \*\*\*\*\* WARNING \*\*\*\*\*  
 \*\*\*\*\*

DO NOT jump start these engine generator sets. Starting these units on a low battery or jump starting them will cause damage to the engine control module.

Use the following check list to verify correct installation before starting the engine:

- Engine oil.\* Check level & fill as required with proper grade/qty.
- Unit mounting base properly bolted down.
- Clearance for service and maintenance on all sides.
- Proper fuel line material, and size.
- All fuel line connections tight.
- Fuel line protected and a moisture trap installed (may be required for N.G.).
- LP/NG pressure O.K. 4-6 Oz. (7-11" WC).
- Battery connections clean and tight.
- Battery fully charged.
- All A.C. and D.C. wiring installed and properly protected.

\* Refer to engine owners manual for proper levels and type.

After completing the above checklist, the engine-generator set is ready for the initial start-up test.

## PROCEDURE

### Engine Generator Set only

Move the selector switch on the engine generator to the "RUN" position. The engine-generator will crank and start automatically. If the engine fails to start, return selector switch to the "stop" position and correct the trouble before proceeding.

With the engine running smoothly, check the no load voltage and frequency at terminals G1, G2 and G3 on the generator terminal block in the A.T.S. The frequency should be between 61.5 to 62 hertz (Hz). The voltage should also be checked between the hot terminals (G1, G2 and G3) and the G-N to be certain of a balanced voltage output and a solid neutral connection. Your actual voltage reading will depend on what voltage generator you have ordered. Check the generator name plate for correct voltage if you are uncertain.

#### **\*\* Notice \*\***

*If for any reason during the check out procedure the voltage and frequency are not correct, turn the selector switch to the "STOP" position and correct the trouble before proceeding.*

After verifying the voltage and frequency are correct, turn the selector switch to the "STOP" position. The unit should shut off with no time delay. You are now ready to test the automatic start function.

Move the toggle switch to the "AUTO" position and follow the instructions in the manual you received with the transfer switch for initial start up and testing. Each of the transfer switches has a different procedure. Remember the unit will go into a short time delay before starting after it receives the start signal from the transfer switch.

If it fails to start at this time, check your DC interconnection wiring. As long as line power is still applied to the transfer switch during this test period the A.T.S. will not transfer the load to the generator. As remember that there is a 90 second cooldown delay built into the engine control, so the unit will run during this period after the A.T.S. tell it to stop.

Next you need to test the complete system. To accomplish this you will have to fail the incoming line power to the A.T.S. panel. All the loads connected to the A.T.S. should now be dead. The system will go into a start delay, this start delay will vary depending on the transfer switch you have installed. The engine control on the generator set will give you a 10 second start delay in addition to what every delay in in you transfer switch. At the end of the start delay the unit will start up. Once the engine generator set reaches operating speed the transfer switch will transfer the load to the engine generator.

Restoring the line power will allow the transfer switch to return the load to line power. Different transfer switches may have different retansfer time delay setting.

The restoration of line power also sends a stop signal to the engine generator set. This stop signal will activate a cool down timer circuit. The engine generator will shut down 90 seconds later.

This completes your installation and unit testing. ALWAYS leave the system in automatic mode unless servicing the unit. For automatic operation, keep the generator set and transfer switch selector switch (if you have one) in the "AUTOMATIC" position.

## TROUBLESHOOTING TABLES

\*\*\*\*\*

\*\*\*\*\* **WARNING** \*\*\*\*\*

\*\*\*\*\*

***NEVER JUMP START THESE UNITS. JUMP STARTING THESE UNITS WITH LOW OR BAD BATTERIES WILL CAUSE PERMANENT DAMAGE TO THE ENGINE CONTROL MODULE.***

### **UNIT WILL NOT CRANK WHEN THE POWER FAILS.**

1. Generator control switch not in "AUTO" position.
2. Low or dead battery, must hold 12 volts during cranking.
3. Incorrect wiring between transfer switch and generator.
4. Circuit breaker tripped on engine control.
5. Loose or dirty battery terminals.
6. Defective starter.
7. Defective start solenoid.
8. Defective start/stop control in the transfer switch.
9. ATS panel in fault from previous run cycle.
10. Blown 3/4 amp fuse on generator control panel.

### **ENGINE WILL NOT CRANK WITH GENERATOR SELECTOR SWITCH IN THE START POSITION.**

1. Low or dead battery, must hold 12 volts during cranking.
2. DC circuit breaker on control module tripped.
3. Blown 3/4 amp fuse on generator control panel.
4. Loose or dirty battery terminals.
5. Defective "OFF/RUN/START" switch.
6. Defective starter.
7. Defective start solenoid.
8. Locked up engine generator set.

### **ENGINE CRANKS BUT WILL NOT START.**

1. Improper fuel pressure being delivered to unit.
2. Fuel supply shut off.
3. Fuel tank empty.
4. Defective spark plug.
5. Defective engine ignition module.
6. Dirty air cleaner filter.
7. Defective fuel solenoid valve.
8. Low voltage from battery to fuel solenoid, must hold 12 volts during cranking.

### **ENGINE STARTS AND THEN STOPS.**

1. Engine is low on oil.
2. Faulty oil pressure switch on engine.

### **ENGINE WILL NOT COME UP TO SPEED AFTER IT STARTS.**

1. Insufficient fuel volume getting to the unit.
  - a. Fuel line too small.
  - b. Low fuel pressure.
2. AC short circuit.
3. Wiring to the A.T.S. panel crossed or shorted.
4. Unit is overloaded, check load amperage.

### **ATS PANEL WILL NOT TRANSFER TO EMERGENCY SUPPLY (GENERATOR).**

1. No AC generator output from generator.
2. Wiring error between generator set and transfer switch.
3. See ASCO manual for ATS troubleshooting.
4. Phase rotation is not correct.

### **ATS PANEL WILL NOT PULL IN ON NORMAL POWER.**

1. Proper normal line power not available at line terminals in ATS panel.
2. See ASCO manual for ATS troubleshooting.
3. Phase Rotation is not correct

### **NO AC OUTPUT FROM GENERATOR.**

1. Diodes on rotor blown.
2. Defective Automatic Voltage Regulator.
3. Defective rotor.
4. Defective stator.
5. AC short in the output leads.
6. Unit has lost its residual voltage.
7. Rotor loose on engine crankshaft.
8. Low engine speed, must be 3600 RPM.
9. AC short on output leads.

## **PREVENTIVE MAINTENANCE**

Reasonable care in preventive maintenance will insure high reliability and a long life for the engine generator set and the Automatic Transfer Switch.

\*\*\*\*\*  
\*\*\*\*\* WARNING \*\*\*\*\*  
\*\*\*\*\*

*When performing any type of maintenance on this equipment make sure the selector switch on the engine generator is in the off position. If you are working in the Automatic Transfer Switch, confirm with a reliable meter that all power has been disconnected.*

## **AUTOMATIC TRANSFER SWITCH**

Clean and inspect the switch once a year. De-energize all power sources, both line and engine generator set, then brush and vacuum away any excessive dust and dirty accumulation. You can at this time with the contactor de-energized remove the contactor covers and check the contacts. Make sure the contacts are clean and not burned or pitted.


## **ENGINE GENERATOR SET**

Service the engine in accordance with the engine manufacturers manual provided with your new equipment. Routinely remove debris and dirt from around and inside generator enclosure. Insure that the air intakes are free from leaves and other debris at all times.

Clean and inspect battery terminals at least twice a year. Check the battery water level at least twice a year also.


Other than keeping the generator clean and free of debris there is no other routine or preventive maintenance required, as long as the generator is run once a week to keep it dry and in good working order.

# TWELVE LEAD GENERATOR END SCHEMATIC WITH VOLTAGE REGULATOR

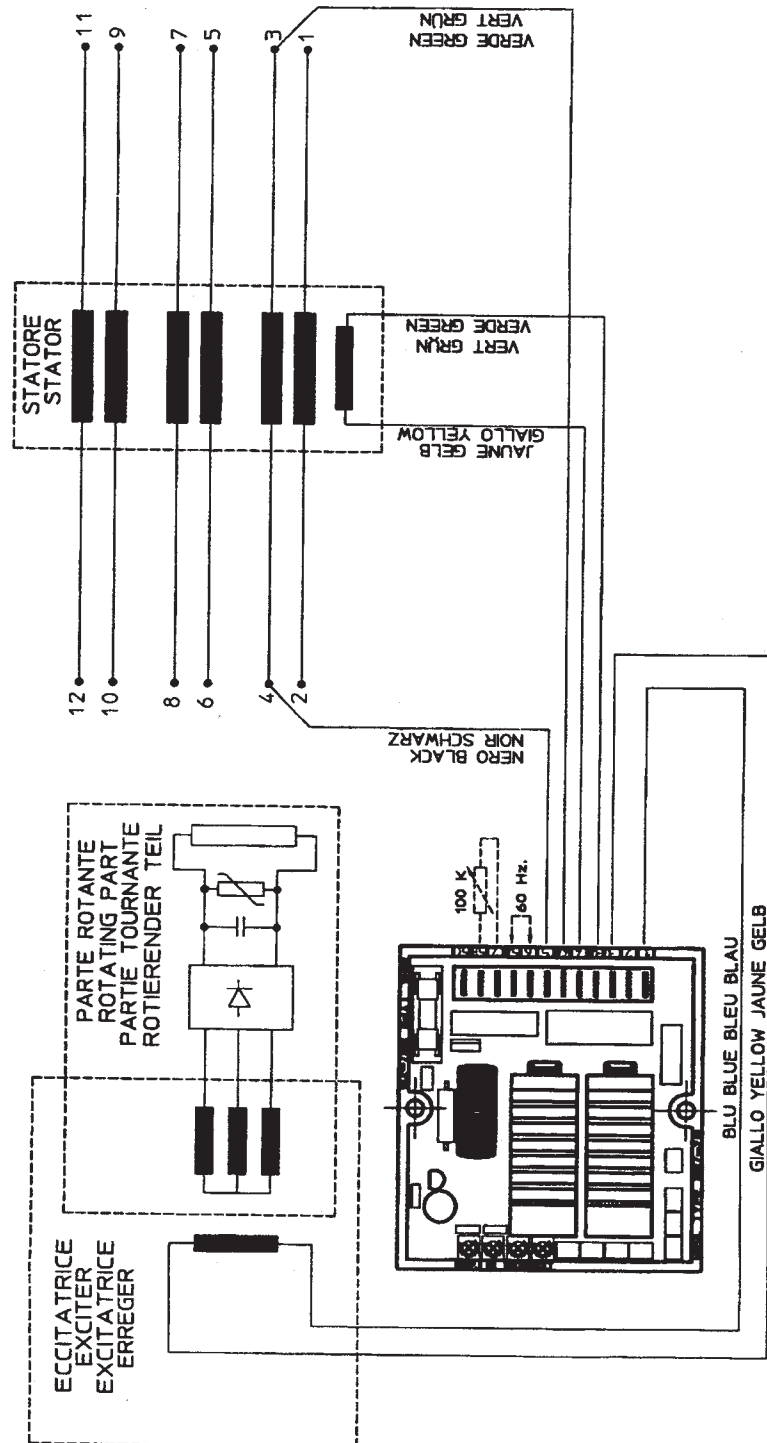




# AC AND DC GENERATOR SCHEMATIC 120/208 VOLT THREE PHASE

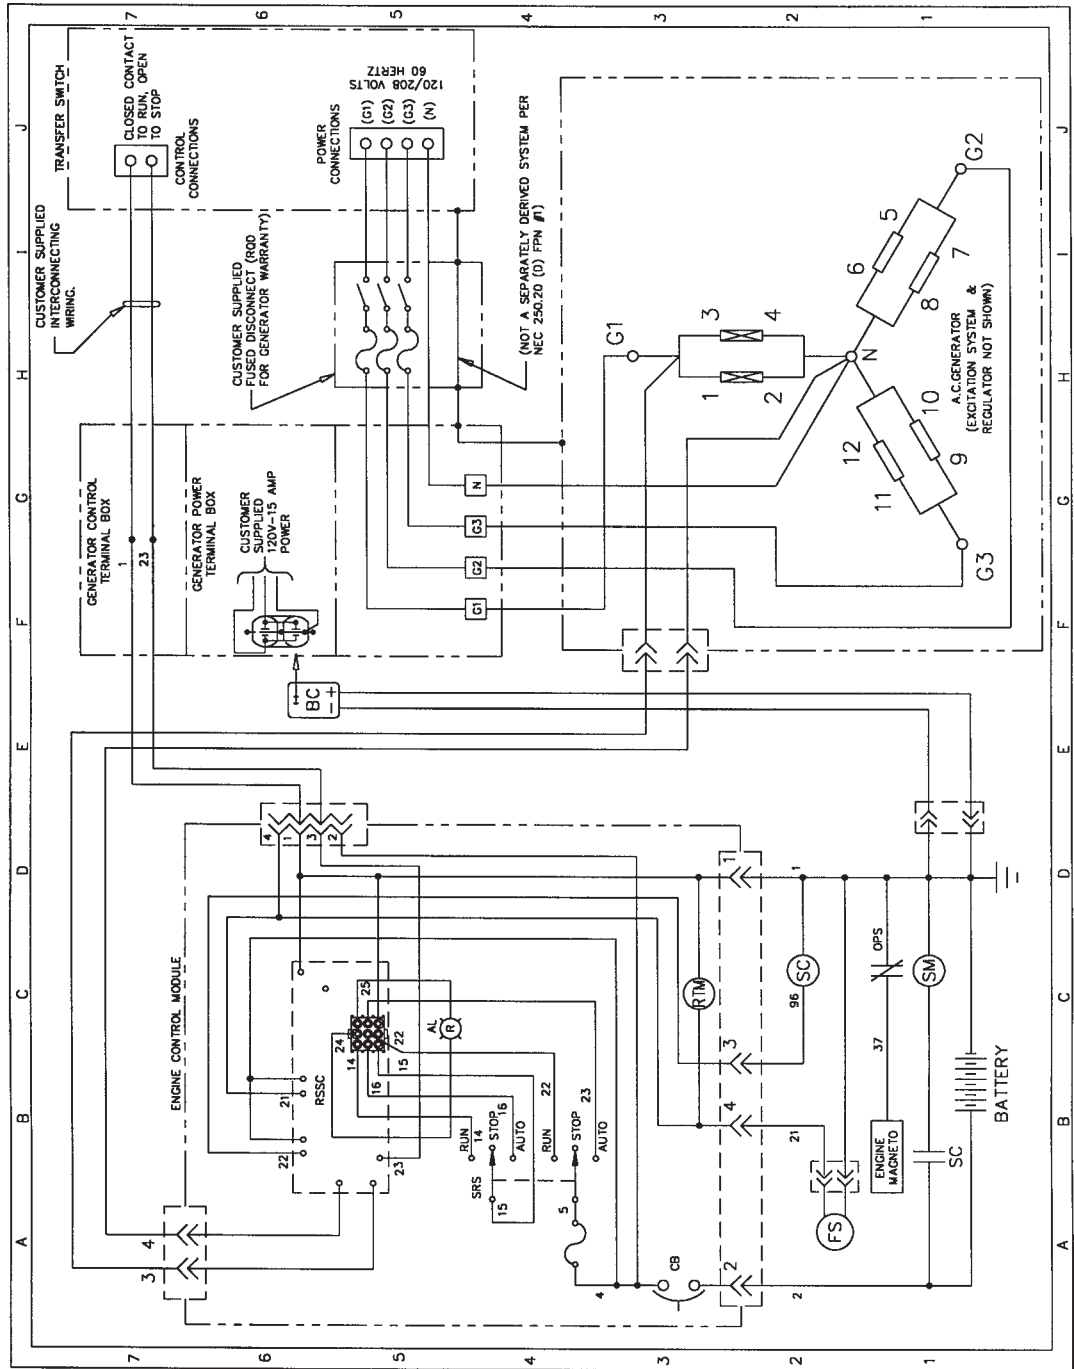

## LEGEND

AL	ALARM LAMP (FAILURE TO START)
BC	BATTERY FLOAT CHARGER
CB	CIRCUIT BREAKER
FS	FUEL SOLENOID
G1, G2, G3 & N	GENERATOR LEAD IDENTIFICATION
GEN	GENERATOR
N	NEUTRAL
RSSC	REMOTE START STOP CONTROL MODULE
RTM	RUNNING TIME METER
SC	STARTER MOTOR CONTACTOR
SM	STARTER MOTOR


# AC AND DC GENERATOR SCHEMATIC 277/480 VOLT THREE PHASE

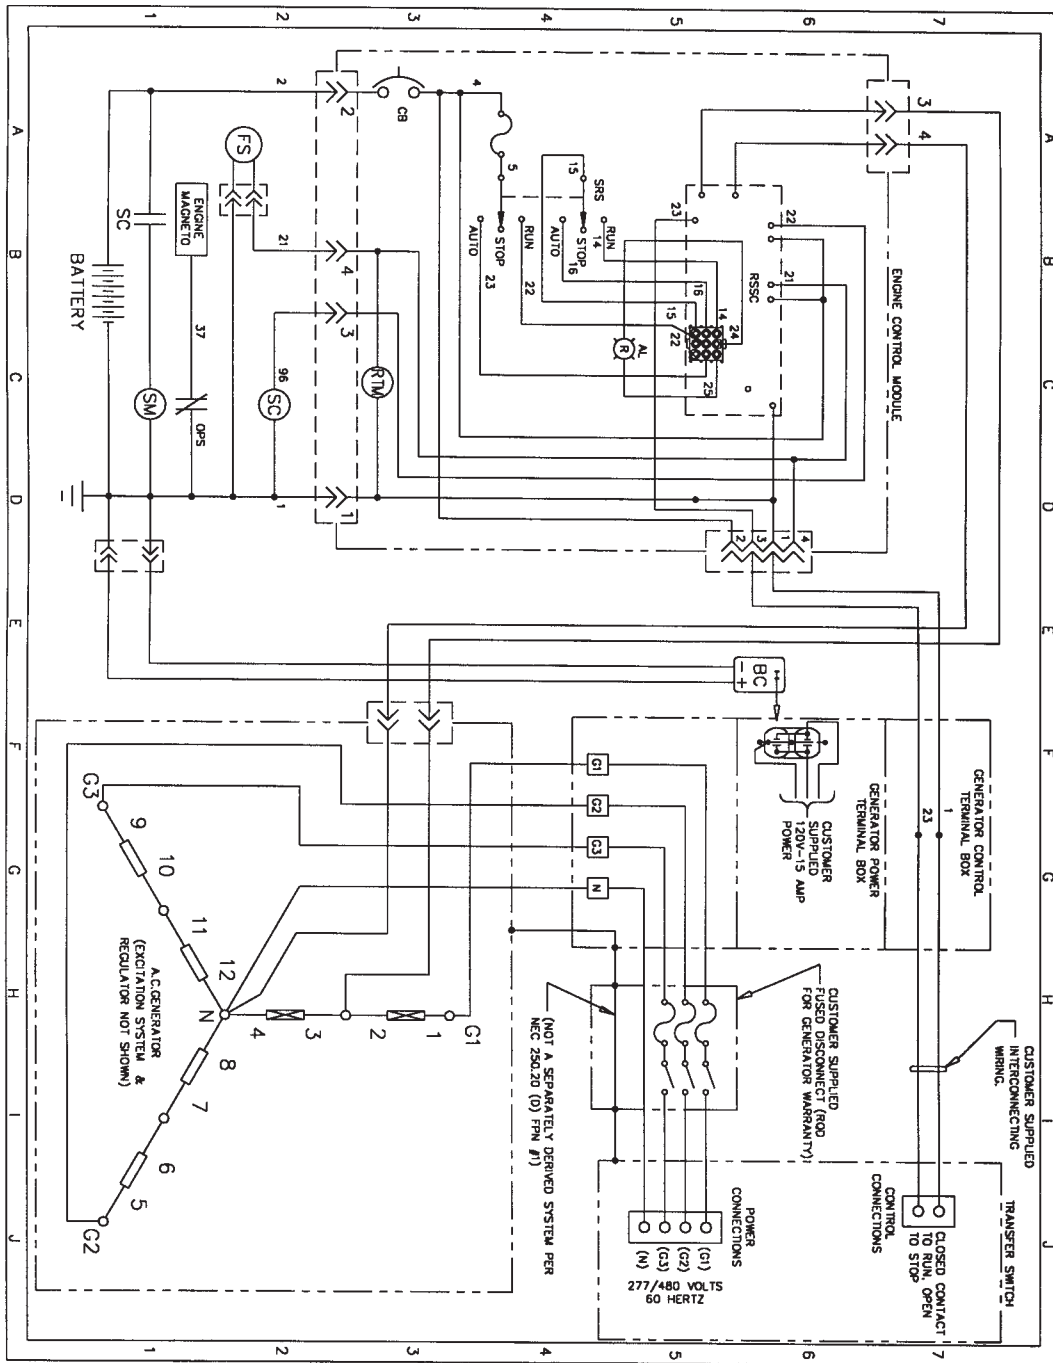

## LEGEND

AL	ALARM LAMP (FAILURE TO START)
BC	BATTERY FLOAT CHARGER
CB	CIRCUIT BREAKER
FS	FUEL SOLENOID
G1, G2, G3 & N	GENERATOR LEAD IDENTIFICATION
GEN	GENERATOR
N	NEUTRAL
RSSC	REMOTE START STOP CONTROL MODULE
RTM	RUNNING TIME METER
SC	STARTER MOTOR CONTACTOR
SM	STARTER MOTOR

# GENERATOR LAYOUT

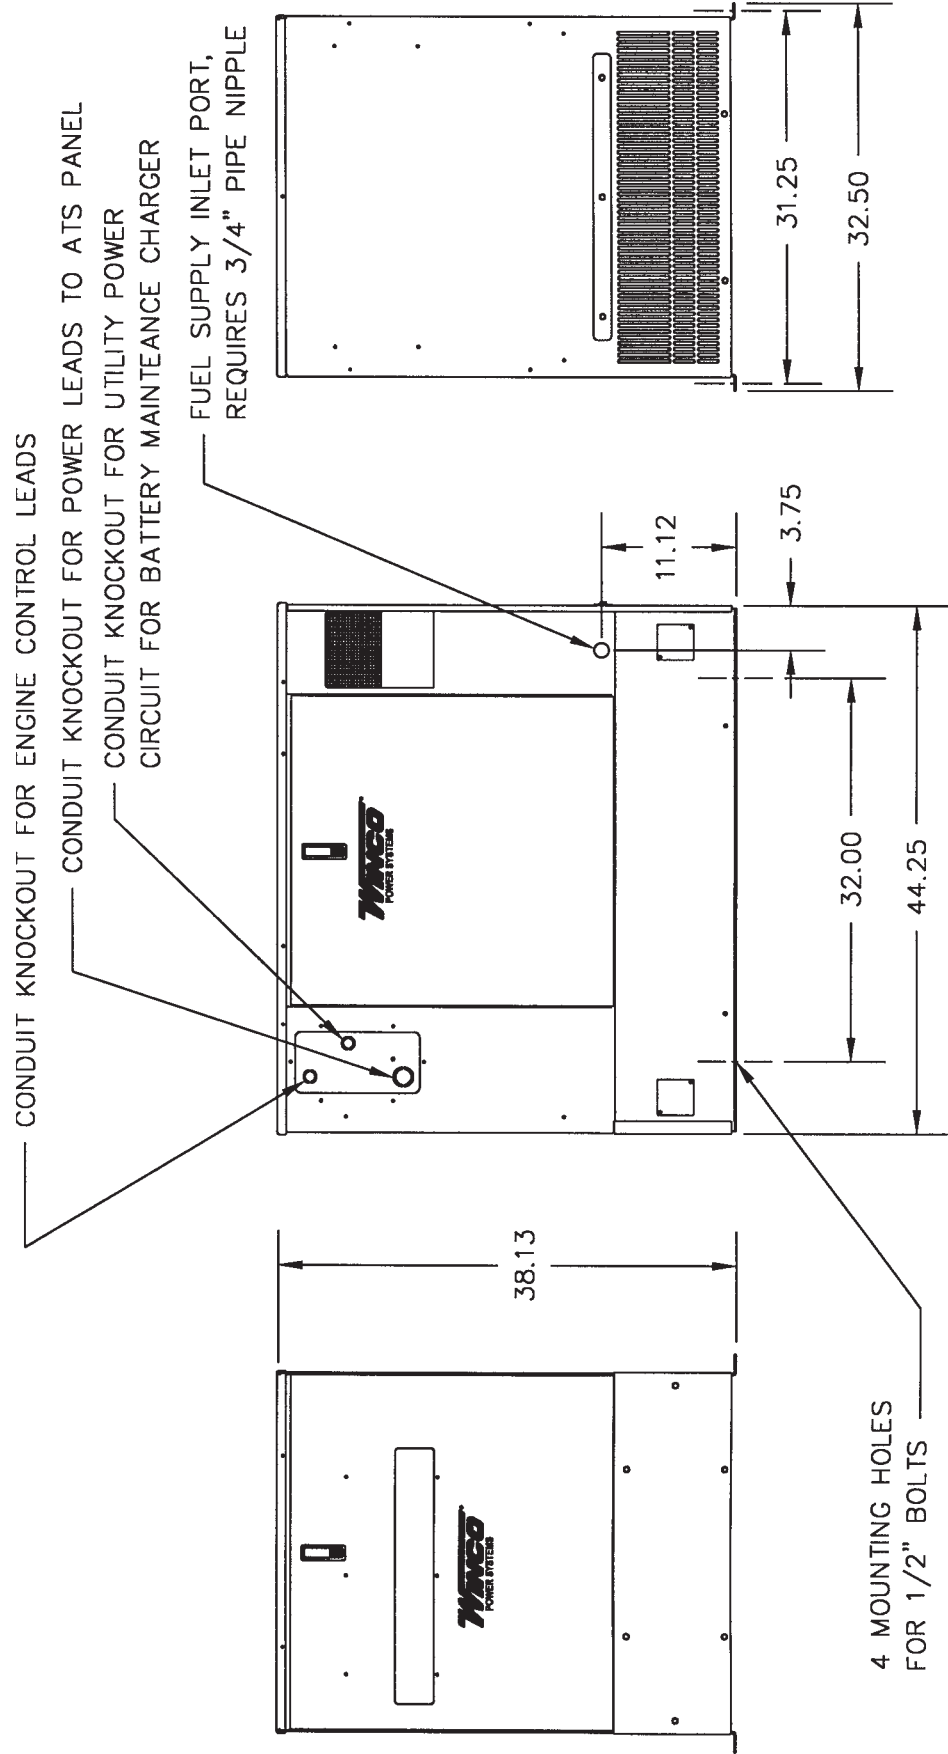

# **WINCO**® I N C O R P O R A T E D

WINCO, Incorporated warrants to the original purchaser for 12 months that goods manufactured or supplied by it will be free from defects in workmanship and material, provided such goods are installed, operated and maintained in accordance with Winco written instructions.

WINCO's sole liability, and Purchaser's sole remedy for a failure under this warranty, shall be limited to the repair of the product. At WINCO's option, material found to be defective in material or workmanship under normal use and service will be repaired or replaced. For warranty service, return the product within 12 months from the date of purchase, transportation charges prepaid, to your nearest WINCO Authorized Service Center or to WINCO, Inc. at Le Center Minnesota.

THERE IS NO OTHER EXPRESS WARRANTY.

To the extent permitted by law, any and all warranties, including those of merchantability and fitness for a particular purpose, are limited to 12 months from date of purchase. In no event is WINCO liable for incidental or consequential damages.

Note: Some states do not allow limitation on the duration of implied warranty and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply in every instance. This warranty gives you specific legal rights which may vary from state to state.

WINCO reserves the right to change or improve its products without incurring any obligations to make such changes or improvement on products purchased previously.

## EXCLUSIONS:

WINCO does not warrant Engines, Batteries, or Other Component Parts that are warranted by their respective manufacturers.

WINCO does not warrant modifications or alterations which were not made by WINCO, Inc.

WINCO does not warrant products which have been subjected to misuse and/or negligence or have been involved in an accident.

**WINCO**®  
I N C O R P O R A T E D  
225 SOUTH CORDOVA AVE  
LE CENTER MN 56057  
Phone: 507-357-6831

# MAINTENANCE LOG

DATE	ITEM	WORK PERFORMED

**P/N 60706-170  
4190-10**

***WINCO INC***<sup>®</sup>  
*A Division of **DT** Dyna Technology Inc*  
225 SOUTH CORDOVA AVE  
LE CENTER MN 56057  
Phone: 507-357-6831  
[www.wincogen.com](http://www.wincogen.com)