



NOTES:

1. DRAIN OIL FROM ENGINE.
2. REMOVE AND DISCARD OIL DRAIN PLUG FROM ENGINE STARTER SIDE.
3. INSTALL OIL HEATER, MAKE SURE THAT THERE IS A GASKET ON THE PROBE BEFORE INSERTING IT INTO OIL DRAIN HOLE, TIGHTEN SECURELY.
4. REMOVE COVER PLATE FROM ENGINE PARTITION AND USE SCREWS TO FASTEN HEATER CONTROL ASSEMBLY TO PARTITION AS SHOWN.
5. ROUTE HEATER CORD TO RECEPTACLE ON HEATER CONTROL AND SECURE EXCESS LENGTH TO EXISTING ENGINE LEADS WITH CABLE TIES, ITEM 4.
6. FILL ENGINE CRANKCASE WITH FRESH OIL, USE THE DIP STICK TO MAKE SURE THE OIL LEVEL IS PROPER, DO NOT OVER FILL.

5	100047-122	1	8 X 8 X 4 BOX
4	A-15809-103	1	INSTRUCTION SHEET
3	A-49975-011	1	CABLE TIE
2	A-15822-002	1	HEATER, OIL
1	B-300327-10	1	ASSEMBLY, HEATER CONTROL
ITEM	PART NO	QTY	DESCRIPTION

INSTRUCTION SHEET

ISSUE 1

A-15809-103