

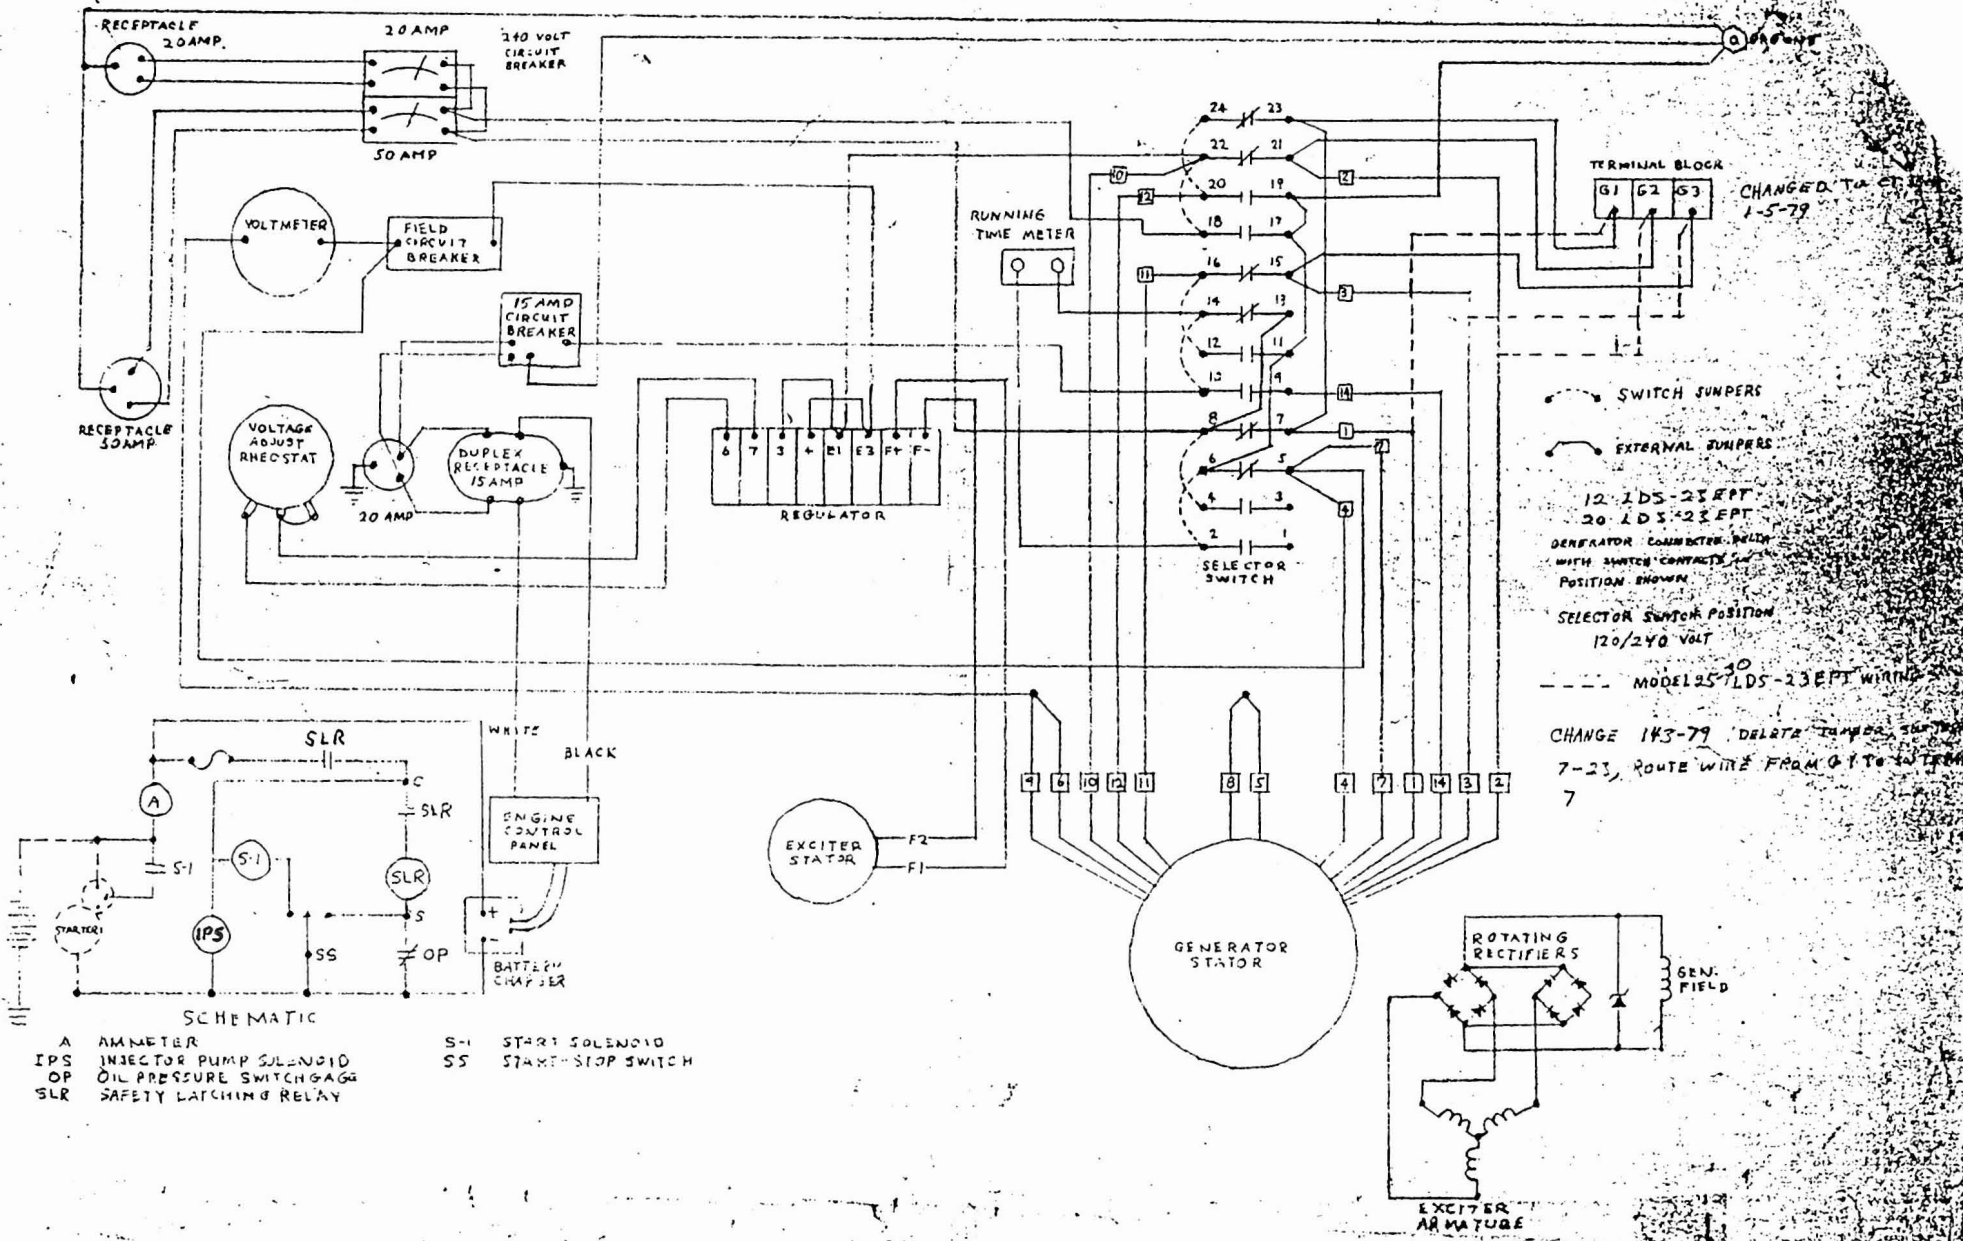


QTY	PART NUMBER	DESCRIPTION
1	58650	TRAILER
1	91606	TS 3 ENGINE LISTER
1	92134-4	CONTROL BOX ASSEMBLY
1	92296-8	ADAPTER PARTS
1	91413	ROTATING RECTIFIER ASSEMBLY
2	91452	RECTIFIER
1	91455	SURGE SUPPRESSOR
1	91337-2	FORMED COVER
1	91442	EXCITER ROTOR
1	91528	COMPLETE ROTOR ASSEMBLY
1	92151-1	STATOR ASSEMBLY COMPLETE
1	91665	EXCITER STATOR ASSEMBLY
1	91527-7	STATOR & BAR & RING
1	91667	STATOR
1	91562	BAR & RING
1	92378	START SOLENOID ASSEMBLY
1	91286	CIRCUIT BREAKER 15 AMP
1	81097-1	CIRCUIT BREAKER 40 AMP
1	91961	BATTERY CHARGER
1	81762-2	FIELD CIRCUIT BREAKER
1	81812-3	VOLTMETER
1	91694	AMMETER
1	58166-1	HOUR METER
1	91286-1	CIRCUIT BREAKER 20 AMP
1	91688	SAFETY LATCHING RELAY
1	91689	OIL PRESSURE GAUGE
1	24749	DUPLEX RECEPTACLE 115V 15 AMP
1	56279	RECEPTACLE HUBBELL 2310
1	56281	RECEPTACLE HUBBELL 2320
1	81111-1	VOLTAGE REGULATOR KR4FF BASLER
1	91889	RECEPTACLE 50 AMP
1	92692 91690-0	SELECTOR SWITCH <i>Switch</i>
1	81111-2	RHEOSTAT
1	80980	START SOLENOID ONLY
1	92982	START SOLENOID ASSEMBLY
2	92106-1	VIBRATION MOUNTS
2	92106-2	VIBRATION MOUNTS
1	91517	END BRACKET
1	92145	WELDED BOX ASSEMBLY
1	92097-1	HINGED COVER ASSEMBLY
1	91831-1	MUFFLER
1	53220-2	BATTERY CABLE ASSEMBLY

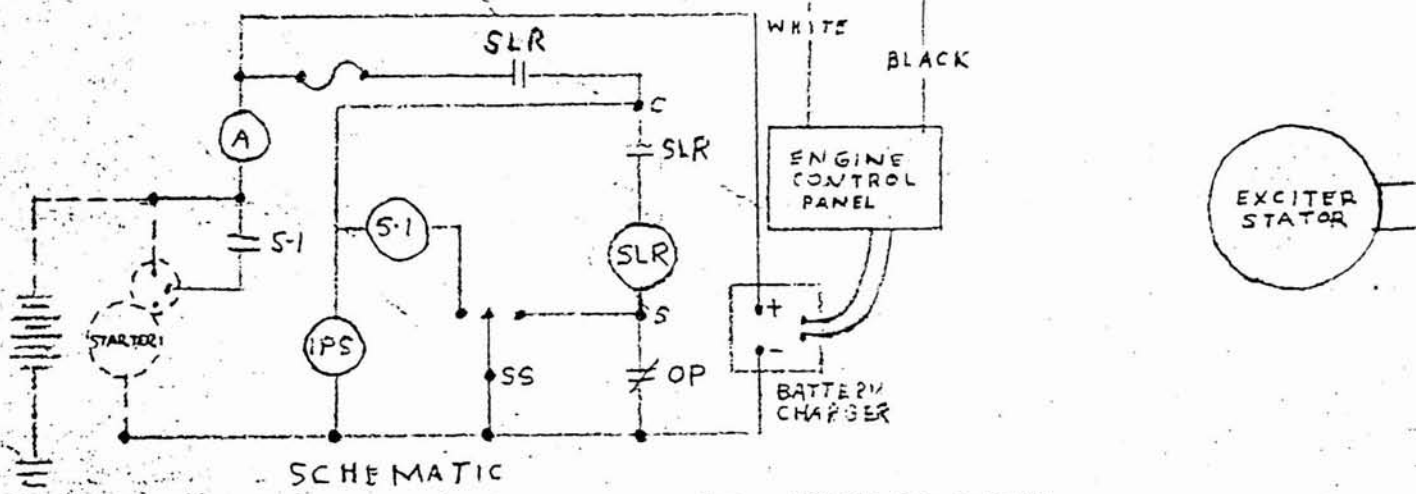

12PLDS / 25PLDS

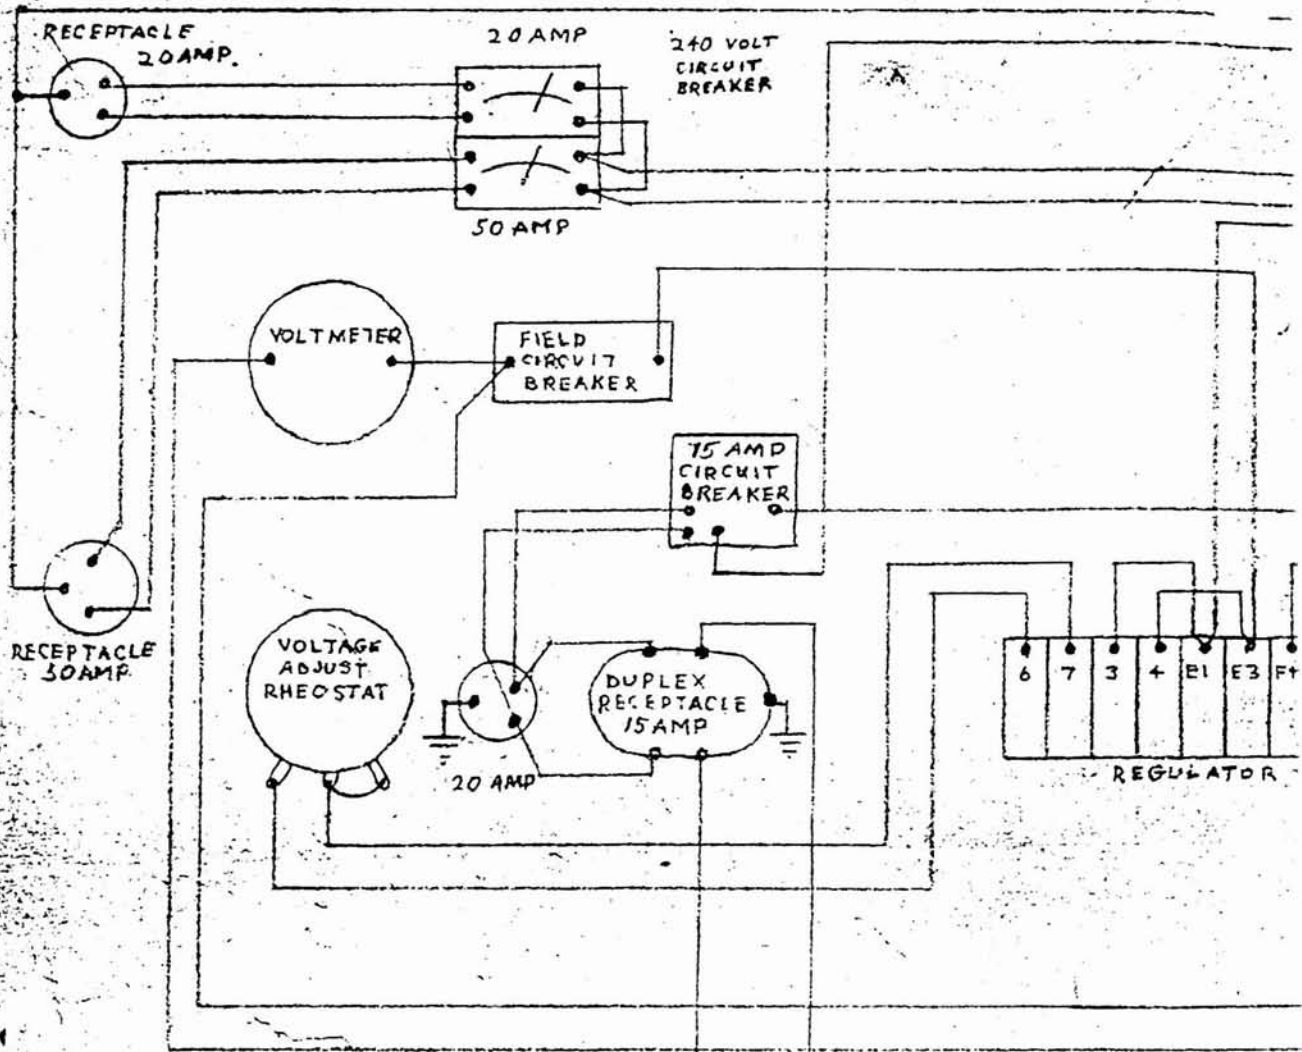

SCHMATIC

- | | | | |
|-----|--------------------------|-----|-------------------|
| A | AMMETER | S-1 | START SOLENOID |
| IPS | INJECTOR PUMP SOLENOID | SS | START-STOP SWITCH |
| OP | OIL PRESSURE SWITCH/GAGE | | |
| SLR | SAFETY LATCHING RELAY | | |