






# Engine

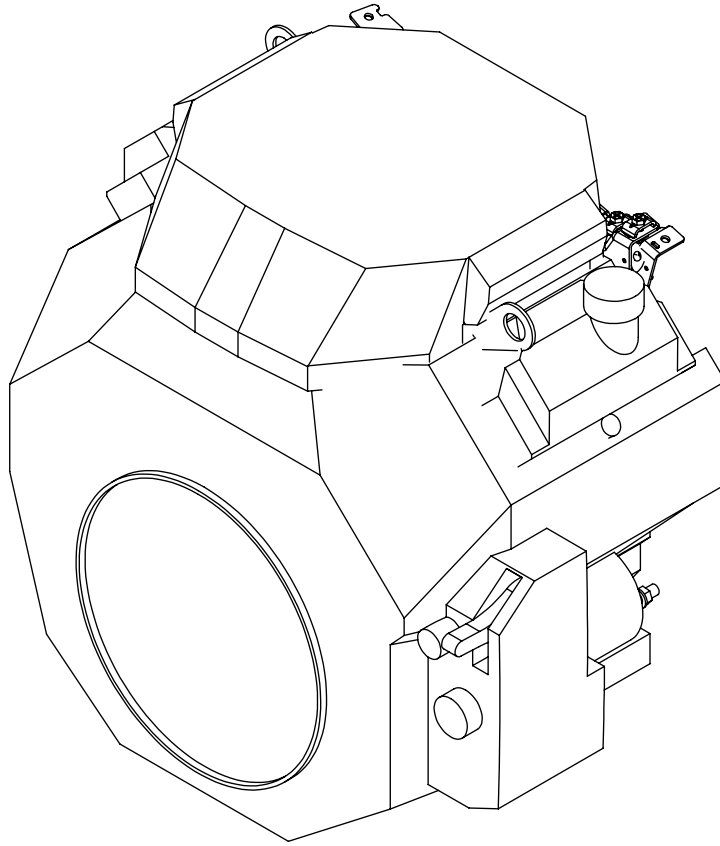

ITEM	PART	DESCRIPTION	QTY
1	1-114	Air filter	1
2	1-117	Fuel Filter	1
3	1-124	Fuel Pump	1
4	15959-108	Ignition Key	1
5	1-125	Key Switch Harness Assembly	1
6	16247-002G	Manifold Gasket	1
7	1-106	Oil Filter	1
8	1-115	Spark Plug	

Contact WINCO service or your Honda dealer for full engine part support.





















# Receptacle Panel Wiring Diagram

# Engine Wiring Diagram

Bl	Black	Br	Brown
Y	Yellow	O	Orange
Bu	Blue	Lb	Light blue
G	Green	Lg	Light green
R	Red	P	Pink
W	White	Gr	Grey

COMBINATION SWITCH

	IGN	GND	BAT	LO	ST
OFF					
ON	○—○		○—○		
ST	○—○		○—○	○—○	

