


WINPOWER

*A Division of **DTT** Dyna Technology Inc*

DIESEL GENERATOR SYSTEMS

**DR20 - DR600
With DGC-2020
Engine Control**

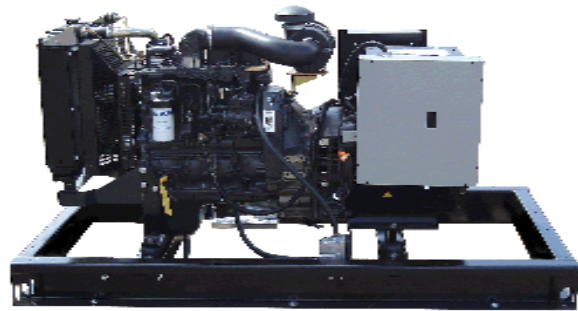

WINPOWER[®]
POWR-PAK[®]



WINPOWER[®]
WEATHR-PAK[®]

**INSTALLATION AND
OPERATIONS MANUAL**

DR45I4 Shown for Comparison



WINPOWER[®]
SOUND-PAK[®]

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries.

Read and understand all instructions in the manual before starting and operating the generator set.

USING THIS MANUAL

Congratulations on your choice of a Winpower generator set. You have selected a high-quality, precision-engineered generator set designed and tested to give you years of satisfactory standby service.

To get the best performance from your new engine generator set, it is important that you carefully read and follow the operating instructions in this manual.

Should you experience a problem please follow the "Things To Check" near the end of this manual. The warranty listed in this manual describes what you can expect from WINPOWER should you need service assistance in the future.

COPY YOUR MODEL AND SERIAL NUMBER HERE

No other WINPOWER generator has the same serial number as yours. It is important that you record the number and other vital information here. If you should ever need to contact us on this unit it will help us to respond to your needs faster.

MODEL _____

SERIAL NUMBER _____

'M" Spec. _____

PURCHASE DATE _____

DEALER _____

TABLE OF CONTENTS

INTRODUCTION	i
GUIDE TO PRODUCT SAFETY	1
BASIC INFORMATION	2
Description	2
DGC-2020 Engine Control Layout	3
DGC-2020 Display Operations	5
RECEIVING THE GENERATOR	6
Unpacking the unit	6
Lifting the unit	7
ENGINE GENERATOR INSTALLATION	7
Installation	6
Engine Generator Set Mounting	8
Fuel Installation	8
Lubrication	8
Coolant	8
Battery Installation	9
Battery Charger/Block Heater Wiring	9
Mounting The Transfer Switch	10
AC ELECTRICAL CONNECTIONS	10
DC ELECTRICAL CONNECTIONS	12
INITIAL START-UP	13
EXERCISER CLOCK	14
TROUBLESHOOTING INFORMATION	14
APPENDIX DIRECTORY	15
Appendixes	16-29
12 MONTH WARRANTY	30

PROPER USE AND INSTALLATION

You must be sure your new engine generator set is:

- * Properly serviced before starting
- * Operated in a well ventilated area
- * Properly exhausted and gases safely dispersed
- * Wired by a qualified electrician
- * Operated only for its designed purposes
- * Used only by operators who understand its operation
- * Properly maintained

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries.

Read and understand all instructions in the manual before starting and operating the generator set.

This engine generator set has been designed and manufactured to allow safe, reliable performance. Poor maintenance, improper or careless use can result in potential deadly hazards; from electrical shock, exhaust gas asphyxiation, or fire. Please read all safety instructions carefully before installation or use. Keep these instructions handy for future reference. Take special note and follow all warnings on the unit labels and in the manuals.

ANSI SAFETY DEFINITIONS

DANGER:

*DANGER indicates an imminently hazardous situation which, if not avoided, **will** result in death or serious injury. This signal word is to be limited to the most extreme situations.*

WARNING:

*WARNING indicates a potentially hazardous situation which, if not avoided, **could** result in death or serious injury.*

CAUTION:

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTE:

CAUTION is also used on the unit labels and in this manual to indicate a situation that could result in serious damage or destruction of the equipment and possible personal injury.

1. **ELECTRIC SHOCK** - The output voltage present in this equipment can cause a fatal electric shock. This equipment must be operated by a responsible person.
 - a. Do not allow anyone to operate the generator without proper instruction.
 - b. Guard against electric shock.
 - c. Avoid contact with live terminals or receptacles.
 - d. Use extreme care if operating this unit in rain or snow.
 - e. Use only three-prong grounded receptacles and extension cords.
 - f. Be sure the unit is properly grounded to an external ground rod driven into the earth.
2. **FIRE HAZARD** - Diesel fuel presents a hazard of possible explosion and/or fire.
 - a. Do not smoke or use open flame near the generator set.
 - b. Keep a fire extinguisher nearby and know its proper use. Fire extinguishers rated ABC by NFPA are appropriate.
3. **DEADLY EXHAUST GAS** - Exhaust fumes from any diesel engine contain carbon monoxide, an invisible, odorless and deadly gas that must be mixed with fresh air.
 - a. Operate only in well ventilated areas.
 - b. Never operate indoors.
 - c. Never operate the unit in such a way as to allow exhaust gases to seep back into closed rooms (i.e. through windows, walls or floors).
4. **NOISE HAZARD** - Excessive noise is not only tiring, but continual exposure can lead to loss of hearing.
 - a. Use hearing protection equipment when working around this equipment for long periods of time.
 - b. Keep your neighbors in mind when permanently installing this equipment.
5. **CLEANLINESS** - Keep the generator and surrounding area clean.
 - a. Remove all grease, ice, snow or materials that create slippery conditions around the unit.
 - b. Remove any rags or other material that could create potential fire hazards.
 - c. Carefully wipe up any fuel or oil spills before starting the unit.
 - d. Never allow leaves or other flammable material to build up around the engine exhaust area.
6. **SERVICING EQUIPMENT** - All service, including the installation or replacement of service parts, **should be performed only by a qualified technician.**
 - a. Use only factory approved repair parts.
 - b. Do not work on this equipment when fatigued.
 - c. Never remove the protective guards, cover, or receptacle panels while the engine is running.
 - d. Use extreme caution when working on electrical components. High output voltages from this equipment can cause serious injury or death.
 - e. Always avoid hot mufflers, exhaust manifolds, and engine parts. They all can cause severe burns instantly.
 - f. Installing a generator set is not a "do-it-yourself" project. Consult a qualified, licensed electrician or contractor. The installation must comply with all national, state, and local codes.
 - g. Always make sure unit is disabled before placing your hands anywhere near the fan, belts, alternator or water hoses.

TESTING POLICY:

Before any generator is shipped from the factory, it is fully checked for performance. The generator is loaded to its full capacity, and the voltage, current, and frequency are carefully checked.

Rated output of generators is based on engineering tests of typical units, and is subject to, and limited by, the temperature, altitude, fuel, and other conditions specified by the manufacturer of the applicable engines.

INTRODUCTION AND DESCRIPTION

PRODUCT DESCRIPTION:

This engine-generator set is designed for unattended remote start operation. It can be operated as part of a fully automatic standby power system or independently as a local start unit in a prime power system. The engine-generator set is fully tested at the factory prior to shipment to insure proper operation of each individual component as well as the total system's performance and reliability.

The engine generator set consists of a multi-cylinder, liquid cooled engine nominally operating at 1800 rpm. The generator frequency regulation is maintained by the engine governor to within +/- 1.5 hertz (cps), from no load to rated load for standard mechanical governors and to within +/- .5 hertz or better for units equipped with an electronic governor. The generator is a single bearing, direct drive, rotating field design. The generator is connected to the engine flywheel via flexible drive disks. The Generator Set is skid mounted with isolation mounts between the engine and base on all units.

Unit Orientation Note: All references used in this manual for unit familiarization, access and component locations on the Generator Set are oriented from a TOP (plan) VIEW with engine at the FRONT and generator to the REAR.

WINPOWER uses a common junction box for all customer control and power connections (both AC output and DC control). The common electrical junction box is always on the left side at the generator end of the machine.

A customer supplied 12 (or 24) Volt battery is required to complete the installation. See appendix 1, to identify the voltage, size and CCA (Cold Cranking Amp) requirements for your specific unit.

The engine is controlled and Generator Set operation is monitored for safe operation by a programmable microprocessor based Electronic Engine Control Module (ECM) with an LCD digital display. The Generator Set ECM control is mounted on a vertical pedestal on the right side of the generator. (Except for the DR10 & DR20 which are mounted on top the generator housing) The ECM is programmed with a cycle cranking sequence - 3 cycles of 15 seconds on / 15 seconds off, and a 5 minute cool down delay. The cool down delay can be changed in the field from 0 to 30 minutes by your dealer. Other features, timing cycles, set points and signal output capabilities are possible. Consult factory for procedure and passwords.

** NOTICE **

These units will automatically transfer if a power outage occurs while running in an exercise mode.

MODEL NUMBER STRUCTURE:

The WINPOWER alpha-numerical numbering system consists of a base model designation, followed by an options section, separated by a dash mark. The base component of the model numbering system identifies an engine type, engine starting method, fuel type, kilowatt rating, engine manufacturer, and number of generator poles. Following the separation dash mark is the voltage connection and optional installed equipment. Options include features like weather enclosures (housing), base mounted fuel tank sizes, and trailer options.

Please note that some features or packages, such as NFPA level I & II, do not have an indication place in this numbering system. They are issued and built with an M-Spec (i.e. M-10372) number which can be found on the WINPOWER data tag. When the M-Spec is present, supplemental inserts will accompany this standard manual providing information about the special equipment and features installed. The standard model numbering key that can be used along with the data tag information and/or M-spec supplements to determine the generator sets ratings and specifications

WINPOWER MODEL NUMBERING SYSTEM	
BUILD YOUR GENSET REQUIREMENT FROM THE BOTTOM OF THE PAGE TO THE TOP	
T	TRAILER OPTION IF PRESENT UNIT IS MOUNTED ON A TRAILER WITH FUEL TANK FUEL. TANK SIZES SHOWN BY PREVIOUS LETTER (SMALL AND MEDIUM FUEL TANKS ONLY)
M	FUEL TANK SIZE S = SMALL L = LARGE SEE CURRENT PRICE SHEET M = MEDIUM * = NONE TO DETERMINE CAPACITY
H	HOUSING TYPE H = WEATHER HOUSING (WEATHER-PAK) * = NO HOUSING S = SOUND ATTENUATED/WEATHER PROTECTIVE (SOUND-PAK)
A	VOLTAGE A = SINGLE PHASE 120/240 J = THREE PHASE 120/240 D = THREE PHASE 120/208 L = THREE PHASE 277/480
-	BASE UNIT - OPTIONS SEPARATOR
4	NUMBER OF POLES ON THE GENERATOR 4 POLES STANDARD
I	ENGINE MANUFACTURE V = VOLVO I = ISUZU (10 & 20 kW) G = GM D = DEUTZ I = IVECO (ALL OTHERS) N = NG ENGINES
20	KILOWATTS GENERATOR OUTPUT IN KILOWATTS WITH STANDBY
N	GASEOUS FUEL TYPE N = NATURAL GAS L = L/P LIQUID WITHDRAWAL P = LIQUID PROPANE VAPOR NOT USED WITH DIESEL FUEL
R	STARTING METHOD R - REMOTE STARTING
G	FUEL TYPE D = DIESEL G = GASEOUS

SPECIFICATIONS

GENERATOR SET:

Every WINPOWER Generator Set has its own unique identity data plate. This data plate identifies the complete unit model number, the system serial number and has links to the individual components that form the generator set in our factory records. Several of the major components also have their own individual identity plates providing additional information to document build data for warranty and replacement parts.

WINPOWER GENERATOR SET			
VOLTS	120/208	MODEL NO.	DR175I4-D
HERTZ	60	R.P.M.	1800
DUTY	CONT.	STANDBY	PHASE 3
AMPS	546	607	P.F. .8
K.W.	157	175	INS. H
K.V.A.	196	218	AMB. TEMP. 40°C
SERIAL NO. 2007325001 TYPE NO. M-10848			
FITTED WITH RAINPROOF ENCLOSURE			
MAX LOAD UNBALANCED - 50%			
WINPOWER			
LE CENTER MN 56057 U.S.A.			

Typical Winpower Nameplate

Be sure to have the main WINPOWER unit data plate information recorded inside the front cover of this manual for future reference and for identification whenever requesting field or factory technical assistance. Sample data plate is shown for reference. Primary fields needed for assistance are complete model number, serial number and especially the M-Spec number. The M-Spec number (if provided) is recorded in the 'TYPE NO.' block on the Lower Right of the plate. See the appendixs in the back of this manual for individual units specifications and wiring diagram references.

ENGINE:

Each engine has a nameplate on it that gives the specific engine model number, build specification and the serial number for the engine. See the technical data pages in the back of this manual for individual engine specifications, fuel consumptions and wiring diagram references.

This manual covers specific operation of the combined engine generator set. Refer to engine operating and maintenance instructions for specific instruction on the care and maintenance of the engine. Oil and fuel requirements along with maintenance schedules and engine warranty information are provided by the individual engine manufactures.

**** CAUTION ****

EQUIPMENT DAMAGE - Be sure to check the engine oil level frequently as specified in the engine manual.

The engine manufacturer has established an excellent worldwide engine service organization; engine service is available from a nearby authorized dealer or distributor; check the Yellow Pages of the telephone directory under "engines," or ask the dealer from whom you purchased the power plant.

The rated power of each engine-generator is limited by the temperature, altitude and all other ambient conditions specified by the engine manufacturer. Engine power will decrease 3-1/2% for each 1000 ft. above sea level, and will decrease an additional 1% for each 10 degrees Fahrenheit above 60 degrees Fahrenheit. Units should not be operated in ambient temperature greater than 125 degrees Fahrenheit.


GENERATOR:

WINPOWER Generators Sets use totally brushless, AVR (Auto-Voltage Regulator) controlled broad-range generator ends. The generator converts rotational mechanical energy into electrical energy. Standard WINPOWER units are equipped with generators manufactured by Stamford/Newage. Each generator 'end' has its own data tag. The unique serial number is stamped on the data plate and into the upper section of the mounting adapter of the generator frame. The data label is affixed to the main frame of the generator on the lower left side, similar to the sample shown.

SERIAL NUMBER A068529666	MACHINE ID 4/10	UC I234FLL 64D
KVA BASE RATE (BR)	71	60
KW BASE RATE (BR)	71	60
HZ	60	RPM
VOLTS	208	PHASE
AMPS BASE RATE (BR)	247	PF
RATING	0.8	Standby
EX. VOLTS	36	EX. AMPS
AMBIENT TEMP C	40	IP22
ENCLOSURE	IP22	INSULATION CLASS
INSULATION CLASS	H/UL1446	STATOR WDG.
STATOR CORN.	311	PARALLEL STAR
AVR	5X460	KVA PEAK RATE (BR)
MAX HRS P A PR	150	TEMP RISE

NEWAGE
NEWAGE INTERNATIONAL LTD
PO BOX 17, BARNACK RD
STAMFORD, LINCOLNSHIRE
PE9 29B, ENGLAND
43875 04/13/06
WARNING
REFER TO THE INSTRUCTIONS BOOK
BEFORE FLASH OR MEGGA TESTING
BS 5000: PART 3 IEC 34-
NEMA MG 1-20 ISO 8528-3
STAMFORD
AC GENERATORS

ENGINE CONTROL PANEL LAYOUT

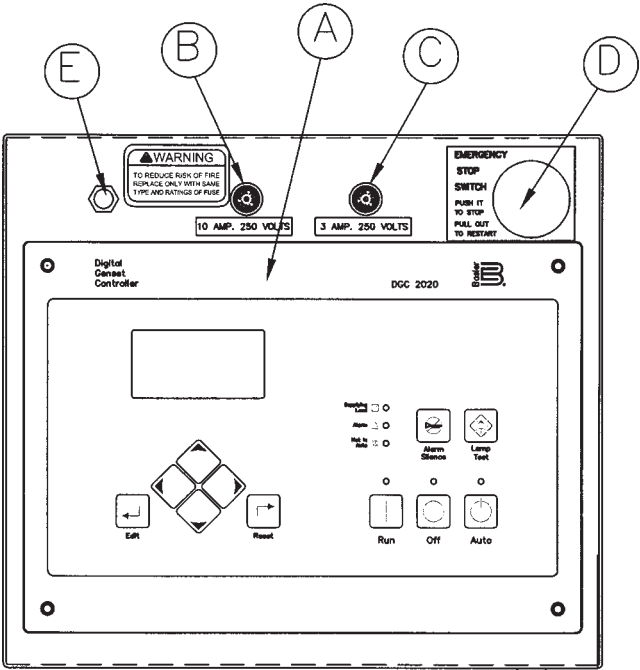

A - DGC-2020 Digital Gen-Set Control. See Explanation below.

B - DC Control Circuit Fuse. The 10 amp DC Circuit Fuse protects the 12 volt circuits and engine wiring harness against faults in wiring or control equipment. The fuse also prevents a discharge of the battery due to a circuit fault. (Replacement AGC-10A-250V)

C - DGC-2020 Fuse. This 3 amp DC fuse protects the DGC-2020 printed circuit board. (Replacement AGC-3A-250V)

D - Emergency Stop Switch - When depressed this switch will disconnect all the 12 volt power to the DGC-2020 shutting the engine down. The lamp in the emergency stop switch will light up when the switch is depressed showing that the power to the panel has been disconnected.

E - Voltage Adjustment Rheostat. This 2 watt 1k ohm rheostat is used to fine tune your output voltage from the generator. If for some reason the voltage should get way out of range and you can not get it back with the adjustment range on the rheostat, there is a course voltage adjustment pot on the voltage regulator

ENGINE CONTROL MODULE (DGC-2020)

Note: A CD was shipped with this unit to support the DGC-2020. The CD contains the complete operators manual and the software to reprogram the DGC-2020 if the need should ever arise. Please store it in a safe place.

The DGC-2020 Digital Generator Set Controller provides integrated engine-generator set control, protection, and metering in a single package. Microprocessor based technology allows for exact measurement, set point adjustment, and timing functions. Front panel controls and indicators enable

quick and simple DGC-2020 operation. Basler Electric communication software (BESTCOMSPlus) allows units to be easily customized for each application. A wide temperature-range liquid crystal display (LCD) with backlighting can be viewed under a variety of ambient light and temperature conditions.

FEATURES

DGC-2020 Digital Generator Set Controllers have the following features:

- Local and Remote Generator Control
- Engine and Generator Protection
- Programmable Analog Engine Senders
- Programmable Logic
- Automatic Transfer Switch Control (Mains Failure)
- Integrated RS485 interface
- Auto Synchronizing

FUNCTIONS


DGC-2020 Digital Generator Set Controllers perform the following functions:

Generator Protection and Metering

Generator protection guards against over voltage, under voltage, under frequency, and over frequency. Over current and phase imbalance protection is available as an option at the time of manufacture. Each generator protection function has an adjustable pickup and time delay setting. Metered generator parameters include voltage, current, real power (watts), apparent power (VA), and power factor (PF).

Engine Protection and Metering

Engine protection features include oil pressure and coolant temperature monitoring, over crank protection, ECU specific protection elements, and diagnostic reporting.

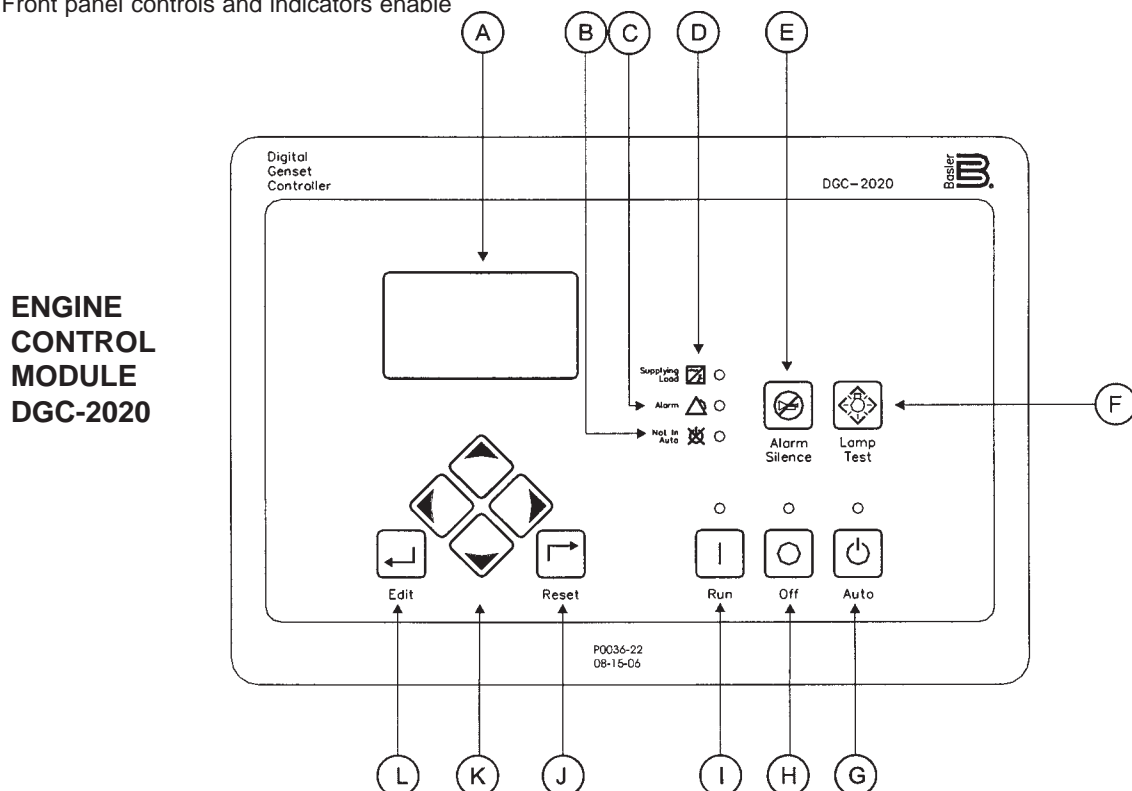

Metered engine parameters include oil pressure, coolant temperature, battery voltage, speed, engine load, coolant level (from ECU), ECU specific parameters, and run-time statistics.

All metering functions are displayed on the liquid crystal display. The front panel display begins with the SUMMARY SCREEN. Pressing the *Right* arrow key will open the MAIN MENU screen. The MAIN MENU screen consists of METERING and SETTINGS

Summary Screen

Summary screen can be set to standard or scrolling. When set to standard, only the following are displayed:

- Generator Voltage
- Generator Amperage
- Generator Phase
- Generator Frequency
- Engine Oil Pressure
- Engine Coolant Temperature
- Engine Battery Voltage

A - Liquid Crystal Display. The backlit, 64 by 128 pixel LCD serves as the local information source for metering, alarms, pre-alarms and protective functions. Display operation is maintained at -20°C. An optional LCD heater would maintain display operation at -40°C.

B - Not in Auto Indicator. This red LED lights when the DGC-2020 is not operating in Auto mode.

C - Alarm Indicator. This red LED lights continuously during alarm conditions and flashes during pre-alarm conditions.

D - Supplying Load Indicator. This green LED lights when the generator current is greater than EPS threshold current.

E - Alarm Silence Push-button. Pressing this button opens the relay output programmed as the horn output.

F - Lamp Test Push-button. Pressing this button tests the DGC-2020 indicators by exercising all LCD pixels and lighting all LEDs.

G - Auto Push-button and Mode Indicator. Pressing the Auto button places the DGC-2020 in Auto mode. The green Auto mode LED lights when Auto mode is active.

H - Off Push-button and Mode Indicator. Pressing this button places the DGC-2020 in Off mode. The red Off mode LED lights when the DGC-2020 is in Off mode.

I - Run Push-button and Mode Indicator. Pressing this button places the DGC-2020 in Run mode. The green Run mode LED lights when Run mode is active.

J - Reset Push-button. This button is pressed to cancel a settings editing session and discard any settings changes. When pressed, this button also resets the Breaker Management Pre-Alarms

K - Arrow Push-buttons. These four buttons are used to navigate through the front panel display menus and modify settings. The left- and right-arrow buttons are used to navigate through the menu levels. The right arrow button is pressed to

move downward through the menu levels and the left-arrow button is pressed to move upward. Within a level, the up-arrow and down-arrow buttons are used to move among items within the menu level. Pressing the down-arrow button moves to items lower in the list. Pressing the up-arrow button moves to items higher in the list. During a settings editing session, the up- and down-arrow buttons are used to raise and lower the value of the selected setting.

L - Edit Push-button. Pressing this button starts an editing session and enables changes to the DGC-2020 settings. At the conclusion of an editing session, the Edit push-button is pressed again to save the setting changes.

DISPLAY OPERATION

The front panel display is used to make settings changes and display metering values. Refer to call-outs J, K, and L in text and illustration for information on changing settings through the front panel and navigating through the Metering screens. When the unit is first powered up, the clock may need to be reset. Editing the clock provides familiarity with the edit process. All programming changes from the front panel are accessed through the edit key to begin and exit the internal microprocessor program.

Log-in and Permissions

To Log-in, navigate to the SETTINGS, ENTER PASSWORD screen and press the Edit key. Use the Up/Down arrow keys to scroll through the characters. Use the Left/Right arrow keys to enter more characters. The Owner operator password is OP. Once the password has been entered, press the Edit key to Log-in. See the key stroke sequence listed below to access the control and enter the edit mode. A LOGOUT selection now appears in the list of SETTINGS. To logout, navigate to SETTINGS, LOGOUT and press the Edit key. The LOGOUT selection is removed from the SETTINGS list.

Sequence for setting (or resetting) the system clock -

- 1) Press 'K' (right key) for initial set or 'K' (left to back up, up / down) to choose menu item and time/date element to be changed.
 - 2) Press 'L' (Edit) to access change mode to enter Password - OP as follows:
 - 2a -Press K (up) to select O
 - 2b -Press K (right) to move cursor
 - 2c -Press K (up) to select P
 - 2d -Press L (Edit) to begin change mode
 - 3) Press 'K' (up or down) to choose year
 - 4) Press 'L' (Edit) to enter year
 - 5) Press 'K' (down) to select month mode
 - 6) Press 'L' (Edit) to access month change
 - 7) Press 'K' (up or down) to choose month
 - 8) Press 'L' (Edit) to enter month
 - 9) Repeat sequence 5 through 8 for day, minute, second and DST (Daylight Saving Time).
- To finish clock setting, process - Press 'K' (left).

The microprocessor is still in the General Settings Edit mode. Pressing 'K' (left) a second time exits the Edit mode and allows full access to the View Only mode for all control settings and current status. Any items to be changed are accessed by pressing 'K' (up/down/right or left) to select, 'L' (Edit) to change and 'K' (left) to exit.

Communication

Standard DGC-2020 communication features include a **standard USB port and SAE J1939 interface**. **Optional communication features** include a dial-out modem and RS-485 communication port. The **USB communication** port can be used with BESTCOMSPlus software to quickly configure a DGC-2020 with the desired settings or retrieve metering values and event log records. The CANBus interface provides high-speed communication between the DGC-2020 and the engine control unit (ECU) on an electronically controlled engine. This interface provides access to oil pressure, coolant temperature, and engine speed data by reading these parameters directly from the ECU. When available, engine diagnostic data can also be accessed. The CANBus interface supports the following protocols:

- **SAE J1939 Protocol** - Oil pressure, coolant temperature, and engine speed data are received from the ECU. In addition, DTCs (Diagnostic Trouble Codes) help diagnose any engine or related failures. The engine DTCs are displayed on the front panel of the DGC-2020 and may be obtained using BESTCOMSPlus software.
- **MTU/MDEC Protocol** - A DGC-2020 connected to a generator Set equipped with an MTU MDEC receives Oil pressure, coolant temperature, and engine speed data from the engine controller, along with various alarms and pre-alarms that are MDEC specific. In addition, the DGC-2020 tracks and displays the active fault codes issued by the MDEC ECU.

Optional - Dial-Out Modem One of two optional, dial-out modems (a US version or international version) enables remote control, monitoring, and setting of the DGC-2020. When an alarm or pre-alarm condition occurs, the DGC-2020 can dial up to four telephone numbers, in sequence, until an answer is received and the condition is annunciated.

Optional - RS-485 Port The RS-485 communication port uses the Modbus communication protocol and enables remote control and monitoring of the DGC-2020 over a polled network

RECEIVING THE GENERATOR

The generator set will generally be shipped by a commercial 'common freight carrier'. Large and bulky units are often shipped on a dedicated or specially contracted 'Flat-Bed' truck. The means of shipment is determined in consultation between the WINPOWER Sales and Shipping staff and the customer. Routing is determined by the bulk, size, and a means available to unload the generator at the receiving end. WINPOWER recommends units that are shipped by common carrier be delivered to a commercial dock to allow the Generator Set to be unloaded in a safe, efficient manner and to minimize handling damage to the unit.

Locate the packing slip on the side of the crate or request it from the truck driver. When receiving the unit take special care in exam-

ining the unit for damage during shipment. Avoid signing for the equipment until a full visual assessment and inventory have been made. Verify that you have received the right equipment and the proper amount by matching up the equipment to the packing list. Larger units may ship with the fuel tank and muffler removed. Verify that those components are undamaged and removed from the truck prior to their release.

The keys for doors of the enclosed generators sets are typically attached to lifting eye on the base of the machine. These keys are matched to all the doors on the generator set housing.

UNPACKING INSTRUCTIONS:

When unpacking the generator set, be sure to inspect it carefully for freight loss or damage. If loss or damage is noted at the time of delivery, require that the person making the delivery make note of the loss or damage on the freight bill, or affix his signature under the consignee's memo of the loss or damage. Contact the carrier for claim procedures.

When loss or damage is noted after delivery, segregate the damaged material, and contact the carrier for claim procedures.

"Concealed Damage" is understood to mean damage to the contents of a package which is not in evidence at the time of delivery by the carrier, but which is discovered later. The carrier or carriers are responsible for merchandise lost or damaged in transit. The title to goods rests with the consignee when generators are shipped fob factory, and only the consignee can legally file a claim.

***** CAUTION *****

EQUIPMENT DAMAGE - These units are shipped with oil, and a 50/50 mix of coolant. Be sure to check all fluid levels before operating. See engine manufacturer's instruction manual for recommended oil requirements before initial starting.

UNPACKING:

(Not recommended until the unit is on-site)

1. Carefully remove the crate.
2. After inspecting the engine-generator for external physical damage, locate and check the following items packed with the unit.
 - a. Owner's operators manual.
 - b. Engine manufacturer's instruction manual.
 - c. Battery hold-down brackets & hardware.
 - d. Unit components or accessory items shipped loose for on-site installation.
 - e. Optional accessories (i.e. remote annunciator)
3. Remove main frame hold down bolts.
4. Unit can now be lifted from shipping rails.

LIFTING THE GENERATOR SET

NOTICE - Personal Injury

To prevent injury to persons or equipment, observe the following guidelines when lifting the generator:

Due to the different designs, configurations, options, weights, site conditions, and available material handling equipment, specific lifting instructions are not provided for each individual generator set model. General guidelines provided are applicable to the entire standby generator line. It is the responsibility of the installing party to follow the lifting equipment's operators manual to prevent injury to personnel and damage to the generator. Smaller Generator Sets may not require use of overhead lifting equipment and may be placed on the pad with basic material handling equipment, i.e. a forklift.

CAUTION: - Do not attempt to lift the generator set by the means of the lifting eyes on the engine or generator end.

These lifting points are only for use during the manufacturing process and are designed for lifting of the individual Generator Set component.

WINPOWER has designed all of its Generators Sets to be lifted at the corners with an appropriate lifting rig. The lifting points are located on the side rails of the generator base or on the optional base mounted fuel tank of a Diesel Generator Set.

The generator set can be lifted with properly rated chains or cables along with the use of spreader bars. The spreader bars should be long enough so that the lift cables or chains do not come into contact with the generator set. Use of commercially available lifting fixtures may also be used. Always be sure that the equipment is properly rated for the weight of the generator. Failure to do so can cause damage to the generator, injury to personnel or even death.


The generator set and fuel tank may or may not be shipped as a complete unit. If the fuel tank is shipped separate from the generator, place the tank on the cement pad first, and then place the generator on top of the fuel tank.

***** **WARNING** *****

NEVER - attempt to lift the fuel tank while filled with fuel. Sloshing of the fuel can cause a shift in the balance of the fuel tank, making for a DANGEROUS, unbalanced lifting load. If the generator was shipped on the fuel tank, use the lifting points located on the fuel tank to move the entire Generator Set into place. DO NOT place fuel in the tank prior to lifting.

Depending on generator set size and configuration, the exhaust system may 'ship loose' with the generator set for installation on site. The muffler and its attaching brackets must be mounted on top of the generator housing prior to operating the engine generator set.

INSTALLATION

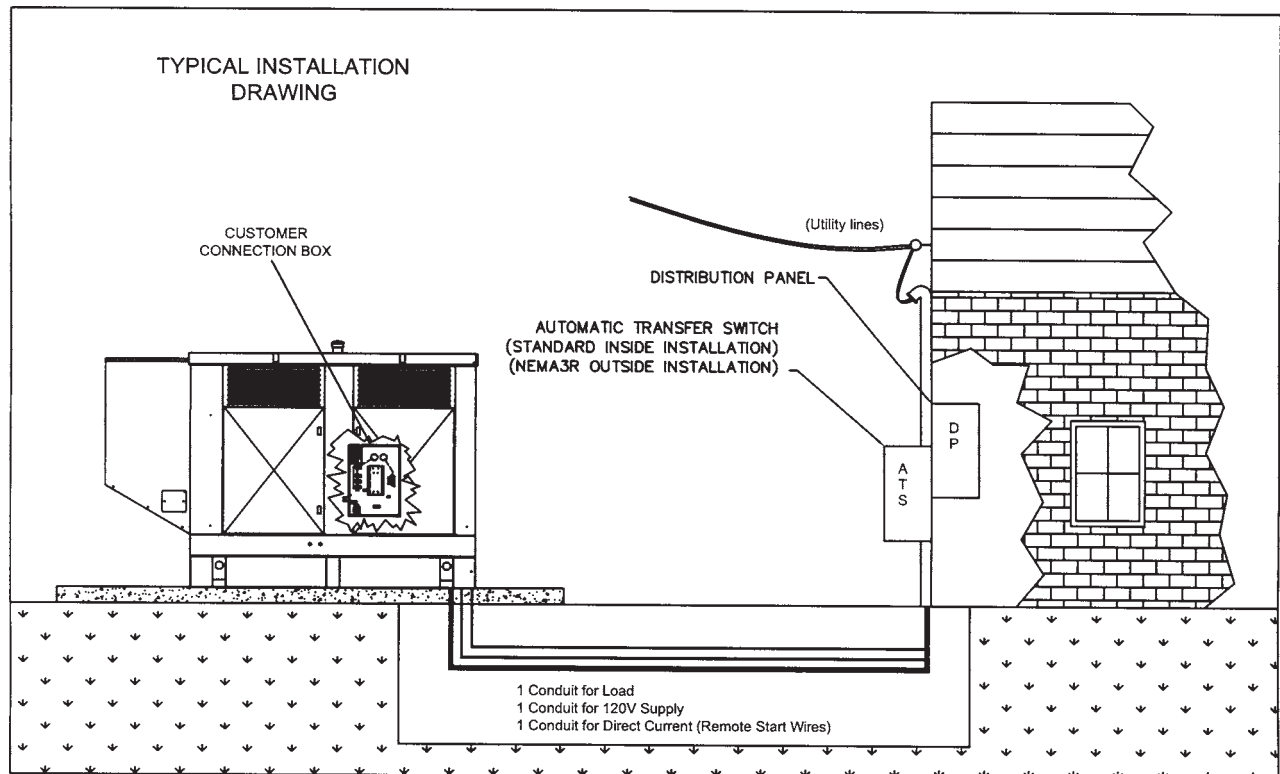

***** **WARNING** *****

PERSONAL INJURY - Before proceeding with the installation, be sure the DGC-2020 is in the "stop" position. Before proceeding with the installation, be sure the Generator MLCB (Main Line Circuit Breaker) is in the 'OFF' position and the unit starting battery is disconnected.

GENERAL INFORMATION

These engine/generator sets are generally supplied as weather enclosed packages for quick installation on an outdoor concrete pad. They are also available as open skid mounted units for indoor installation in a building or protective enclosure supplied by the installer. The factory weather enclosures are available as standard or acoustical housing intended for outdoor installation only. **Factory weather enclosed units are not intended to be used indoors and no support is available to assist in re-engineering finished packaged units.**

All versions must be bolted to a solid base for proper operation. A properly designed concrete pad is necessary for stationary operation. A substantial DOT certified trailer is required for mobile applications. Consult a qualified, licensed electrician or contractor to install and wire this Generator Set. **The installation must comply with all national, state, and local codes.**

Before beginning the installation process, recheck the voltage, phase and amperage rating of the Generator Set and ATS (Automatic Transfer Switch). Be certain they can handle the intended load and are compatible with the entrance voltage, phase and current ratings. Plans for installation should be prepared with proper attention to mechanical and electrical engineering detail to assure a satisfactory system installation.

The information in this manual is offered only as a guide to finalizing your installation plans.

NOTICE

For full service switching of the entire load, the ATS must be 'SE' (Service Entrance) rated or must have a properly rated fusible disconnect installed before the ATS to protect the contacts.

ENGINE GENERATOR SET MOUNTING

The unit's main frame must be bolted solidly to a 4 to 6 inch thick cement pad. The engine-generator is mounted on a sub-frame which is attached with special shock mounts to the main frame. This allows the engine-generator free movement without affecting the control panel which is mounted on the main frame.

Do not shock mount the main frame. Engine vibration will be transmitted to the control panel causing erroneous start/stop cycles and premature control failure.

The unit should be mounted to allow for ample working room around it. A general rule to follow is five (5) feet of clearance on all sides. (Code NFPA 37)

FUEL INSTALLATION

The fuel supply should be as close to the engine as possible. This will reduce the installation cost of fuel runs and minimize line losses. The diesel fuel supply should be no more than 3 feet below the fuel inlet on the pump. If your fuel supply is lower than three feet you may have to install an additional lift pump to bring the fuel up to the mechanical fuel pump on the engine.

The information in this manual is offered to assist you in providing the proper fuel for your engine. However, this information is only provided to inform you of the engine's requirements and assist in making you aware of the decisions you must make. In no case should the instructions or information provided be interpreted to conflict with any local, state or national codes. If in doubt, always consult your local fire marshal or fuel supplier.

INSTALLING THE FUEL LINE

Engine generator sets are properly adjusted before they leave the factory. Connecting a fuel supply with adequate supply volume is critical to reliable operation. Diesel units with optional base mounted fuel tanks are pre-plumbed to the mechanical fuel pump on the engine.

Open skid mounted Diesel units are often supplied with capped inlet and return lines. The use of a suitable customer supplied flexible fuel line is essential between the engine and fuel supply to provide a vibration break between your fuel supply and the engine.

***** **WARNING** *****

FIRE DANGER - Connecting rigid fuel line (i.e. steel or copper line) directly to the inlet fuel filter or fuel pump may cause the fuel line to crack during operation creating a serious fire hazard.

LUBRICATION

Before starting the engine, check the oil level in the crankcase. If it is low, refill to the full mark with the proper weight/grade of oil as recommended by the engine manufacturer's maintenance instructions. The necessity of using the correct oil, and keeping the crankcase full cannot be over emphasized. Failure to use the proper oil and keep the crankcase properly filled will cause excessive engine wear and shorten its useful life.

COOLANT

Before starting the engine, check the coolant level in the radiator. If it is low, refill as specified in the engine manufacturer's maintenance instructions. The radiator should be filled to about 1 inch below the filler neck. For additional information on engine coolant requirements see engine manufacturer's maintenance instructions.

INSTALLING THE BATTERY

**** CAUTION ****

In the following battery installation procedure, check to be sure the DGC-2020 is in the “stop” position. This should be your last step before initial start-up.

A customer supplied twelve-volt battery is required to complete the installation; 24 volt systems require 2 batteries. Installation of the highest CCA rated battery, within the correct BCI group, will increase cold weather starting performance. *Gel batteries should not be used with the battery tender installed in the generator enclosure.*

See the specification listing in appendix 1 for the correct battery size and minimum CCA rating for the different models.

Installation and servicing of batteries must be performed or supervised only by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

When installing or replacing batteries, use the proper group/size **starting** battery. The battery should be a Maintenance Free lead acid design. Deep cycle batteries will not work for this application.

CAUTION – PERSONAL DANGER

CAUTION - NEVER dispose of a battery in a fire. The battery is capable of exploding.

CAUTION -DO NOT open or mutilate the battery. Released electrolyte is known to be harmful to the skin and eyes and to be very toxic.

These engine generator sets are all **NEGATIVE** ground. Be very careful not to connect the battery in reverse polarity, as this may short circuit the battery charging system on the engine.

CAUTION – A battery presents a risk of electrical shock and high short circuit current. The following precautions must be observed when working with batteries:

1. Remove watches, rings and other metal objects.
2. Use tools with insulated handles.
3. Check both the battery cable ends and the battery posts to be sure they are free of corrosion.
3. Always connect the battery positive cable first and then connect the battery negative cable. When removing the battery cables from the battery reverse the procedure, disconnect the negative cable first and then the positive cable.
4. Be sure all connections are tight and coat the terminals and cable ends with dielectric grease.

WARNING – The electrolyte is a diluted sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following precautions must always be taken:

- * Always wear full eye protection and protective clothing
- * Where electrolyte contacts the skin, wash off immediately with water
- * If electrolyte contacts the eyes, flush thoroughly and immediately with water and seek immediate medical attention
- * Spilled electrolyte is to be washed down with an acid neutralizing agent. A common practice is to use a solution of one pound of bicarbonate of soda (baking soda) to one gallon of water. The bicarbonate of soda solution is to be added until the evidence of reaction, foaming, has ceased. The resulting liquid is to be flushed with water and the area dried.

DANGER – Explosive Fire Risk

- * Never smoke when near batteries
- * Do not cause a flame or spark in the battery area
- * Always discharge static electricity from your body before touching batteries by first touching a grounded metal surface

SERVICING BATTERIES

Batteries used on these units may, over time, lose water. This is especially true if you are using a trickle charger to maintain your battery. When refilling the battery with water use only distilled water. Tap water will shorten the service life of the battery.

Never fill the battery above the fill line. Over filling above the upper level line may cause the electrolyte to overflow, resulting in corrosion to the engine or nearby parts. Immediately wash off any spilled electrolyte following the procedure above.

NOTE: Always make sure that a new battery is fully charged before installing it on a generator set. Failure to do so can cause damage to the engine control module in the generator set.

All connections must be clean and tight. Check the electrolyte (fluid) in the battery periodically to be sure it is above the plates. Never allow the battery to remain in a discharged condition.

CONNECTING THE BATTERY CHARGER & BLOCKHEATER

A two-stage battery tender is provided for all standby generators. These battery chargers can vary depending on what model you have purchased and what the original specifications call for. For unit operating at 12 volts D.C. the standard charger is a battery tender that charges at a rate of 750 mA until the battery is fully charged and then automatically switches to a 13.2 VDC float charger. The charger has an indicator light on it, red indicates it is charging, and green indicates it is in the storage mode (float charge). This charger is mounted on the left hand side of the AC connection cabinet.

All 24 volt battery chargers and option 12 volt chargers will have either a cord on them that you can plug into the receptacle on the side of the connection box or depending on size they may require hard wiring in the terminal block in the bottom of the connection box.

**** NOTICE ****

The trickle charger is not intended to recharge a battery which has become completely discharged. It is designed to produce just enough current to maintain a fully charged battery.

The battery tender receptacle is to be powered by a GFCI circuit and installed in accordance with the United States National Electric Code. It is suggested that this circuit be fused for 20 -30 amps, depending on blockheater requirements. Then both the battery charger and the block heater can be connected to the same circuit. A 120 volt duplex receptacle is mounted on the generator along the side circuit breaker panel, for a 20 amp circuit and terminal blocks are provided for heavier circuits.

The engine blockheater installed on this unit should also be plugged in this receptacle. The block heater is thermostatically controlled and when plugged in will maintain the engine coolant temperature between 100 and 120 degrees F.

MOUNTING THE AUTOMATIC TRANSFER SWITCH (A.T.S.)

******* WARNING *******

FIRE HAZARD - All wiring must be done by a licensed electrician, and must conform to the National Electrical Code and comply with all state and local codes and regulations. Check with the local authorities before proceeding!

INSTALLATION NOTES

Because of the many different types of service, feeder, and distribution equipment, no specific wiring instructions can be provided. It is recommended that only copper wire be used. In all cases it is essential that while the load is connected to the generator, there can be absolutely no feedback from the generator to the power line or the power line to the generator. When properly installed, the normal A.T.S. Control and safety systems will eliminate all paths for feedback.


To wire the automatic transfer switch into the existing wiring, first determine which circuits will be on the emergency load circuit. If the entire load is to be transferred, the transfer switch can be wired in directly after the watt-hour meter and the service entrance, providing the service entrance ampere rating is within the transfer switch's rated capability.

If only specific circuits are to be powered under emergency power failure conditions, an additional distribution panel designated "emergency distribution panel" must be installed.

All selected emergency circuits are removed from main distribution panels and installed in the emergency distribution panel. The A.T.S. is then installed between the main panel and the emergency distribution panel. Suggested circuits: freezer, refrigerator, furnace, emergency lights, sump pump, emergency outlet circuits, etc. Total running load must not exceed generator rating.

A.C. ELECTRICAL CONNECTIONS


NOTICE - CLASS 1 WIRING METHODS ARE TO BE USED FOR ALL FIELD WIRING CONNECTIONS TO TERMINALS OF A CLASS 2 CIRCUIT

Note: This symbol  always indicates ground where shown.


All wiring must be completed in accordance with the Nation Electric Code as well as any state or local codes.

You must pay particular attention to wire size requirement for the amperage of service you are dealing with. Appendix "2" provides you guidance on wire sizing based on both wire type and amperage. **Wire amperage's have been derated for 40°C ambient temperatures operation.**

CUSTOMER CONNECTION BOX FOR BOTH AC & DC CONNECTION 10 kW THROUGH 125 kW

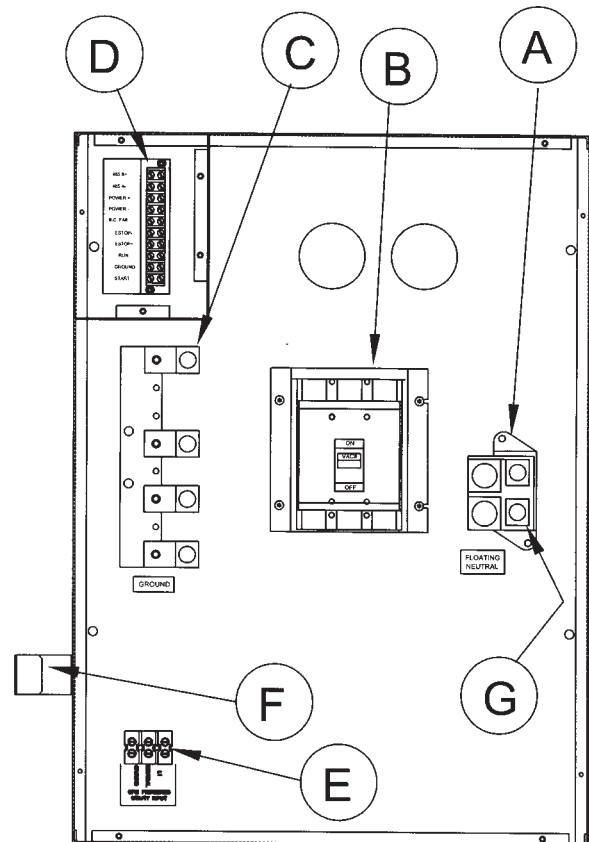

**CUSTOMER CONNECTION BOX FOR
BOTH AC & DC CONNECTION
150 kW THROUGH 400 kW**

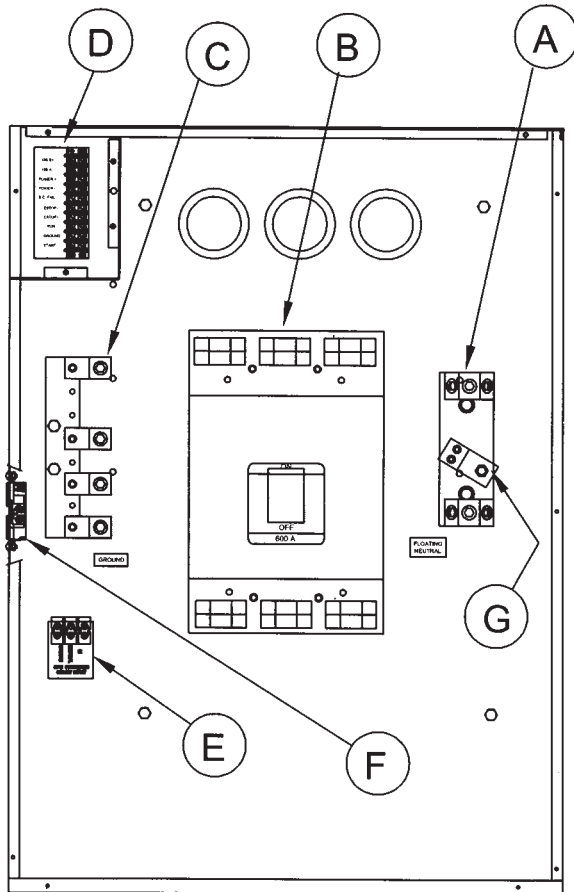

A - Neutral Lugs, These neutral lugs are isolated from ground and provided for you to connect your neutral wire from the transfer switch to the generator.

The 1200 amp terminal block lugs on the 300 to 600 kW will handle wire sizes #3/0 to 600 MCM and should be torqued to 28 ft. lbs.

The 1000 amp terminal block lugs on the 130 kW to 250 kW will handle wire sizes #3/0 to 500 MCM and should be torqued to 28 ft. lbs. (Rated for 900 AMP for AL)

The 400 amp terminal block lugs on the 65 & 90 kW will handle wire sizes #1 AWG to 400 MCM and should be torqued to 300 in. lbs.

The 225 amp terminal block lugs on the 20 kW to 45 kW will accommodate #4 AWG to 300 MCM and should be torqued to 250 in. lbs.

B - Generator Circuit Breaker, This circuit breaker provides overload protection for the generator. Your power feeds from the transfer switch will connect to the bottom lugs on the circuit breaker. The generator power feeds have already been wired into the upper lugs.

Please refer to the circuit breaker installed on your unit for breaker lug capacities and proper torque specifications.

To select the proper conductor size between the Generator and the ATS, first look your model up in Table 1 of Appendix "A" for your generator amperage. Then refer to Appendix "2" for guidance on wire sizing based on both wire type and amperage.

Wire amperages have been derated for 40° C ambient temperatures operation.

For additional information on wire sizing refer to table 310-16 of the National Electrical Code ANSI/NFPA 70.

C - Ground Lug, These ground lugs are bonded to ground and are provided for you to connect your ground wire from the transfer switch to. The lugs on the 65 kW and larger will handle wire sizes #6 AWG to 300 MCM and should be torqued to 21 ft. lbs. The lugs on the 20 & 45 kW will accommodate #10 AWG to 2/0 AWG and should be torqued to 200 in. lbs.

D - Customer DC Connection terminal block. - See DC CONNECTIONS

E - 120 VOLT GFCI CIRCUIT TERMINAL BLOCK - These terminals are rated for 85 amps and will handle wire sizes #4 AWG to #18 AWG. They should be torqued to 16 in. lbs. This circuit must be fed from a fused circuit in the distribution panel and provides power for the blockheater and the battery charger.

F - 120 VOLT/20 AMP DUPLEX RECEPTACLE, This convenience receptacle is used on the small units to plug in both the small float charger as well as the blockheater. On some the units with the larger block heater you will have to wire directly into the terminal block.

G - This lug is provided on the neutral terminal block to allow you to run a neutral to ground lead if you are using the generator in a stand alone application. This would be an application where there is not distribution panel and **no other ground to neutral bond** in the wiring system. If a grounding wire is attached here remove the floating neutral label in the panel. **This will not be used when you are wiring a generator and transfer switch into an existing power system.**

**** **WARNING** ****

A main line circuit breaker has been provided inside the generator housing. During all wiring installations make sure the breaker is in the OFF position and the generator operation switch is in the OFF position.

**** **WARNING** ****

EQUIPMENT DAMAGE - When installing a Three Phase 240 volt system be sure you know which lead is the high voltage "wild" leg (208Volt line to neutral). The generator normally carries the high voltage on the G2 lead.

All wires should be installed in rigid or flexible conduit. (Knock-outs are provided in the control box).


See the manual shipped with the Automatic Transfer Switch for connection locations in the switch. Connections in each switch will vary depending on the type of switch and the manufacturer.

GROUNDING

A grounding lug has been provided on the engine generator set and the generator set must be properly grounded to good earth ground. Generally a 8 foot copper rod driven into the earth will provide a proper earth ground.

D.C. ELECTRICAL CONNECTIONS

All DC connections are completed in the small box located in the upper left hand corner of the customer connection box. All DC connection **must be run in separate conduit**. You can not mix AC and DC leads in the same conduit.

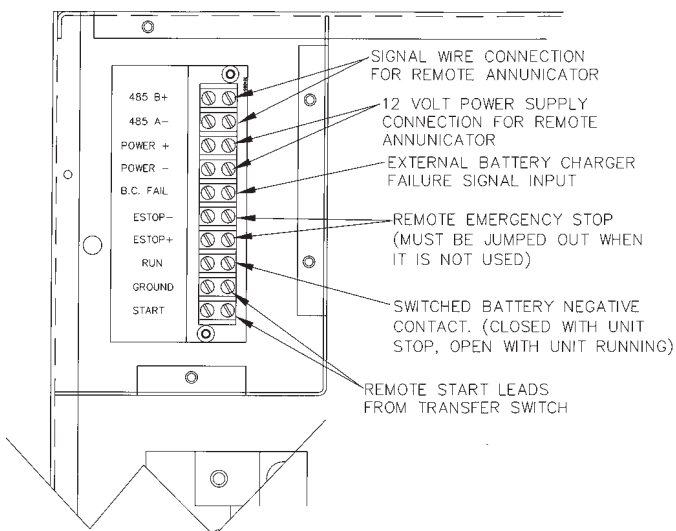

CONNECTION BOX TERMINALS

Wire size requirements for each of the connections may vary but terminal lugs should be used for all connections. Torque spec for terminal lugs is 9 in. lbs.

485 B+, 485 B-, POWER + and POWER - are the interconnection leads for a Basler "RDP-110 REMOTE DISPLAY PANEL" (remote annunciator). Minimum wire size is 20 AWG, you can use two twisted pair up to 4000 feet. (*This feature meets the annunciation requirements in applications requiring NFPA 110 level one protection.*)

B.C. FAIL - This is an input terminal, used to send a battery charger failure signal from the battery charger to the DGC-2020 and to the remote annunciator is applicable.

ESTOP- & ESTOP+ - Remote Emergency Stop terminals. These two terminals are shipped with a jumper installed. If your application requires the installation of a Remote Emergency Stop switch, remove the jumper and wire your switch to these terminals. **This unit will not start and run without either the jumper installed or a remote N/C switch installed.**

RUN - This terminal provides a 12 volt positive signal any time the unit is running. Wiring a 12 volt relay between this terminal and **GROUND** will provide you a relay closure anytime the unit is running. In addition, some stand alone battery chargers require a 12 volt positive signal to the charger anytime the unit is running to turn the battery charger off. This is done to prevent an interference between the battery charger and the engine charging system.

GROUND - This is a battery negative connection point.

START - This is your remote start connection. When using an Automatic Transfer Switch a connection through the transfer switch back to **GROUND** activates the auto start sequence in the DGC-2020 engine control. These leads must be routed through a dry contact that **closes** on line power failure. This remote start feature can be driven by any relay closure for applications where an A.T.S. is not used.

DC Interconnections to the Automatic Transfer Switch

Two control wires are required between the A.T.S. panel and the generator control terminal box. Depending on the distance, 14 to 16 gauge stranded wire should be used. These wires should be labeled S1 (ground) and S23 (start).


******* WARNING *******

Be sure Engine Generator is in the "OFF" position before you make any DC interconnections.

*******CAUTION*******
Never run the AC and DC wiring in the same conduit.


Zenith ATS

The terminal markings in the Zenith ATS are marked "X1" and "X2". The wire labeled "Start 1" is routed to start contact "X1" and the wire labeled "Start 23" is routed to start contact "X2"

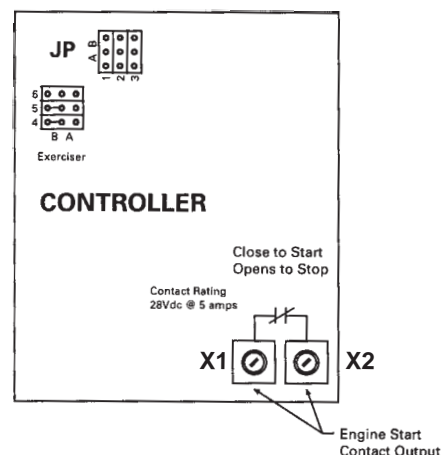

ASCO 165 UL SWITCH


Your DC connection points in the ASCO 165 ATS are terminals "4" and "5" on the interface terminal block.

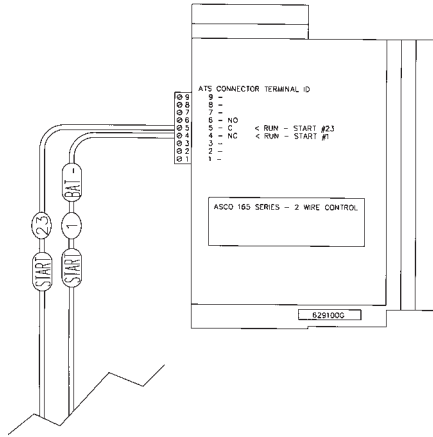


ASCO 300 UL SWITCH

Your DC connection points in the ASCO 300 ATS are terminals "14" and "15". Depending on the size of the switch they are located in different locations.

INITIAL START UP

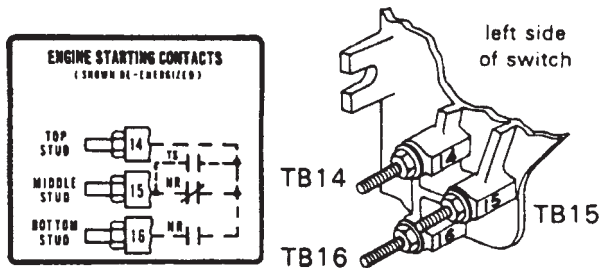

Engine starting contact label and location for 30 - 200 amp switches.

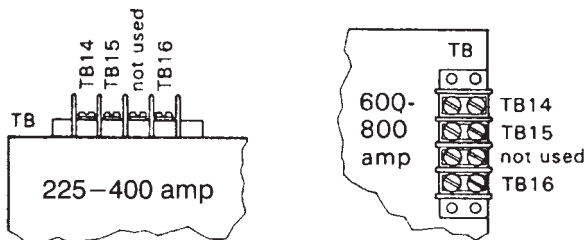

******* WARNING *******

EQUIPMENT DAMAGE - DO NOT jump start these engine generator sets. Starting these units on a low battery or jump starting them will cause damage to the engine control module.

Use the following check list to verify correct installation before starting the engine:

1. Engine oil. Fill as required with proper grade/qty.
2. Engine coolant. Fill as required with proper mixture.
3. Unit mounting base properly bolted down.
4. Clearance for service and maintenance on all sides.
5. Proper fuel line material and size.
6. All fuel line connections tight.
7. Battery connections clean and tight.
8. Battery fully charged.
9. All AC and DC wiring installed and properly protected.

After completing the above checklist, the engine-generator set is ready for the initial start-up test.

PROCEDURE

Depress the "RUN" push-button on the front of the DGC. The engine-generator will crank and start automatically. If the engine fails to start, depress the "stop" push-button and correct the trouble before proceeding.

With the engine running smoothly check the no load voltage and frequency on the digital display. The voltage should be 208/240/480 AC depending on which model you have and a frequency of 59.5 To 60.5 hertz (Hz).

If you have the proper voltage at the generator the next step is to check the voltage at the generator terminals in the Automatic Transfer Switch. The voltage between the G1 and the G3 terminals should be the same as it was on the generator front panel. The voltage should also be checked between the hot terminals (G1 and G3) and the G-N to be certain of a balanced voltage output and a solid neutral connection. The voltage between G1 and G-N should be about 120 volts AC (277 on 480 units). The same approximate voltage should be found between terminals G3 and G-N (120 volts AC).

On three phase panels the G2 voltage level should also be checked. **ON 240 VOLT (DELTA) SYSTEMS BE SURE YOU KNOW WHERE THE HIGH VOLTAGE "WILD" LEG IS. IT MUST BE IN THE SAME LOCATION ON THE LINE SIDE AS IT IS ON THE GENERATOR SIDE.** (i.e. if it's on L-2 on the line side it must be on G-2 on the generator side.

**** Notice ****

If for any reason during the check out procedure the voltage and frequency are not correct, depress the "OFF" push-button and correct the trouble before proceeding.

After verifying that the voltage and frequency are correct, depress the "OFF" push-button. The unit should shut off with no time delay. You are now ready to test the automatic start function.

To test the Automatic Transfer Switch follow the instruction in the operators manual you received with your transfer switch. If you get a fault light during the initial start up or prior to start up it is most likely a false warning light. Simply reset the A.T.S. and start over.

Once you have completed testing of the ATS, be sure you ALWAYS leave the system in standby mode unless servicing the unit. For standby operation, press the "AUTO" button on the front of the engine control. The green light should light up under the "AUTO" button.

SETTING THE EXERCISER CIRCUIT

For all ATS's see the instruction manual shipped with the ATS for instruction on setting the exercise circuit in your ATS

TROUBLESHOOTING TABLES

Note: Before doing any troubleshooting, check the digital display on the DGC-2020. Normally it will tell why the unit has failed. This will shorten your troubleshooting time and in many cases prevent the replacement of parts that may not be defective.

UNIT WILL NOT CRANK WHEN THE POWER FAILS.

1. Digital Genset Controller not in "AUTO"
2. Transfer control switch not in "AUTOMATIC" position.
3. Incorrect wiring between transfer switch and generator.
4. Defective control relay in the transfer switch.
5. Fuse (s) blown in the Digital Genset Controller.
6. Defective Digital Genset Controller
7. Loose or dirty battery terminals.
8. Defective starter.
9. Defective start solenoid.
10. Dead Battery

ENGINE WILL NOT CRANK WITH GENERATOR RUN PUSH-BUTTON DEPRESSED.

1. Battery dead.
2. Blown DC fuses on the Digital Genset Controller tripped.
3. Defective Digital Genset Controller.
4. Loose or dirty battery terminals.
5. Defective "Run/Auto" switch on generator.
6. Defective starter.
7. Defective start solenoid.
8. Locked up engine genset.

ENGINE CRANKS BUT WILL NOT START

1. Improper fuel delivery to the unit.
2. Fuel supply shut off.
3. Fuel tank empty.
4. Air in the injection system.
5. Engine fuel rack has not opened.
6. Defective CANBus on the engine

ENGINE STARTS AND THEN STOPS AND ALARM LIGHT COMES ON

1. Engine is low on oil.
2. Engine has high water temperature.
3. Engine has overspeed.
4. Engine has gone into overcrank.
5. No output from AC generator.
6. Loss of speed signal.
7. Loss of run signal.

ENGINE WILL NOT COME UP TO SPEED AFTER IT STARTS

1. Insufficient fuel volume getting to the unit.
 - a. Too small of fuel line.
 - b. Fuel racks not opened properly
2. Governor is defective.
3. AC short in generator components.

ATS PANEL WILL NOT TRANSFER TO EMERGENCY SUPPLY (GENERATOR)

1. No AC generator output from generator.
2. Defective ATS control board. See applicable transfer switch manual .
3. Circuit breaker between generator and transfer switch is either open or defective.

ATS PANEL WILL NOT RETRANSFER TO NORMAL POWER

1. Proper normal line power not available at line terminals in ATS panel.
2. Defective ATS control board. See applicable transfer switch manual .


NO AC OUTPUT FROM GENERATOR

1. Defective diode.
2. Defective voltage regulator.
3. Defective rotor.
4. Defective stator.
5. Defective exciter rotor.
6. Defective exciter stator.
7. AC short in the output leads.
8. Defective field circuit breaker.
9. Wiring error

APPENDIX

UNIT SPECIFICATIONS	PAGE 16
ENGINE MODEL NUMBER	PAGE 16
BATTERY REQUIREMENTS	PAGE 16
FULL LOAD FUEL REQUIREMENTS	PAGE 16
WIRE SIZING TABLE	PAGE 17
WIRING DIAGRAM CROSS REFERENCE	
BY MODEL NUMBER	PAGE 18
GENERATOR AC CONNECTION DIAGRAM	
120/240 VOLT SINGLE PHASE	PAGE 19
120/240 VOLT THREE PHASE	PAGE 19
120/208 VOLT THREE PHASE	PAGE 20
277/480 VOLT THREE PHASE	PAGE 20
VOLTAGE REGULATOR CONNECTION	PAGE 15
GENERATOR CONTROL PANEL WIRING	
DR20	PAGE 21
DR45, DR65, DR90, DR130, DR200	PAGE 22
DR175, DR250, DR300, DR350	PAGE 23
DR400, DR500, DR600	PAGE 24
ENGINE WIRING HARNESS	
DR20	PAGE 25
DR45, DR65, DR90, DR130, DR200	PAGE 26
DR175, DR250, DR300, DR350	PAGE 27
DR400, DR500, DR600	PAGE 28
GENERATOR CROSS REFERENCE	PAGE 29
WARRANTY STATEMENT	PAGE 30

VOLTAGE REGULATOR WIRING THREE PHASE AND SINGLE PHASE

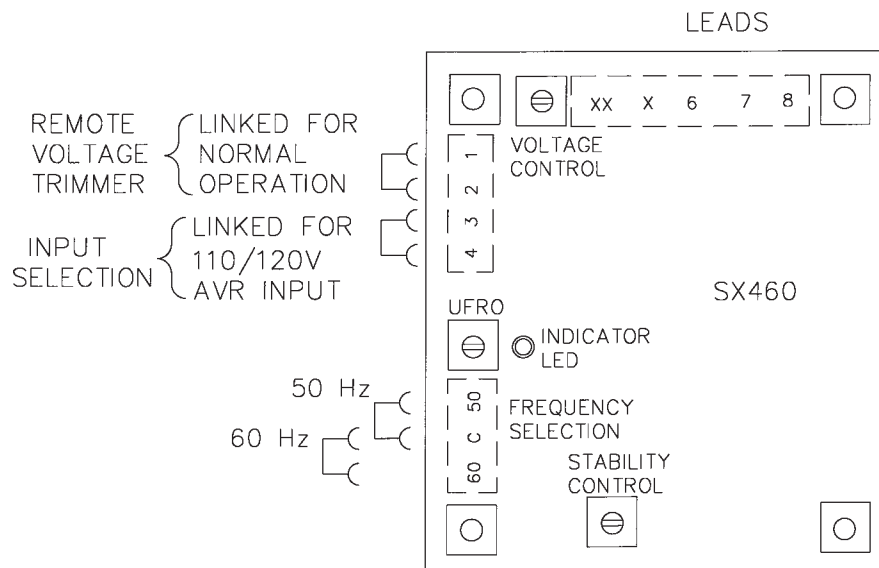

APPENDIX 1 SPECIFICATIONS TABLES

MODEL	WATTS	VOLTS	PF	AMP	HZ	PH	ENGINE MODEL	ENGINE VOLTAGE	BATTERY BCI/CCA	FULL LOAD FUEL REQ.
DR2014-A	20,000	120/240	1.0	83	60	1	ISUZU 4LE2	12 VOLTS	24/650	1.8 GAL
DR2014-D	20,000	120/208	0.8	69	60	3	ISUZU 4LE2	12 VOLTS	24/650	1.8 GAL
DR2014-J	20,000	120/240	0.8	60	60	3	ISUZU 4LE2	12 VOLTS	24/650	1.8 GAL
DR2014-L	20,000	277/480	0.8	30	60	3	ISUZU 4LE2	12 VOLTS	24/650	1.8 GAL
DR4514-A	45,000	120/240	1.0	187	60	1	IVECO NEF45 AMI	12 VOLTS	24/650	2.8 GAL
DR4514-D	45,000	120/208	0.8	156	60	3	IVECO NEF45 AMI	12 VOLTS	24/650	2.8 GAL
DR4514-J	45,000	120/240	0.8	135	60	3	IVECO NEF45 AMI	12 VOLTS	24/650	2.8 GAL
DR4514-L	45,000	277/480	0.8	68	60	3	IVECO NEF45 AMI	12 VOLTS	24/350	2.8 GAL
DR6514-A	65,000	120/240	1.0	270	60	1	IVECO NEF45 SM2	12 VOLTS	24/650	5.2 GAL
DR6514-D	65,000	120/208	0.8	225	60	3	IVECO NEF45 SM2	12 VOLTS	24/650	5.2 GAL
DR6514-J	65,000	120/240	0.8	195	60	3	IVECO NEF45 SM2	12 VOLTS	24/650	5.2 GAL
DR6514-L	65,000	277/480	0.8	97	60	3	IVECO NEF45 SM2	12 VOLTS	24/650	5.2 GAL
DR9014-A	90,000	120/240	1.0	375	60	1	IVECO NEF45 TM1X	12 VOLTS	31/900	6.8 GAL
DR9014-D	90,000	120/208	0.8	312	60	3	IVECO NEF45 TM1X	12 VOLTS	31/900	6.8 GAL
DR9014-J	90,000	120/240	0.8	270	60	3	IVECO NEF45 TM1X	12 VOLTS	31/900	6.8 GAL
DR9014-L	90,000	277/480	0.8	135	60	3	IVECO NEF45 TM1X	12 VOLTS	31/900	6.8 GAL
DR13014-A	130,000	120/240	1.0	541	60	1	IVECO NEF67 TE2X	12 VOLTS	31/900	8.9 GAL
DR13014-D	130,000	120/208	0.8	451	60	3	IVECO NEF67 TE2X	12 VOLTS	31/900	8.9 GAL
DR13014-J	130,000	120/240	0.8	390	60	3	IVECO NEF67 TE2X	12 VOLTS	31/900	8.9 GAL
DR13014-L	130,000	277/480	0.8	195	60	3	IVECO NEF67 TE2X	12 VOLTS	31/900	8.9 GAL
DR17514-A	175,000	120/240	1.0	729	60	1	IVECO NEF67 TE2X	12 VOLTS	4D/1200	10.9 GAL
DR17514-D	175,000	120/208	0.8	607	60	3	IVECO NEF67 TE2X	12 VOLTS	4D/1200	10.9 GAL
DR17514-J	175,000	120/240	0.8	526	60	3	IVECO NEF67 TE2X	12 VOLTS	4D/1200	10.9 GAL
DR17514-L	175,000	277/480	0.8	263	60	3	IVECO NEF67 TE2X	12 VOLTS	4D/1200	10.9 GAL
DR200D4-D	200,000	120/208	0.8	607	60	3	DEUTZ BF4M1013FC	12 VOLTS	4D/1200	15.1 GAL
DR200D4-J	200,000	120/240	0.8	526	60	3	DEUTZ BF4M1013FC	12 VOLTS	4D/1200	15.1 GAL
DR200D4-L	200,000	277/480	0.8	263	60	3	DEUTZ BF4M1013FC	12 VOLTS	4D/1200	15.1 GAL
DR25014-D	250,000	120/208	0.8	867	60	3	IVECO CURSOR 87 TE1D	24 VOLTS	(2) 4D/1200	16.3 GAL
DR25014-J	250,000	120/240	0.8	751	60	3	IVECO CURSOR 87 TE1D	24 VOLTS	(2) 4D/1200	16.3 GAL
DR25014-L	250,000	277/480	0.8	375	60	3	IVECO CURSOR 87 TE1D	24 VOLTS	(2) 4D/1200	16.3 GAL
DR30014-D	300,000	120/208	0.8	1040	60	3	IVECO CURSOR 10 TE1D	24 VOLTS	(2) 4D/1200	21.3 GAL
DR30014-J	300,000	120/240	0.8	902	60	3	IVECO CURSOR 10 TE1D	24 VOLTS	(2) 4D/1200	21.3 GAL
DR30014-L	300,000	277/480	0.8	451	60	3	IVECO CURSOR 10 TE1D	24 VOLTS	(2) 4D/1200	21.3 GAL
DR35014-D	350,000	120/208	0.8	1214	60	3	IVECO CURSOR 13 TE2X	24 VOLTS	(2) 4D/1200	22.2 GAL
DR35014-J	350,000	120/240	0.8	1052	60	3	IVECO CURSOR 13 TE2X	24 VOLTS	(2) 4D/1200	22.2 GAL
DR35014-L	350,000	277/480	0.8	526	60	3	IVECO CURSOR 13 TE2X	24 VOLTS	(2) 4D/1200	22.2 GAL
DR400V4-D	400,000	120/208	0.8	1390	60	3	VOLVO TAD1242GE-GS2	24 VOLTS	(2) 4D/1200	25.5 GAL
DR400V4-J	400,000	120/240	0.8	1204	60	3	VOLVO TAD1242GE-GS2	24 VOLTS	(2) 4D/1200	25.5 GAL
DR400V4-L	400,000	277/480	0.8	602	60	3	VOLVO TAD1242GE-GS2	24 VOLTS	(2) 4D/1200	25.5 GAL
DR500V4-J	500,000	120/208	0.8	1734	60	3	VOLVO TAD1641GE-GS2	24 VOLTS	(2) 4D/1200	32.2 GAL
DR500V4-J	500,000	120/240	0.8	1503	60	3	VOLVO TAD1641GE-GS2	24 VOLTS	(2) 4D/1200	32.2 GAL
DR500V4-L	500,000	277/480	0.8	751	60	3	VOLVO TAD1641GE-GS2	24 VOLTS	(2) 4D/1200	32.2 GAL
DR600V4-L	600,000	277/480	0.8	902	60	3	VOLVO TWD1643GE-GS3	24 VOLTS	(2) 4D/1200	43.0 GAL

Note: De-rate unit power ratings by 3-1/2 % per 1000 feet elevation above sea level.

APPENDIX 2

The table below is based on Table 310.16 in the National Electric Code 2008 Edition

Allowable ampacity of insulated conductors rated 0 through 2000 volts, 75°C through 90°C. Not more than three current-carrying conductors in Raceway, Cable or Earth (Direct Buried). Adjusted for 40°C (104°F) ambient temperature.

Copper 75°C	Copper 90°C		Aluminum Copper Clad Aluminum 75°C	Aluminum Copper Clad Aluminum 90°C
Wire Type: RHW THHW, THW THWN, XHHW USE, ZW	Wire Type: TBS, SA, SIS FEP, FEPB, MI, RHH RHW-2, THHN THHW, THW-2 XHH, XHHW XHHW-2, ZW-2	SIZE AWG OR kcmil	Wire Type: RHW THHW, THW THWN, XHHW USE	Wire Type: TBS, SA, SIS, THHN THHW, THW-2 THWN-2, RHH RHW-2, USE-2 XHH, XHHW XHHW-2, ZW-2
44	50	8	35	41
57	68	6	44	55
75	86	4	57	68
88	100	3	66	77
101	118	2	79	91
114	137	1	88	105
132	155	1/0	106	123
154	177	2/0	119	137
176	205	3/0	136	159
202	237	4/0	158	187
224	264	250	180	209
251	291	300	202	232
273	319	350	220	255
295	346	400	238	278
334	391	500	273	319
370	432	600	299	350
405	473	700	330	382
418	487	750	339	396
431	505	800	348	410
458	532	900	374	437
480	560	1000	392	455
519	605	1250	427	496
550	642	1500	458	532
572	669	1750	480	560
585	683	2000	493	573
For additional information see table 310.16 of the National Electric Code				


APPENDIX 3 WIRING DIAGRAMS CROSS REFERENCE

MODEL	WATTS	VOLTS	PHASE	AC CONNECTION DIAGRAM	DC ENGINE CONTROL	ENGINE WIRING HARNESS
DR20I4-A	20,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 25
DR20I4-D	20,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 25
DR20I4-J	20,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 25
DR20I4-L	20,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 25
DR45I4-A	45,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 26
DR45I4-D	45,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR45I4-J	45,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR45I4-L	45,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR65I4-A	65,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 26
DR65I4-D	65,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR65I4-J	65,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR65I4-L	65,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR90I4-A	90,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 26
DR90I4-D	90,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR90I4-J	90,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR90I4-L	90,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR130I4-A	130,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 26
DR130I4-D	130,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR130I4-J	130,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR130I4-L	130,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR175I4-A	175,000	120/240	SINGLE	PAGE 19	PAGE 22	PAGE 26
DR175I4-D	175,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR175I4-J	175,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR175I4-L	175,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR200D4-D	200,000	120/208	THREE	PAGE 20	PAGE 22	PAGE 26
DR200D4-J	200,000	120/240	THREE	PAGE 19	PAGE 22	PAGE 26
DR200D4-L	200,000	277/480	THREE	PAGE 20	PAGE 22	PAGE 26
DR250I4-D	250,000	120/208	THREE	PAGE 20	PAGE 23	PAGE 27
DR250I4-J	250,000	120/240	THREE	PAGE 19	PAGE 23	PAGE 27
DR250I4-L	250,000	277/480	THREE	PAGE 20	PAGE 23	PAGE 27
DR300I4-D	300,000	120/208	THREE	PAGE 20	PAGE 23	PAGE 27
DR300I4-J	300,000	120/240	THREE	PAGE 19	PAGE 23	PAGE 27
DR300I4-L	300,000	277/480	THREE	PAGE 20	PAGE 23	PAGE 27
DR350I4-D	350,000	120/208	THREE	PAGE 20	PAGE 23	PAGE 27
DR350I4-J	350,000	120/240	THREE	PAGE 19	PAGE 23	PAGE 27
DR350I4-L	350,000	277/480	THREE	PAGE 20	PAGE 23	PAGE 27
DR400V4-D	400,000	120/208	THREE	PAGE 20	PAGE 24	PAGE 28
DR400V4-J	400,000	120/240	THREE	PAGE 19	PAGE 24	PAGE 28
DR400V4-L	400,000	277/480	THREE	PAGE 20	PAGE 24	PAGE 28
DR500V4-D	500,000	120/208	THREE	PAGE 20	PAGE 24	PAGE 28
DR500V4-J	500,000	120/240	THREE	PAGE 19	PAGE 24	PAGE 28
DR500V4-L	500,000	277/480	THREE	PAGE 20	PAGE 24	PAGE 28
DR600V4-L	600,000	277/480	THREE	PAGE 20	PAGE 24	PAGE 28


THREE PHASE AC WIRING - DELTA

SINGLE PHASE AC WIRING

SINGLE PHASE 120/240 VOLTS

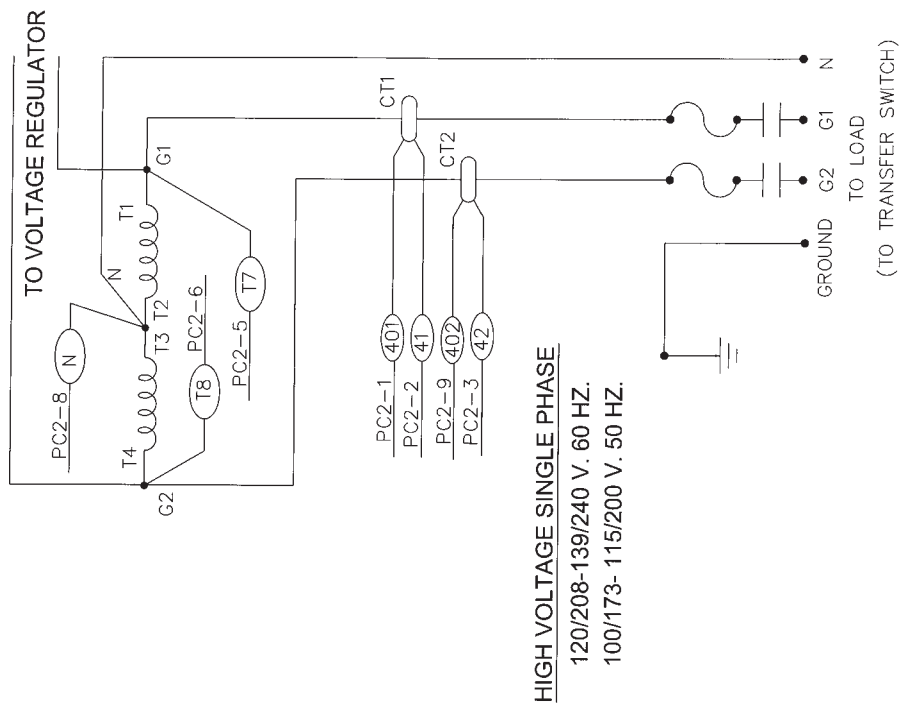


THREE PHASE -DELTA 120/240 VOLTS

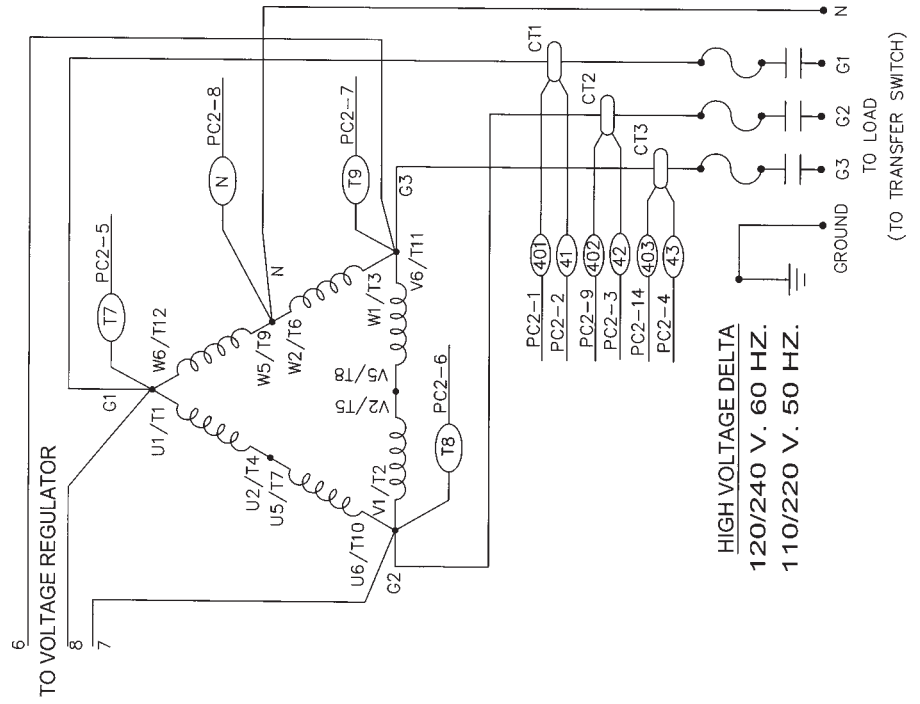


THREE PHASE AC WIRING HIGH AND LOW WYE

THREE PHASE-HIGH WYE 277/480 VOLTS

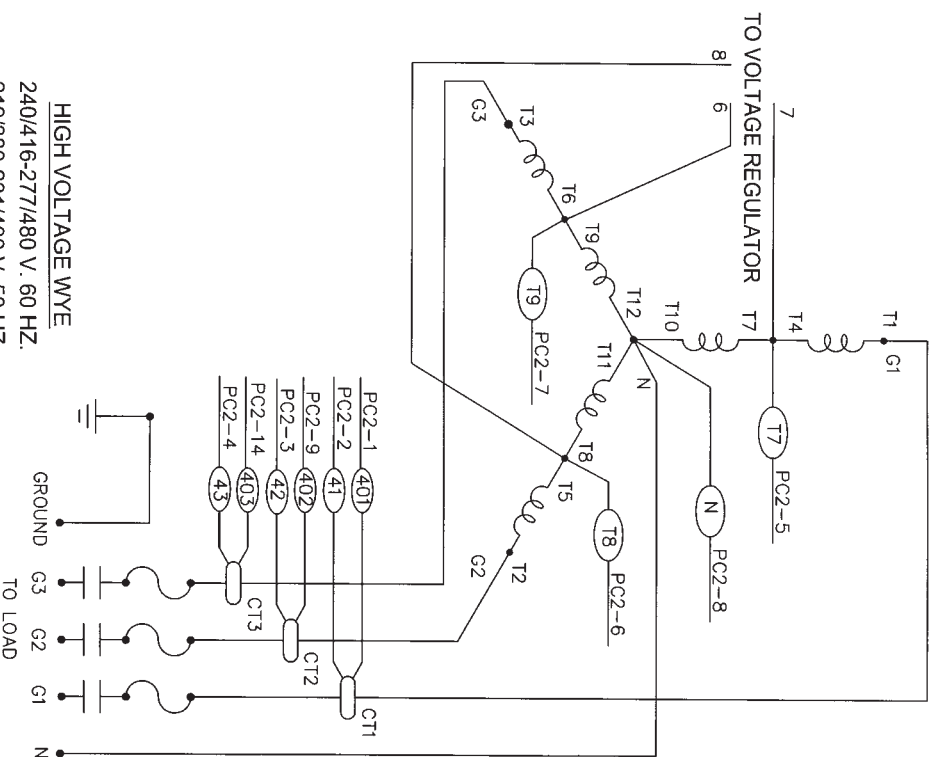

HIGH VOLTAGE WYE
240/416-277/480 V. 60 HZ.
219/380-231/400 V. 50 HZ.


THREE PHASE-LOW WYE 120/208 VOLTS

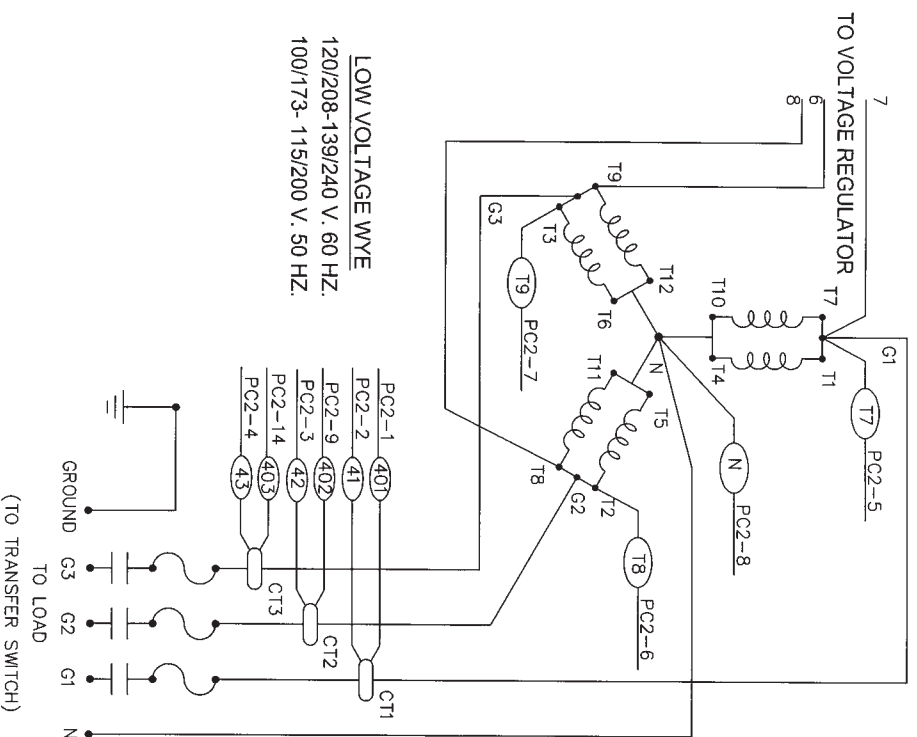

LOW VOLTAGE WYE
120/208-139/240 V. 60 HZ.
100/173- 115/200 V. 50 HZ.


(TO TRANSFER SWITCH)

ENGINE CONTROL DR20

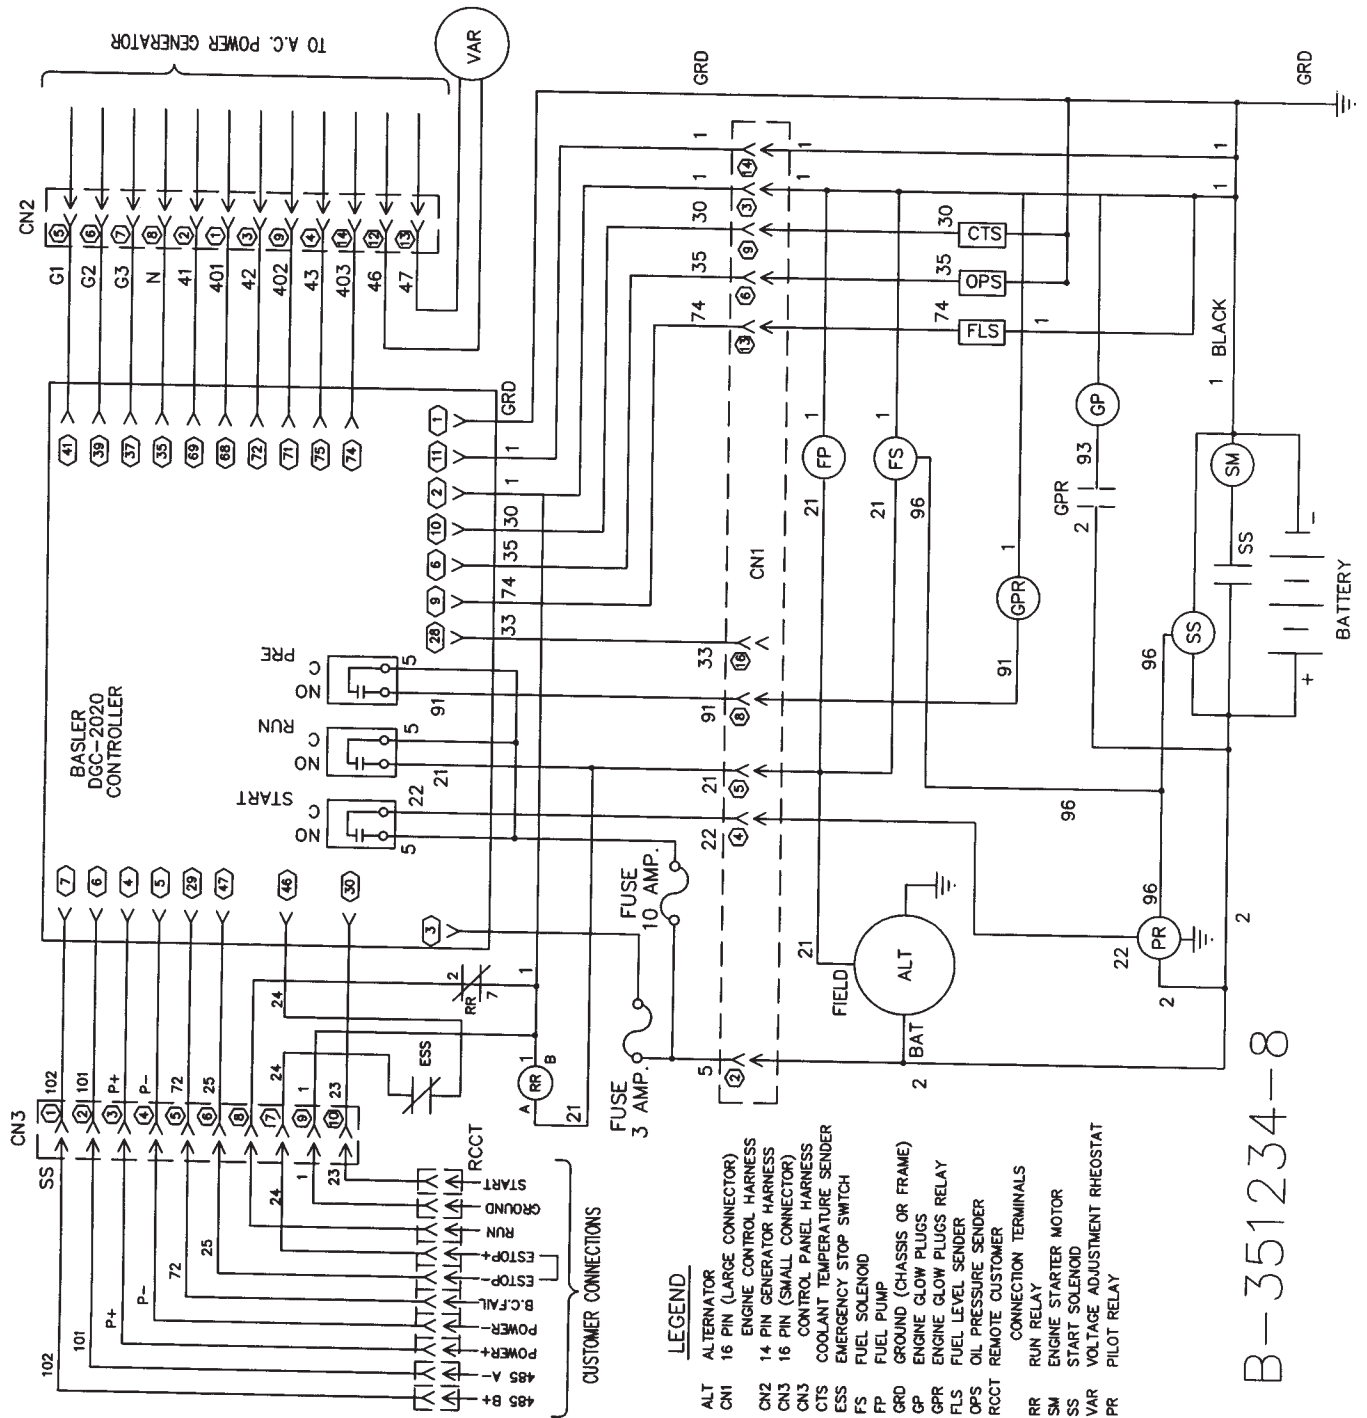


B-351234-8

ENGINE CONTROL DR45, DR65, DR90, DR130, DR200

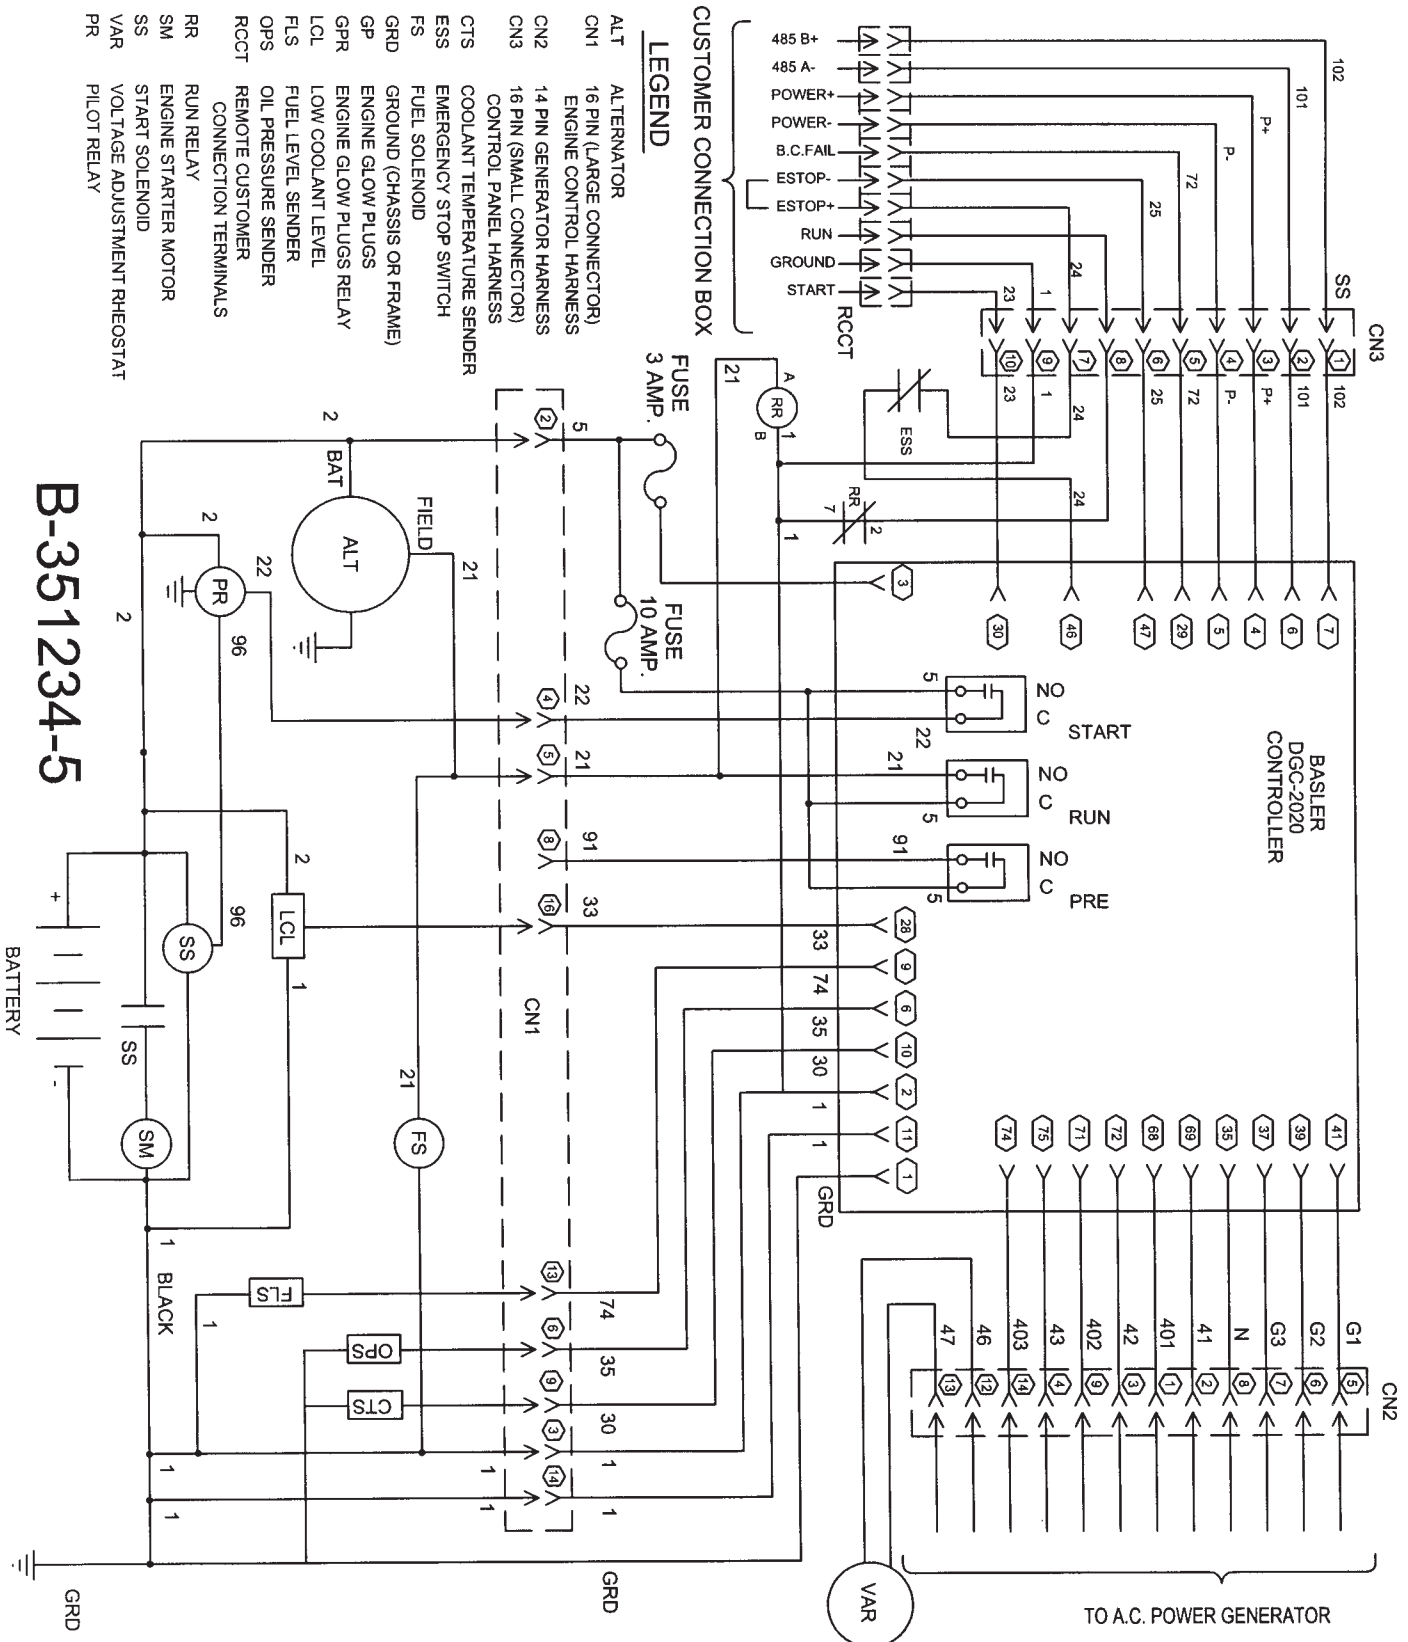

B-351234-5


ENGINE CONTROL DR175, DR250, DR300, DR350

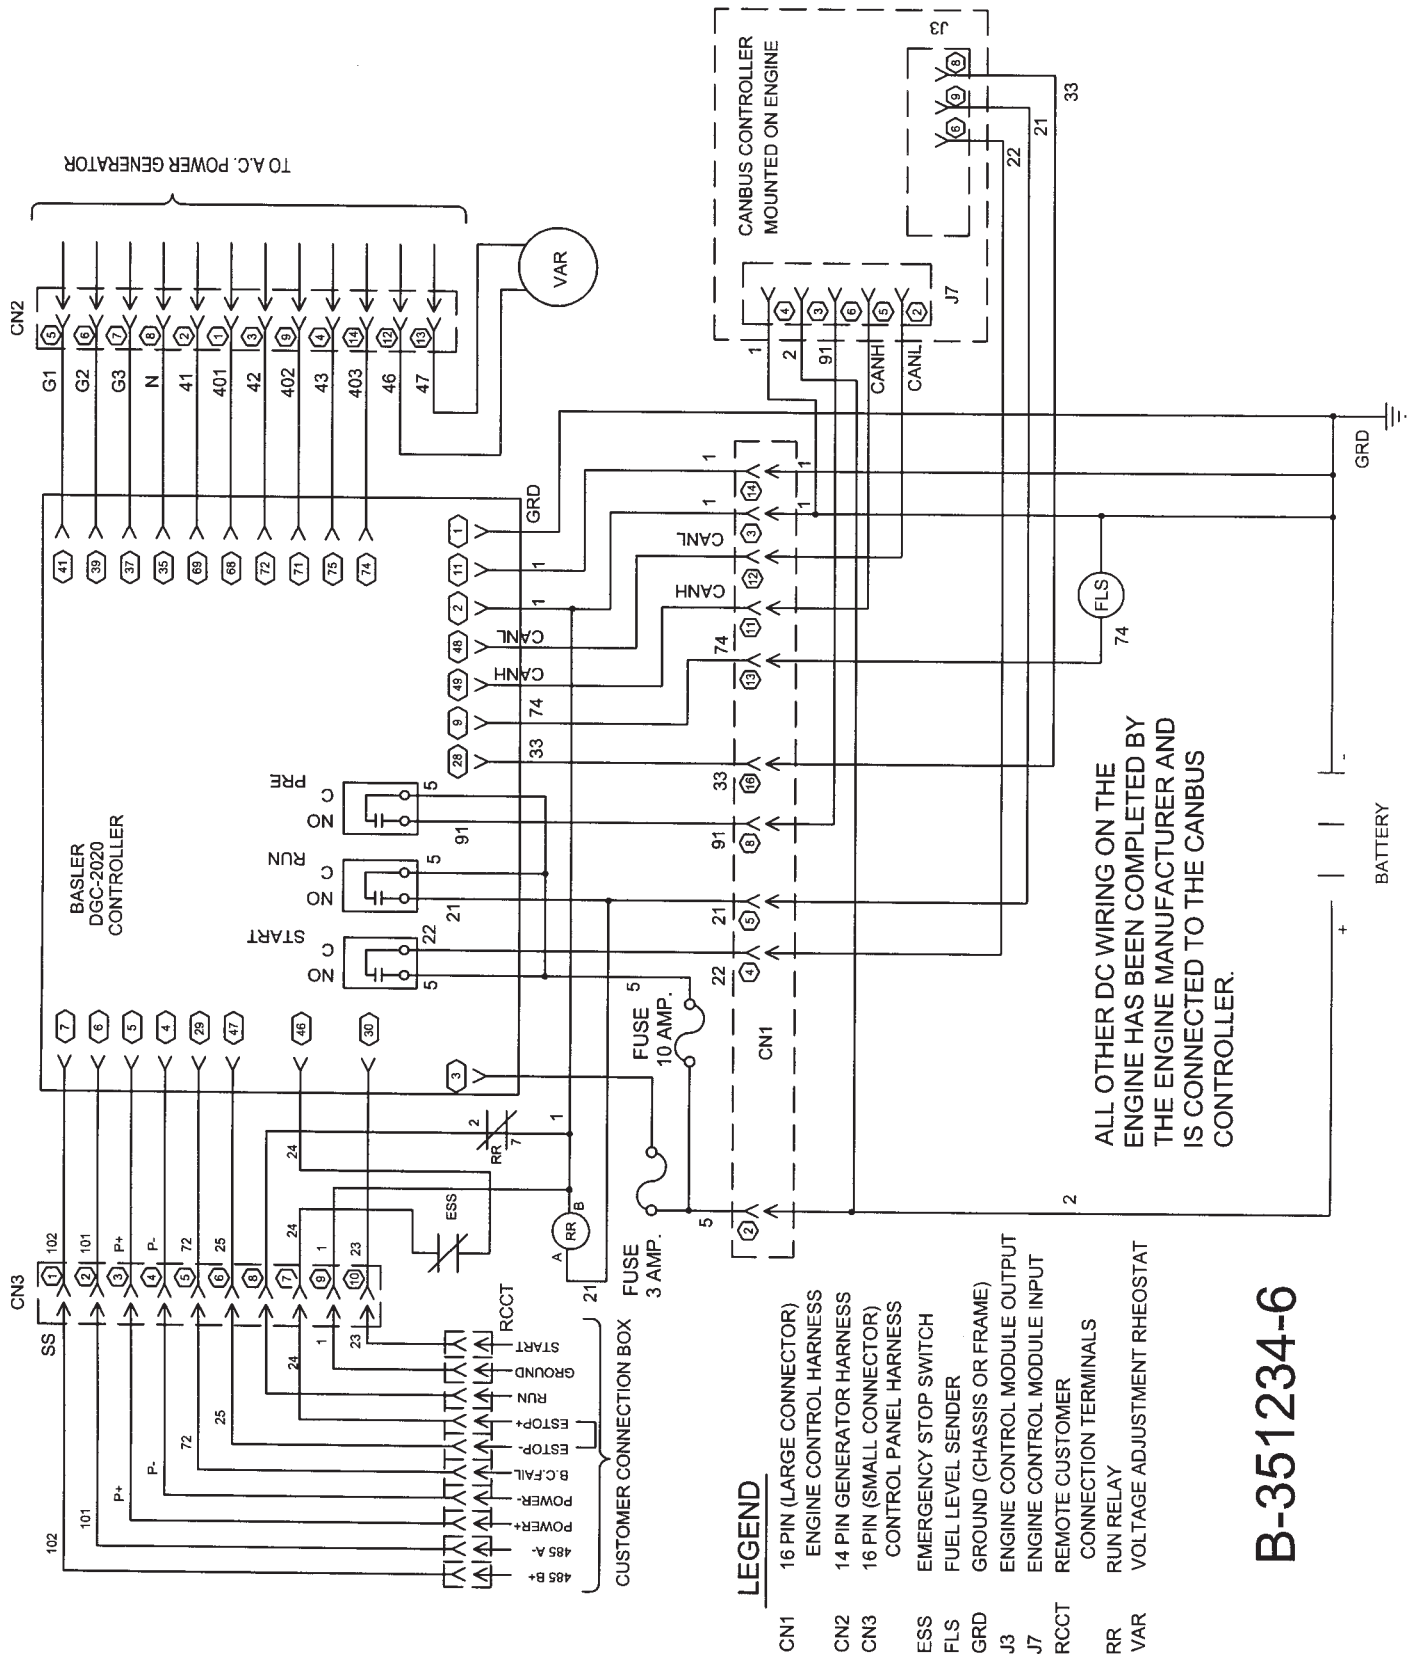


B-351234-6

ENGINE CONTROL DR400, DR500, DR600,


B-351234-7

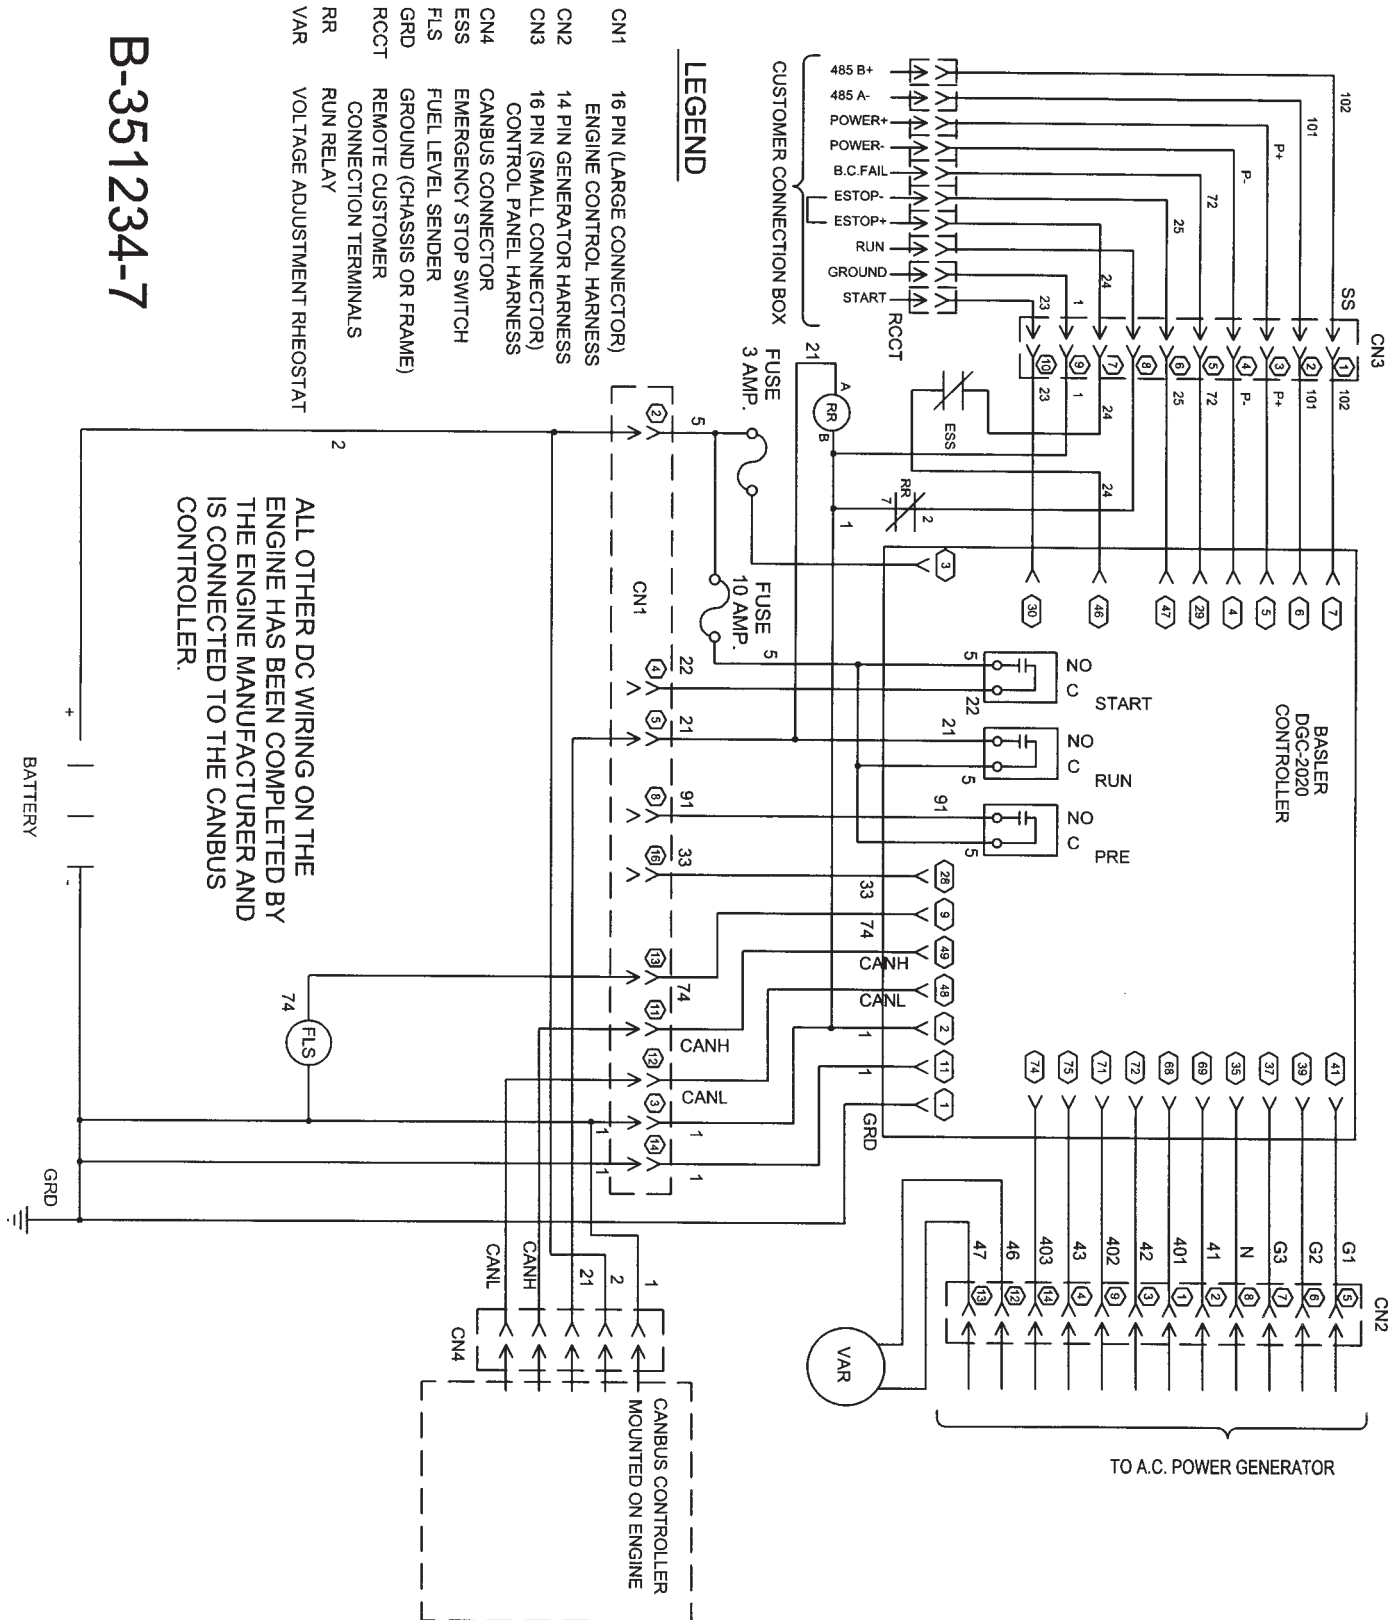


ENGINE WIRING HARNESS DR20

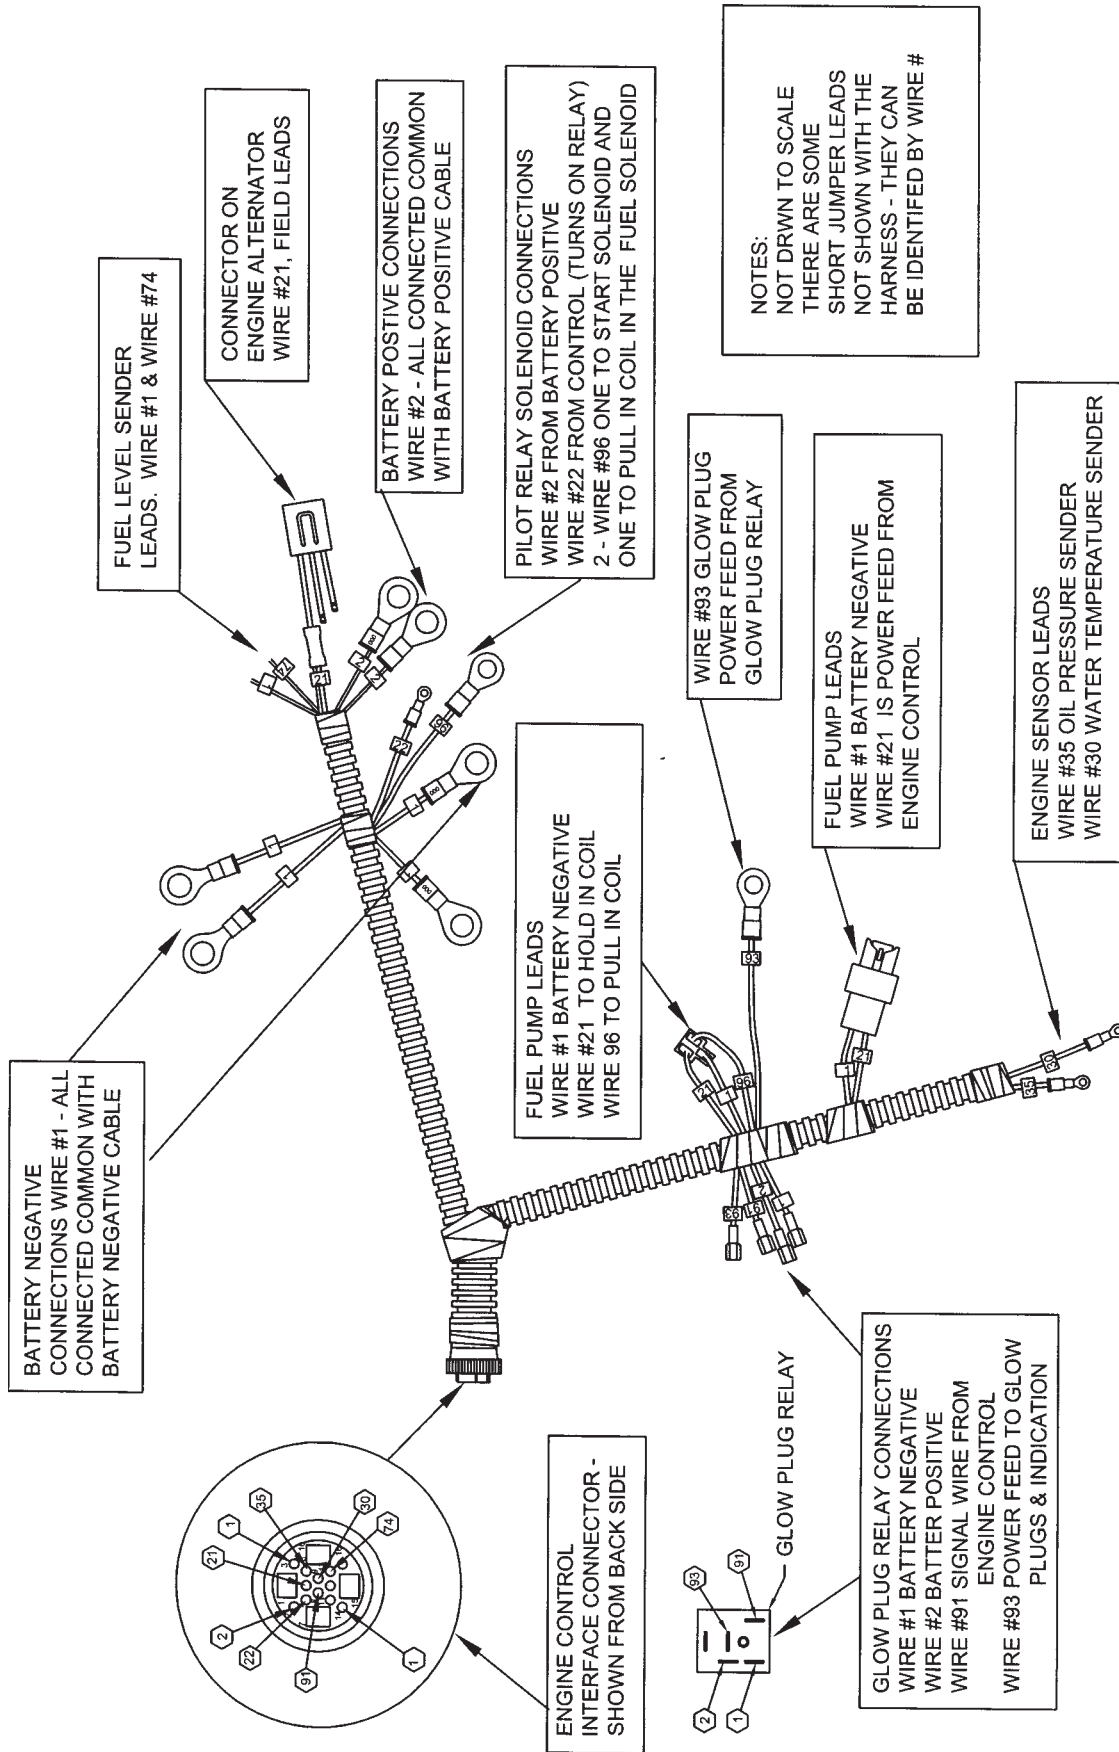

ENGINE WIRING HARNESS DR45, DR65, DR90, DR130, DR200

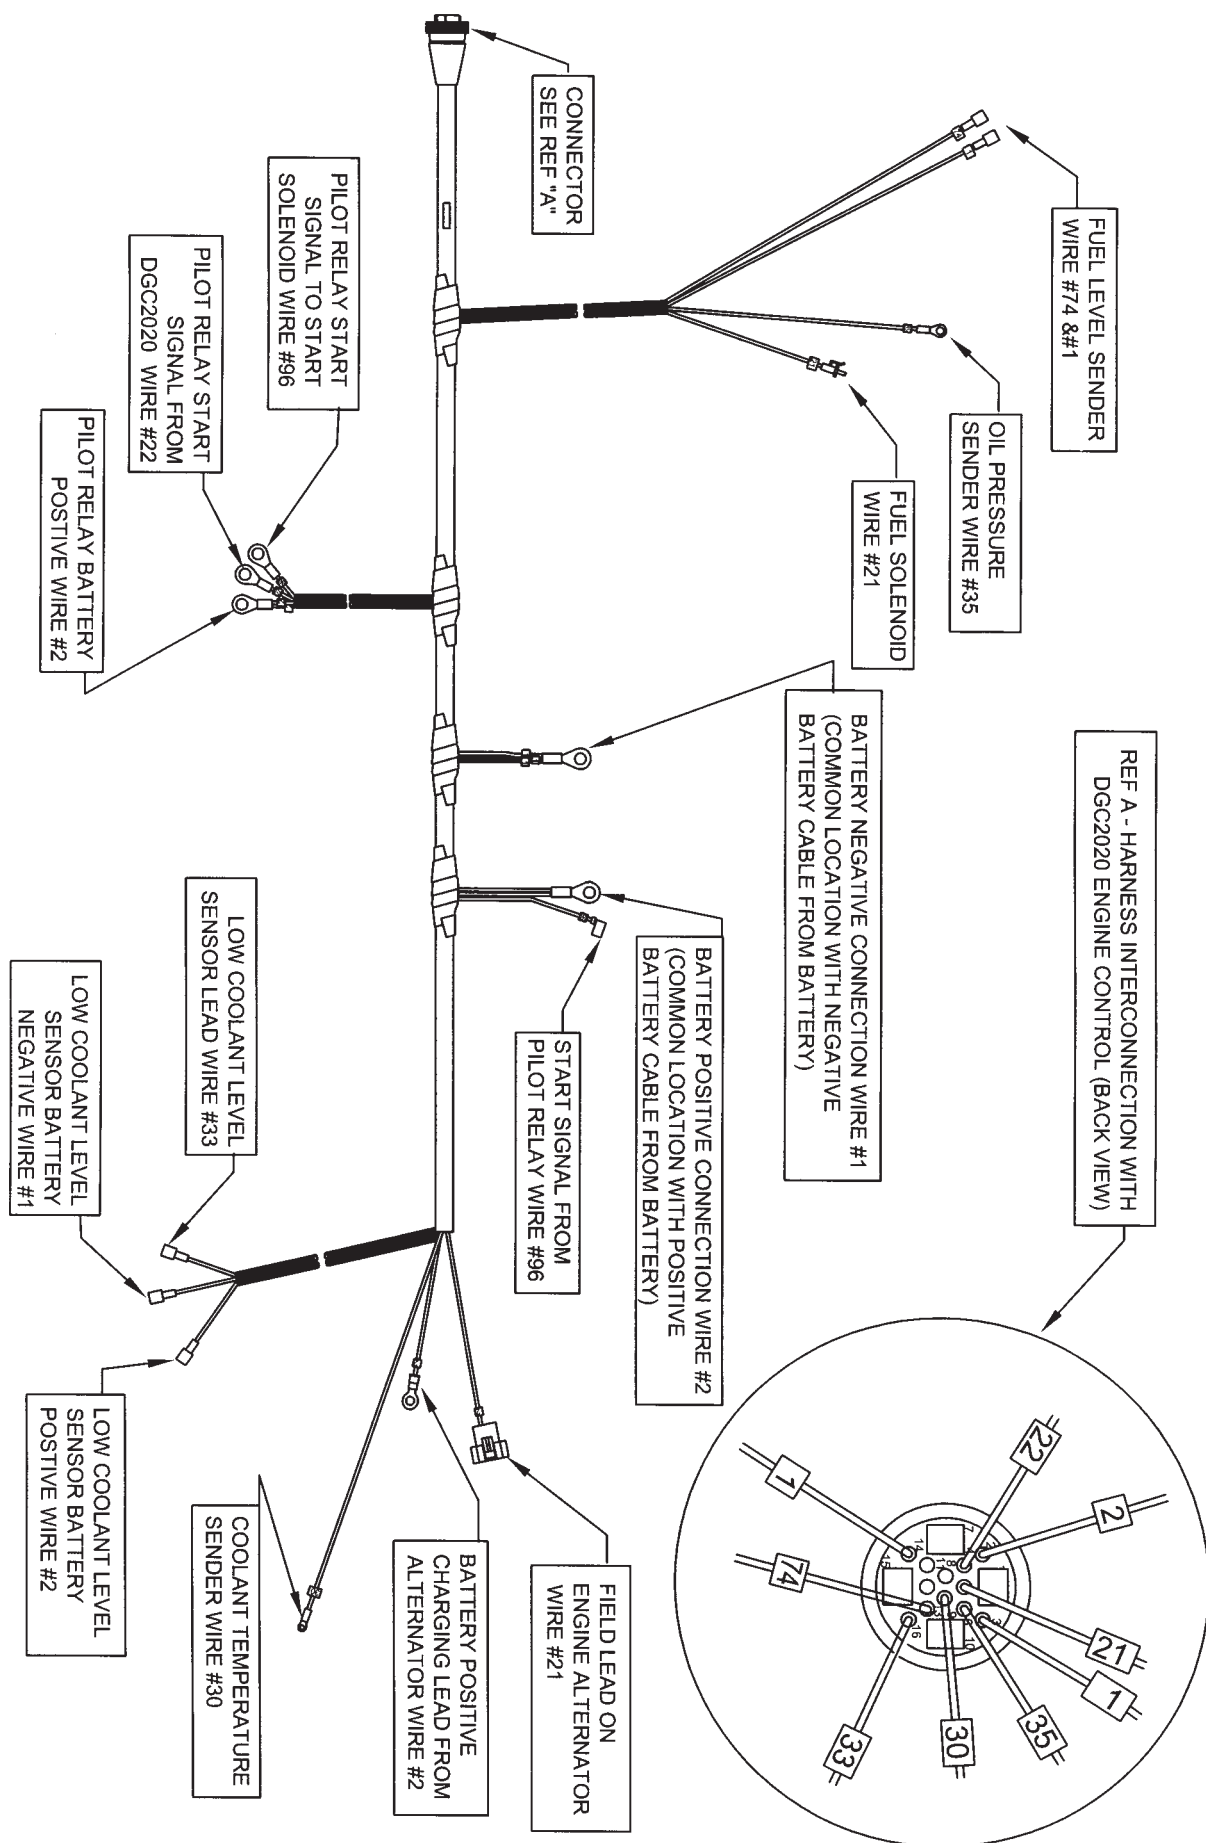


ENGINE WIRING HARNESS DR175, DR250, DR300, DR350

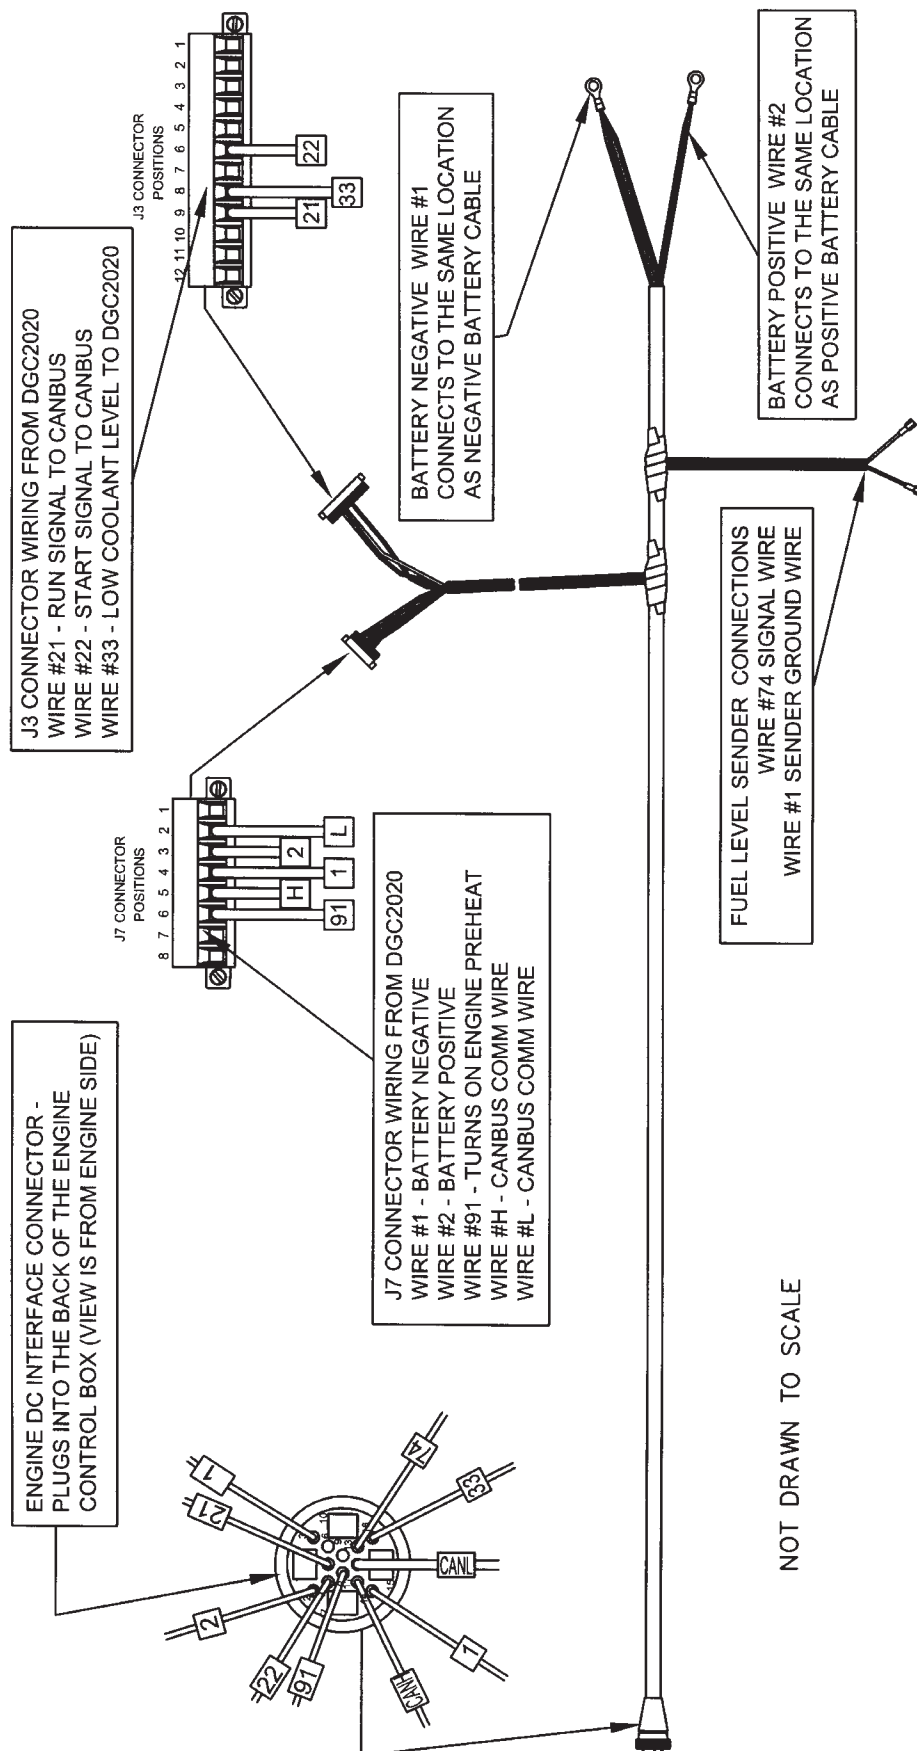

NOT DRAWN TO SCALE

ENGINE WIRING HARNESS DR400, DR500, DR600

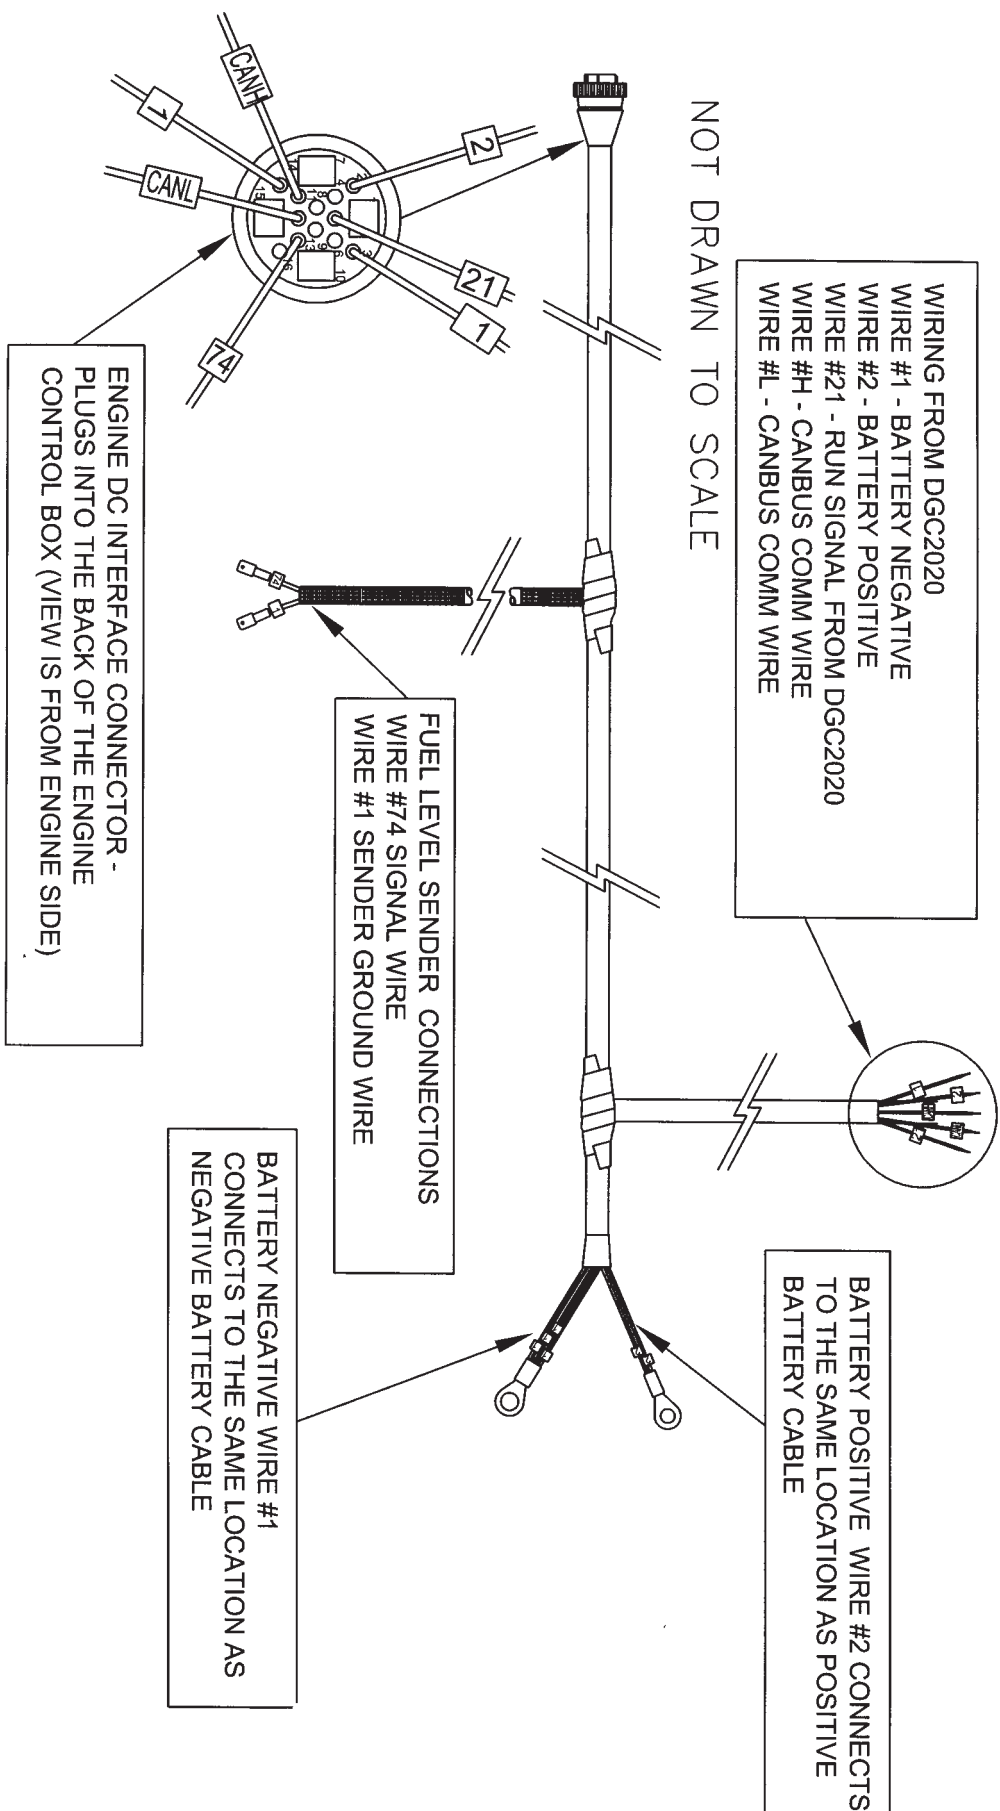

APPENDIX 4

GENERATOR CROSS REFERENCE

MODEL	BASE P/N	VOLTS	PHASE	WINCO P/N	NEWAGE MODEL #	WINDING GROUP	GENERATOR LEADS
DR20I4-A	300545-1	120/240	SINGLE	350097-91	BCI184E	6	4
DR20I4-D	300545-2	120/208	THREE	350097-9	BCI184E	311	12
DR20I4-J	300545-2	120/240	THREE	350097-9	BCI184E	311	12
DR20I4-L	300545-2	277/480	THREE	350097-9	BCI184E	311	12
DR45I4-A	351907-1	120/240	SINGLE	350003-731	UCI224E	6	4
DR45I4-D	351907-2	120/208	THREE	350003-702	UCI224D	311	12
DR45I4-J	351907-2	120/240	THREE	350003-702	UCI224D	311	12
DR45I4-L	351907-2	277/480	THREE	350003-702	UCI224D	311	12
DR65I4-A	351924-1	120/240	SINGLE	350003-751	UCI224G	6	4
DR65I4-D	351924-2	120/208	THREE	35000-704	UCI224F	311	12
DR65I4-J	351924-2	120/240	THREE	35000-704	UCI224F	311	12
DR65I4-L	351924-2	277/480	THREE	35000-704	UCI224F	311	12
DR90I4-A	351914-1	120/240	SINGLE	350004-711	UCI274C	6	4
DR90I4-D	351914-2	120/208	THREE	350004-701	UCI274C	311	12
DR90I4-J	351914-2	120/240	THREE	350004-701	UCI274C	311	12
DR90I4-L	351914-2	277/480	THREE	350004-701	UCI274C	311	12
DR130I4-A	351949-1	120/240	SINGLE	350004-101	UCI274F	6	4
DR130I4-D	351949-0	120/208	THREE	350004-710	UCI274F	311	12
DR130I4-J	351949-0	120/240	THREE	350004-710	UCI274F	311	12
DR130I4-L	351949-0	277/480	THREE	350004-710	UCI274F	311	12
DR175I4-A	351955-1	120/240	SINGLE	350004-106	UCI274H	6	4
DR175I4-D	351955-0	120/208	THREE	350004-105	UCI274H	311	12
DR175I4-J	351955-0	120/240	THREE	350004-105	UCI274H	311	12
DR175I4-L	351955-0	277/480	THREE	350004-105	UCI274H	311	12
DR200D4-D	351973-1	120/208	THREE	350004-117	UCI274J	311	12
DR200D4-J	351973-1	120/240	THREE	350004-117	UCI274J	311	12
DR200D4-L	351973-1	277/480	THREE	350004-117	UCI274J	311	12
DR250I4-D	351937-1	120/208	THREE	350031-2	HCI434D	311	12
DR250I4-J	351937-1	120/240	THREE	350031-2	HCI434D	311	12
DR250I4-L	351937-1	277/480	THREE	350031-2	HCI434D	311	12
DR300I4-D	351943-1	120/208	THREE	350031-3	HCI434E	311	12
DR300I4-J	351943-1	120/240	THREE	350031-3	HCI434E	311	12
DR300I4-L	351943-1	277/480	THREE	350031-3	HCI434E	311	12
DR350I4-D	351957-2	120/208	THREE	350037-7	HCI434F	311	12
DR350I4-J	351957-2	120/240	THREE	350037-7	HCI434F	311	12
DR350I4-L	351957-1	277/480	THREE	350031-3	HCI343E	311	12
DR400V4-D	351945-2	120/208	THREE	351599-1	HCI534C	311	12
DR400V4-J	351945-2	120/240	THREE	351599-1	HCI534C	311	12
DR400V4-L	351945-1	277/480	THREE	350031-7	HCI434F	311	12
DR500V4-D		120/208	THREE	351599-3	HCI534E	311	12
DR500V4-J		120/240	THREE	351599-3	HCI534E	311	12
DR500V4-L		277/480	THREE	351599-2	HCI534D	311	12
DR600V4-L		277/480	THREE	351599-3	HCI534E	311	12



Limited Warranty

WINPOWER, Incorporated warrants to the original purchaser for 12 months or 1000 hours which ever occurs first, that goods manufactured or supplied by it will be free from defects in workmanship and material, provided such goods are installed, operated and maintained in accordance with WINPOWER written instructions.

WINPOWER's sole liability, and Purchaser's sole remedy for a failure under this warranty, shall be limited to the repair of the product. At WINPOWER's option, material found to be defective in material or workmanship under normal use and service will be repaired or replaced. For warranty service, return the product within 12 months or 1000 hours which ever occurs first from the date of purchase, transportation charges prepaid, to your nearest WINPOWER Authorized Service Center or to WINPOWER, Inc. at Le Center Minnesota.

THERE IS NO OTHER EXPRESS WARRANTY.

To the extent permitted by law, any and all warranties, including those of merchantability and fitness for a particular purpose, are limited to 12 months or 1000 hours which ever occurs first, from date of purchase. In no event is WINPOWER liable for incidental or consequential damages.

Note: Some states do not allow limitation on the duration of implied warranty and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply in every instance. This warranty gives you specific legal rights which may vary from state to state.

WINPOWER reserves the right to change or improve its products without incurring any obligations to make such changes or improvement on products purchased previously.

EXCLUSIONS:

WINPOWER does not warrant Engines. Engines are covered exclusively by the warranties of their respective manufacturers, see enclosed warranties.

WINPOWER does not warrant Batteries, or Other Component Parts that are warranted by their respective manufacturers.

WINPOWER does not warrant modifications or alterations which were not made by WINPOWER, Inc.

WINPOWER does not warrant products which have been subjected to misuse and/or negligence or have been involved in an accident.

WINPOWER
A Division of **WD** Dyna Technology Inc
225 S. Cordova
Le Center MN 56057
Phone - 507-357-6707
www.winpowerinc.com