



Models:

**4.3L**  
**Stationary and Constant Speed Mobile**  
**OE43L58XCTF**  
**LORGB04.3PNA**

**Propane, Liquefied Petroleum Gas (LPG)**  
**Natural Gas (NG) Fueled**

**▲ WARNING:** This product can expose you to chemicals, including carbon monoxide and benzene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

## Product Identification Information

---

Product identification numbers determine service parts. Record the product identification numbers in the spaces below immediately after unpacking the products so that the numbers are readily available for future reference.

### Engine Identification

Record the product identification information from the engine nameplate.

Model Designation: \_\_\_\_\_

Serial Number: \_\_\_\_\_

### Purchase Date

Upon purchase of your Origin Engines equipment, record the purchase date for reference when communicating with your authorized distributor/dealer.

## U.S. EPA Legal Requirements

Your Origin 4.3L engine has been certified by the U.S. Environmental Protection Agency (EPA) for nonroad constant-speed mobile and stationary applications.

EPA requires that stationary engines remain in one location for one year or more, unless it is a seasonal engine, in which case it must remain in one location for a full season. If an engine does not meet EPA's definition of a stationary engine, it is then considered a mobile engine. As a guideline, engines with wheels under them (vehicles or trailers) are considered mobile engines; engines bolted to the ground are stationary, and engines on skids may be either mobile or stationary.

It is illegal to operate this engine in an on-highway application or a nonroad variable-speed (foot pedal or hand throttle controlled) application.

If your engine is used in a constant-speed mobile application, you must operate and maintain your engine as specified in this Operator's Manual to ensure emissions compliance.

If your engine is used in a constant-speed stationary application, the U.S. EPA requires you to do one of the following two options to ensure emissions compliance:

1. Operate and maintain your engine as specified in this Operator's Manual. In addition, you are required by law to keep detailed maintenance records.
2. If you do not operate and maintain your engine as specified in this Operator's Manual, your engine will be considered a non-certified engine.

In this case, you must:

- Keep a maintenance plan and records of conducted maintenance.
- To the extent practicable, maintain and operate the engine in a manner consistent with good air pollution control practice for minimizing emissions.

Per section 113 of the U.S. Clean Air Act, failure to abide by these legal requirements can result in fines up to \$29,750 per day.

A maintenance plan and log are provided at the back of this manual for you to record your engine maintenance. Update the log each time you service your engine.

# Table of Contents

|  |           |
|--|-----------|
| <b>Safety Precautions and Instructions</b> .....             | <b>5</b>  |
| <b>Introduction</b> .....                                    | <b>10</b> |
| <b>Service Assistance</b> .....                              | <b>11</b> |
| <b>Section 1. Components and Maintenance Locations</b> ..... | <b>12</b> |
| 1.0 OE43L58XCTF, Overview.....                               | 12        |
| 1.1 OE43L58XCTF Engine Top and Rear Views.....               | 13        |
| <br>   |           |
| <b>Section 2. Operation</b> .....                            | <b>14</b> |
| 2.1 Introduction .....                                       | 14        |
| 2.2 Fuel System .....  | 14        |
| 2.2.1 Components.....  | 14        |
| 2.2.2 Fuel Specifications.....                               | 19        |
| 2.2.3 Before Starting .....                                  | 20        |
| 2.2.4 Starting.....  | 21        |
| 2.2.5 Cold Weather Starting.....                             | 22        |
| 2.2.6 Monitoring Engine Operation .....                      | 23        |
| 2.2.7 Stopping.....  | 23        |
| <b>Section 3. Maintenance</b> .....                          | <b>24</b> |
| 3.1 Introduction .....                                       | 24        |
| 3.2 Safety Precautions and Instructions .....                | 24        |
| 3.3 Fluid Specifications .....                               | 26        |
| 3.3.1 Oil Recommendations.....                               | 26        |
| 3.3.2 Coolant Recommendations.....                           | 26        |
| 3.4 Periodic Maintenance Schedule .....                      | 27        |
| 3.5 Engine.....  | 28        |
| 3.5.1 Check Engine Oil .....                                 | 28        |
| 3.5.2 Change Engine Oil and Oil Filter.....                  | 29        |
| 3.5.3 Check and Clean the Air Filter .....                   | 32        |
| 3.5.4 Replace the Air Filter .....                           | 32        |
| 3.5.5 Check, Adjust and Replace the Spark Plugs.....         | 32        |
| 3.5.6 Ignition Timing.....                                   | 34        |
| 3.6 Electrical System.....                                   | 35        |
| 3.6.1 Check Battery and Connections.....                     | 35        |
| 3.6.2 Check and Adjust the Drive Belt .....                  | 36        |
| 3.6.3 Replace the Drive Belt .....                           | 38        |
| 3.6.4 Check Wiring and Electrical Connections .....          | 39        |
| 3.7 Cooling System .....                                     | 40        |
| 3.7.1 Check Coolant Level and Condition.....                 | 41        |
| 3.7.2 Check Hoses and Clamps.....                            | 41        |
| 3.7.3 Draining and Replacing the Coolant .....               | 41        |
| 3.8 Fuel System .....  | 42        |
| 3.8.1 Check Fuel Supply Pipe and Connections.....            | 42        |
| 3.8.2 Check Fuel Level (LPG only) .....                      | 42        |
| <b>Section 4. Troubleshooting</b> .....                      | <b>43</b> |
| 4.1 Introduction .....                                       | 43        |
| 4.2 Troubleshooting .....                                    | 43        |

|                   |  |           |
|-------------------|--|-----------|
| <b>Section 5.</b> | <b>Storage.....</b>                            | <b>45</b> |
| 5.1               | Preparation.....                               | 45        |
| 5.2               | Short-Term Storage (Less than 30 Days).....    | 45        |
| 5.3               | Long-Term Storage (More than 30 Days).....     | 46        |
| 5.4               | Maintenance while in Storage .....             | 46        |
| 5.5               | Removal from Storage .....                     | 46        |
| <b>Section 6.</b> | <b>Specifications.....</b>                     | <b>47</b> |
| 6.1               | Engine Specifications .....                    | 47        |
| 6.2               | Main Components Specifications .....           | 47        |
| 6.3               | Adjustment Specifications .....                | 47        |
| 6.4               | Fastener Tightening Specifications.....        | 48        |
| 6.5               | Engine Mechanical Specifications.....          | 49        |
| 6.6               | Standard Torque Specifications .....           | 51        |
| 6.7               | Maintenance Log .....                          | 52        |
| <b>Section 7.</b> | <b>Diagnostic Trouble Code (DTC) List.....</b> | <b>56</b> |
| <b>Section 8.</b> | <b>Engine and Emissions Warranty.....</b>      | <b>58</b> |

# Safety Precautions and Instructions

Read and follow all safety precautions and instructions. SAVE THESE INSTRUCTIONS.

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.



Danger indicates the presence of a hazard that **will cause severe personal injury, death, or substantial property damage.**



Warning indicates the presence of a hazard that **can cause severe personal injury, death, or substantial property damage.**



Caution indicates the presence of a hazard that **will or can cause minor personal injury or property damage.**

## NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

### Note:

A Note is used to inform you of important installation, operation, or maintenance information.

## Accidental Starting

|   |   |
|---|---|
|  | <p><b>Accidental starting.</b><br/><b>Can cause severe injury or death.</b></p> <p>Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.</p> |
|  |   |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

## Battery

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Sulfuric acid in batteries.</b><br><b>Can cause severe injury or death.</b><br>Wear protective goggles and clothing. Battery acid may cause blindness and burn skin. |
|                 |   |

**Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death.** Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

**Battery acid cleanup. Battery acid can cause severe injury or death.** Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

**Battery gases. Explosion can cause severe injury or death.** Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

**Battery short circuits. Explosion can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

## Engine Backfire/Flash Fire

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Risk of fire.</b><br><b>Can cause severe injury or death.</b><br>Do not smoke or permit flames or sparks near fuels or the fuel system. |
|                 |  |

**Servicing the fuel system. A flash fire can cause severe injury or death.** Do not smoke or permit flames or sparks near the fuel mixer, fuel line, fuel filter, or other potential sources of fuel vapors. When removing the fuel line or fuel system be aware that liquid propane can cause frostbite on contact.

**Servicing the air cleaner. A sudden backfire can cause severe injury or death.** Do not operate the engine with the air cleaner/silencer removed.

**Combustible materials. A fire can cause severe injury or death.** Engine fuels and fuel vapors are flammable and explosive. Handle these materials carefully to minimize the risk of fire or explosion. Equip the compartment or nearby area with a fully charged fire extinguisher. Select a fire extinguisher rated ABC or BC for electrical fires or as recommended by the local fire code or an authorized agency. Train all personnel on fire extinguisher operation and fire prevention procedures.

## Engine Fluids and Chemical Products

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Handling caustic engine fluids and chemical products.</b><br><b>Can cause severe chemical burns, nausea, fainting, or death.</b>  |
|                 | <p>Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.</p> |

**Fire-damaged or burned O-rings may cause the formation of hydrofluoric acid. Contact with hydrofluoric acid may cause severe skin irritation and chemical burns.** O-rings and other fluoroelastomer seals exposed to fire or temperatures above 316°C (600°F) (i.e., during welding) may decompose forming hydrofluoric acid. Avoid inhalation or skin contact. Do not incinerate O-rings. Dispose of O-ring waste material in a responsible manner.

**Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks.** Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.

## Exhaust System

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Carbon monoxide.</b><br><b>Can cause severe nausea, fainting, or death.</b> |
|                | <p>The exhaust system must be leakproof and routinely inspected.</p>           |

**Carbon monoxide symptoms. Carbon monoxide can cause severe nausea, fainting, or death.** Carbon monoxide is a poisonous gas present in exhaust gases. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Carbon monoxide poisoning symptoms include but are not limited to the following:

- Light-headedness, dizziness
- Physical fatigue, weakness in joints and muscles
- Sleepiness, mental fatigue, inability to concentrate or speak clearly, blurred vision
- Stomachache, vomiting, nausea

If experiencing any of these symptoms and carbon monoxide poisoning is possible, seek fresh air immediately and remain active. Do not sit, lie down, or fall asleep. Alert others to the possibility of carbon monoxide poisoning. Seek medical attention if the condition of affected persons does not improve within minutes of breathing fresh air.

**Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death.** Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

## Fuel System

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Explosive fuel vapors.<br/>Can cause severe injury or death.</b><br>Use extreme care when handling, storing, and using fuels. |
|                 |  |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

**Explosive fuel vapors can cause severe injury or death.** Take additional precautions when using the following fuels:

**Propane (LPG)**—Adequate ventilation is mandatory. Because propane is heavier than air, install propane gas detectors low in a room. Inspect the detectors per the manufacturer's instructions.

**Natural Gas**—Adequate ventilation is mandatory. Because natural gas rises, install natural gas detectors high in a room. Inspect the detectors per the manufacturer's instructions.

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Explosive fuel vapors.<br/>Can cause fires and severe burns.</b><br>If a gaseous odor is detected, ventilate the area and contact an authorized service technician. |
|                |  |

**Gas fuel leaks. Explosive fuel vapors can cause severe injury or death.** Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

## Hazardous Noise

|  |  |
|--|--|
|  <b>CAUTION</b> | <b>Hazardous noise.<br/>Can cause hearing loss.</b><br>Never operate the engine without a muffler or with a faulty exhaust system. |
|                 |  |

## Hazardous Voltage/Moving Parts

|  |   |
|--|---|
|  <b>WARNING</b> | <p><b>Moving parts.</b><br/><b>Can cause severe injury or death.</b></p> <p>Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.</p> |
|                 |   |

**Servicing the engine when it is operating. Exposed moving parts can cause severe injury or death.** Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

|  |   |
|--|---|
|  <b>CAUTION</b> | <p><b>Hazardous voltage.</b><br/><b>Electrical shock can cause injury.</b></p> <p>Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.</p> |
|                 |   |

## Heavy Equipment

|  |   |
|--|---|
|  <b>WARNING</b> | <p><b>Unbalanced weight.</b><br/><b>Improper lifting can cause severe injury or death and equipment damage.</b></p> <p>Use adequate lifting capacity.<br/>Always maintain a safe distance from the equipment being lifted. Never stand under the equipment.</p> |
|                |   |

## Hot Parts

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Hot engine and exhaust system.</b><br/><b>Can cause severe injury or death.</b></p> <p>Do not work on the engine until it cools.</p> |
|                 |  |

**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Hot coolant and steam.</b><br/><b>Can cause severe injury or death.</b></p> <p>Before removing the pressure cap, stop the engine and allow it to cool. Then loosen the pressure cap to relieve pressure.</p> |
|                 |  |

This manual provides operating and maintenance instructions for Origin Engines. Keep this manual with the equipment for future reference. Refer to the service manual for detailed information on adjusting and servicing the engine.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual. Keep this manual with the equipment for future reference.

Information in this publication represents data available at the time of print. Origin Engines reserves the right to change this publication and the products represented without notice and without any obligation or liability whatsoever.

This engine operates on either propane, liquefied petroleum gas (LPG, or natural gas (NG, which are extremely flammable and explosive. Installation and repair of LPG/NG systems must be performed only by qualified technicians. Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury.

Regular maintenance is necessary for safe and efficient operation. Inspect the engine often and perform required maintenance at prescribed intervals. Service work must be performed by appropriately skilled and suitably trained maintenance personnel who are familiar with engine diagnostics and repair.

Unless otherwise specified, all units of measurement are metric, followed by the United States customary unit equivalent.

## Related Literature

The following chart identifies related literature available for the **LORGB04.3PNA** and engines. Only trained and qualified personnel should install or service this engine.

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |

Contact a Origin Engines authorized distributor/dealer for all maintenance, service, and engine parts.

## Service Assistance

---

For professional advice and conscientious service, please contact your nearest Origin Engines distributor or dealer.

- Visit the Origin Engines website at [www.OriginEngines.com](http://www.OriginEngines.com).
- Look at the labels and decals on your Origin Engines product or review the appropriate literature or documents included with the product.
- Call toll free in the US and Canada 1-877.667.6360.

### Service Parts

To ensure that your engine continues to run reliably and efficiently for as long as possible, use only genuine Origin Engine parts.

For genuine Origin Engine service parts for your engine, or for technical assistance in servicing your engine: Call toll free in the US and Canada 1-877.667.6360.

### Maintenance Providers

Maintenance and repair services may be performed by you or any qualified engine service provider that you choose. However, your engine warranty does not cover damage or failure caused by improper maintenance or repairs.

### Owners Manual & Maintenance Log Storage & Use

Store this Owners Manual and Maintenance Log in a safe, visible place by your engine. The maintenance log must be updated whenever your engine is serviced.

# Section 1. Components and Maintenance Locations

## 1.0 Naturally Aspirated Engine, OE43L58XCTF Side Views

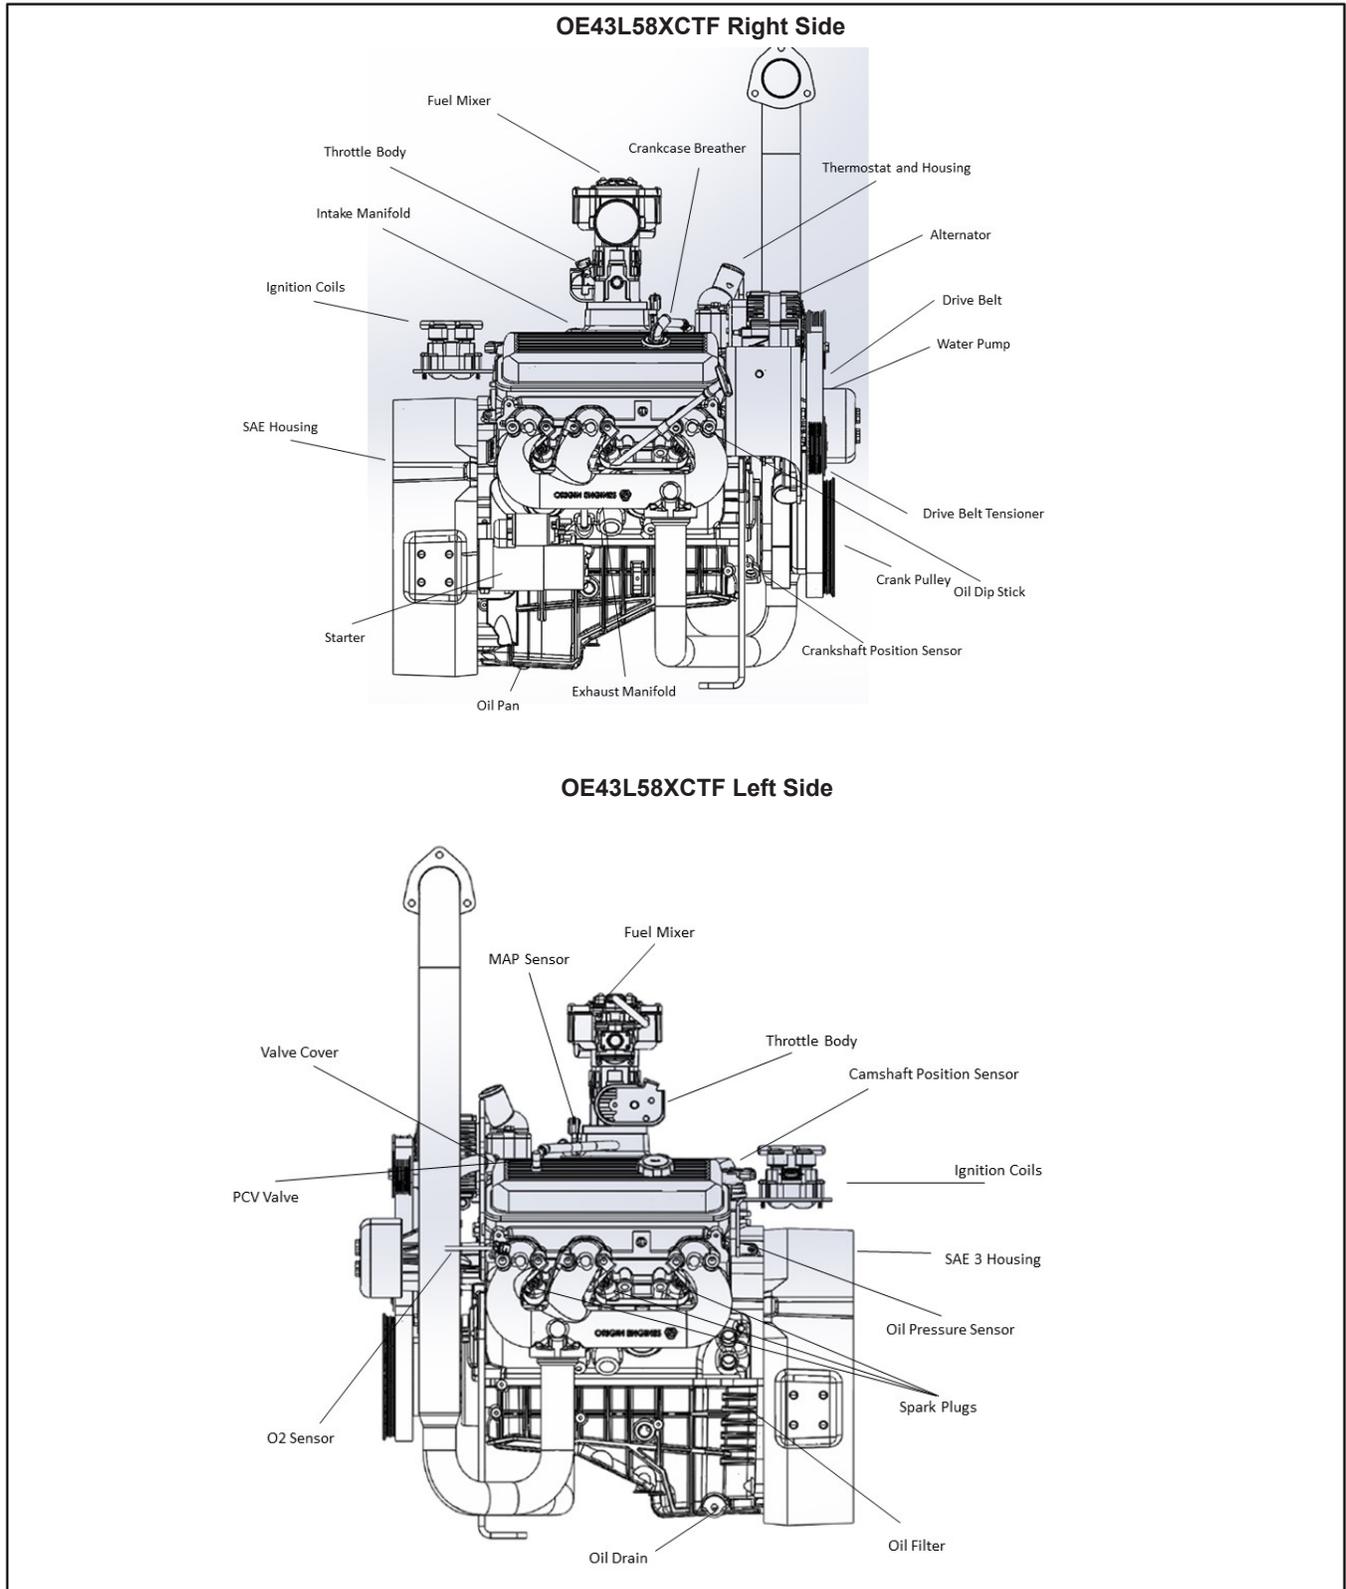


Figure 1.0 **LORGB04.3PNA**, Engine Side Views

# Section 1. Components and Maintenance Locations

## 1.0 OE43LWCF Top and Rear Views

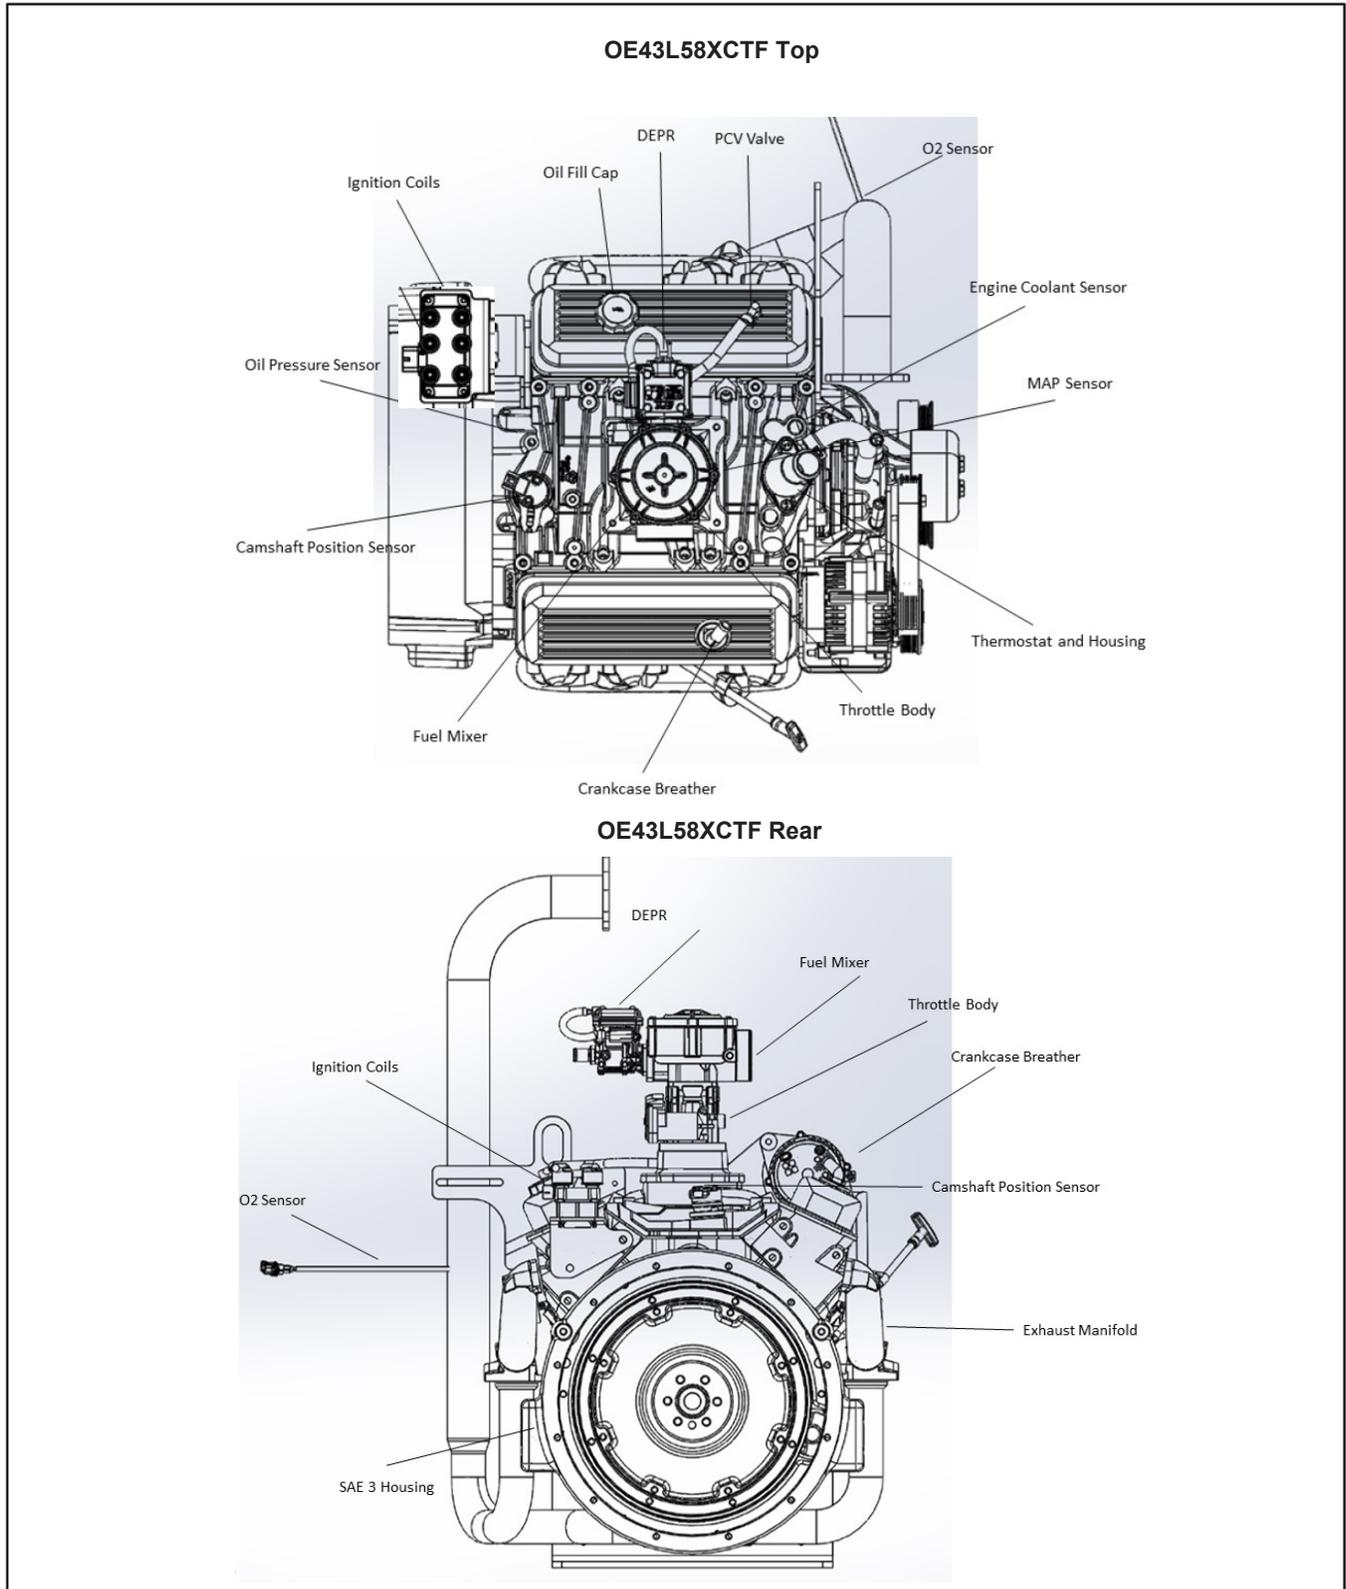


Figure 1.1 **LORGB04.3PNA**, Engine Top and Rear View

### 2.1 Introduction

These four-stroke internal combustion engines are certified to operate on either Propane, Liquid Petroleum Gas (LPG or Natural Gas (NG). System configuration is factory preset for NG.

The fuel system on this engine is a closed loop design. As the engine runs, sensors located at various points within the system provide continuous operating feedback to the Engine Control Module (ECM). The ECM adjusts the engine speed, ignition timing, and fuel supply in response to changes in the applied load, surrounding air temperature, operating temperature of the engine, and amount of oxygen present in the exhaust.

Refer to the Operation Manual for the equipment using this engine for specific information on how fault codes are displayed.

### 2.2 Fuel System

#### 2.2.1 Components

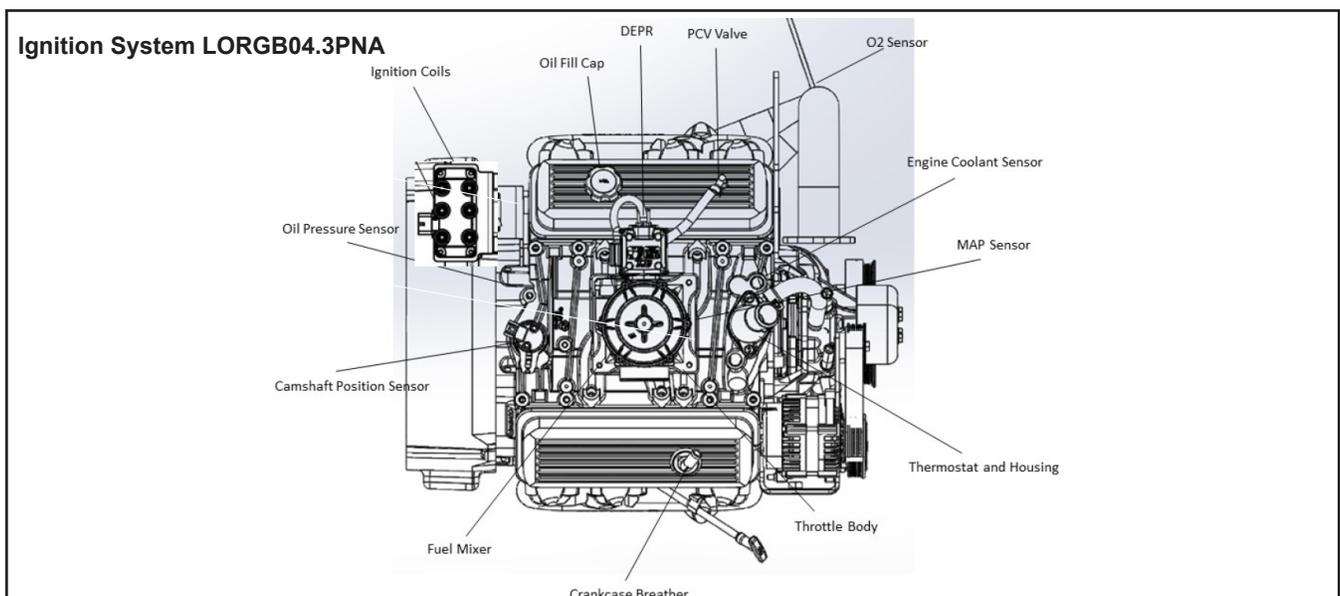


Figure 7 Ignition System, Distributor

The ignition system for the LORGB04.3PNA, consists of a single ignition coil pack, spark plug wires, and spark plugs. The ignition coil pack controls the spark timing for the engine.

This ignition system is a wasted-spark system. In a wasted spark system, spark is provided to two cylinders simultaneously. One spark plug fires during the compression stroke of a cylinder and creates combustion; while the other spark plug fires during the exhaust stroke and is wasted.

After receiving the crank signal, the ECM sends the ignition control packs a triggering signal that controls the timing of the ignition spark. The ignition coils then provide voltage to the spark plugs through high tension leads.

## Direct Acting Electronic Pressure Regulator

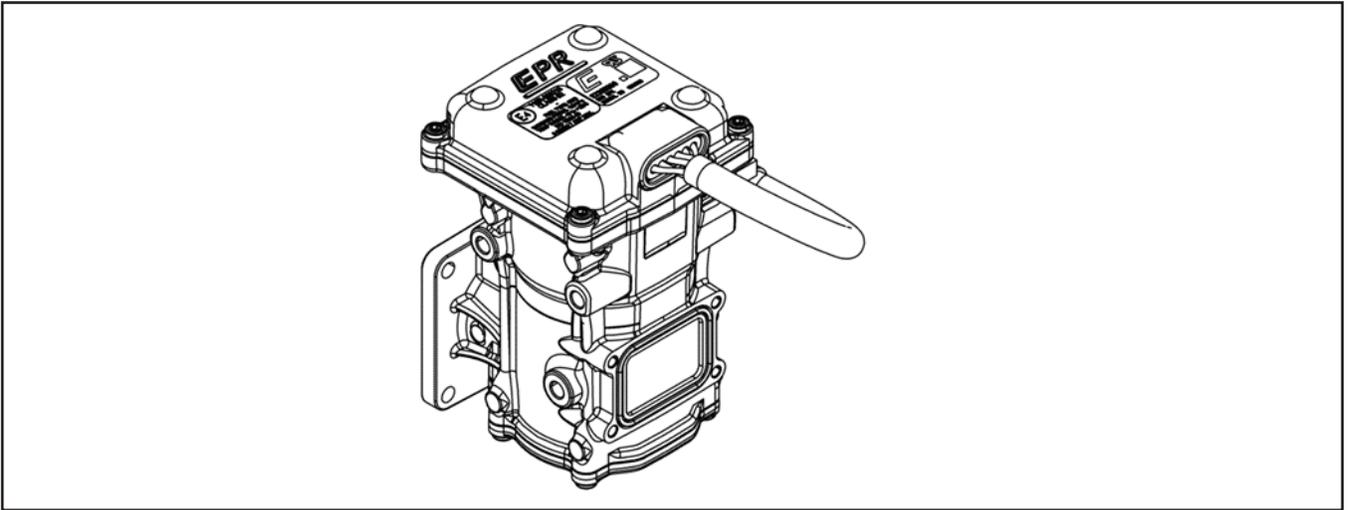


Figure 9 Fuel Pressure Regulator

The direct acting electronic pressure regulator (DEPR) controls the gaseous fuel pressure and fuel delivery. The DEPR receives fuel pressure commands from the ECM and modulates fuel pressure to the air-fuel mixer. The DEPR allows for fast and accurate gaseous fuel control to provide a combustible mixture to the engine.

## Air-Fuel Mixer

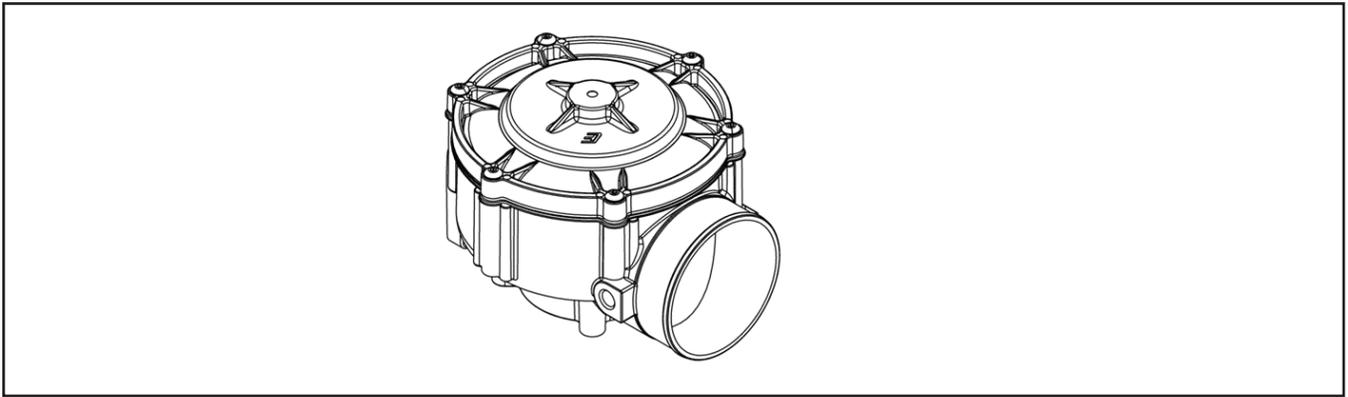


Figure 12 Air-Fuel Mixer

The air-fuel mixer is mounted in the air stream ahead of the throttle. It is a nonadjustable metering device that combines LPG/NG vapor with intake air for combustion.

### NOTICE

Avoid the possibility of component damage. The air-fuel mixer is an emission control device. Components inside the mixer are specifically calibrated to meet the engine's emission requirements and should never be disassembled or rebuilt. If the mixer fails to function correctly, contact your Origin Engines authorized distributor or dealer.

## Throttle Body

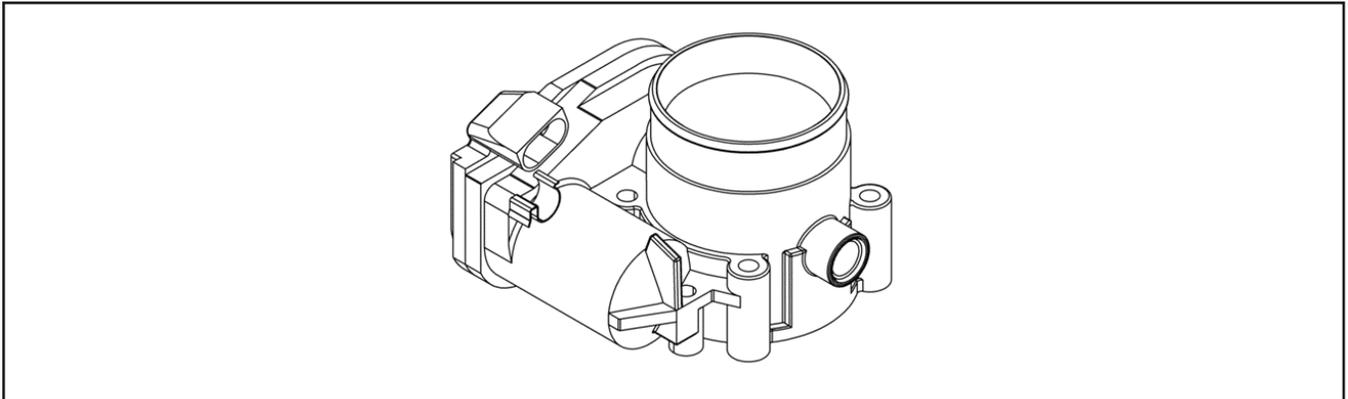


Figure 13 Throttle Body

The throttle body controls the operating speed of the engine according to input from the ECM. Defaults programmed into the ECM software, along with throttle position sensors, allow the ECM to control the overall operation of the engine in response to changing speeds and loads.

## Engine Control Module (ECM)

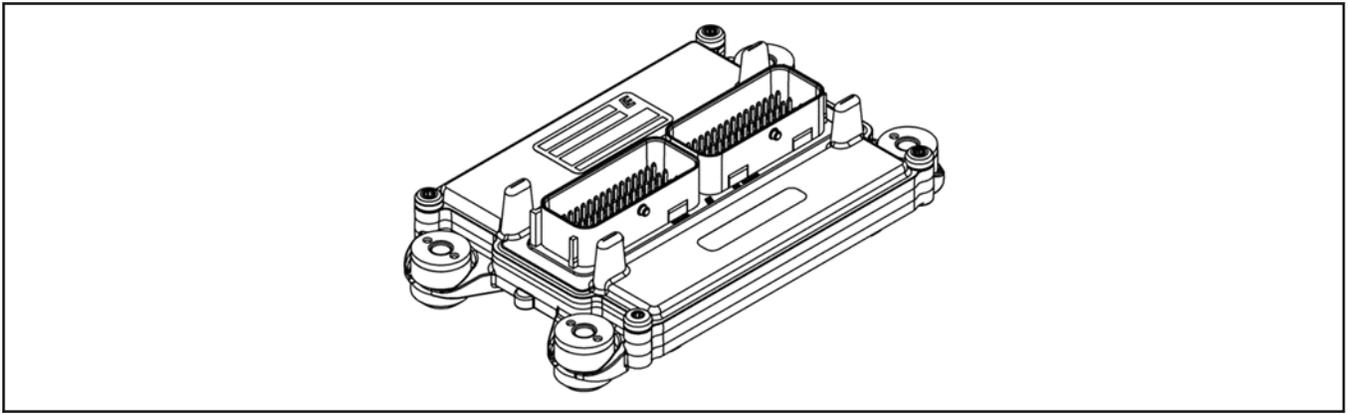


Figure 14 Engine Control Module

The ECM is a digital controller that oversees the various operating parameters of the engine. The ECM receives input data from sensors mounted to the engine and fuel system, and then outputs various signals to adjust engine operation.

The ECM also performs diagnostic functions on the fuel system. If a malfunction occurs, the ECM sends a fault signal to alert the operator to the problem. A corresponding Diagnostic Trouble Code (DTC) is generated and stored in memory within the ECM. A technician can then use a computerized diagnostic scan tool to retrieve the stored DTC number(s) and identify the problem.

## **Sensors**

### **Air Temperature/Manifold Absolute Pressure (TMAP) Sensor**

The Air Temperature / Manifold Absolute Pressure (TMAP) sensor monitors the absolute pressure in the intake manifold. This sensor also measures the temperature of the incoming air. Data returned by the TMAP sensor prompts the ECM to adjust the air-fuel mixture as needed.

### **Coolant Temperature Sensor**

The engine coolant temperature sensor provides engine coolant temperature data to the ECM. The ECM uses this data to adjust for cold starting conditions, and regulates various fuel and emission control functions.

### **Crankshaft Position Sensor**

Crankshaft Position Sensor (CPS) measures the rotary speed and crankshaft turning angle. The ECM ensures the ignition timing for each cylinder depending on the turning signal. The sensor, which consists of a permanent magnet and coil, is installed on the timing case cover next to the crankshaft pulley. When the crankshaft is turning, the position wheel passes the sensor at different speeds and causes a change of magnet resistance at the sensor to produce a changeable signal.

### **Camshaft Position Sensor**

The camshaft position sensor measures the rotary speed and camshaft turning angle. Through the camshaft position, the ECM determines the stroke, or cycle, of the engine and optimizes ignition. The sensor, which consists of a permanent magnet and coil, is integrated into a shaft which is driven off of the camshaft. When the camshaft is turning, the position wheel (or 1 tooth wheel) passes the sensor at different speeds and causes a change of magnet resistance at the sensor to produce a changeable signal.

### **Heated Exhaust Gas Oxygen (HEGO) Sensor**

The Heated Exhaust Gas Oxygen (HEGO) sensor measures the amount of oxygen present in the exhaust stream to determine whether the air-fuel ratio is too rich or too lean.

### **Oil Pressure Sender**

The engine oil pressure sender ensures sufficient lubrication throughout the engine. The sender is a pressure valve that is monitored by the ECM. A drop in pressure triggers a fault code.

### **Throttle Position Sensor (TPS)**

The electronic throttle control device incorporates an internal Throttle Position Sensor (TPS), which provides output signals to the ECM as to the location of the throttle shaft and blade. The ECM uses the signal to monitor and adjust the engine speed.

## 2.2.2 Fuel Specifications

**Note:**

The fuel system installation must comply with applicable national, state, and local codes.

| Fuel Type                       | Item   | Specification  |  |
|---------------------------------|--|--|--|
|                                 |  | LORGB04.3PNA   |  |
| <b>Liquid Propane Gas (LPG)</b> | Type   | HD-5 or HD-10  |  |
|                                 | Maximum fuel pressure (engine OFF, no load)    | 2.74 kPa (11.0 in. H <sub>2</sub> O)   |  |
|                                 | Minimum fuel pressure (engine ON, full load)   | 1.74 kPa (7.0 in. H <sub>2</sub> O)  |  |
| <b>Natural Gas (NG)</b>         | Supply   | Standard pipeline  |  |
|                                 |  |  |  |
|                                 | Allowable water vapor                          | Less than 112.3 kg per 1 million m <sup>3</sup><br>(Less than 7 lb. per 1 million ft. <sup>3</sup> ) |  |
|                                 | Maximum fuel pressure (engine OFF, no load)    | 2.74 kPa (11.0 in. H <sub>2</sub> O)   |  |
|                                 | Minimum fuel pressure (engine ON, full load)   | 1.74 kPa (7.0 in. H <sub>2</sub> O)  |  |
| <b>LPG and NG (both)</b>        | Fuel handling and supply component constraints | UL 2200: Standard for Stationary Engine Equipment Assemblies   |  |
|                                 | Operating temperature range                    | 0°C (32°F) to 50°C (113°F) Unaided   |  |

Figure 18 Fuel Specifications

**Natural Gas**

Your engine is certified to run on "pipeline-quality". Specifically, your engine is certified to run on natural gas that has at least 70% methane content by volume or an energy content of 950–1100 BTU per SCF. The natural gas must be provided by a gas supplier through a pipeline. If your natural gas supply does not meet both of these specifications, your engine is considered to be being operated as a non-certified engine. See "U.S. EPA Legal Requirements".

**LPG**

In order to maintain emissions compliance and the engine warranty, use commercial-grade HD-10 or better LPG.

Liquid LPG is drawn off of the bottom side of a LPG tank or cylinder and is a liquid until it has passed through the regulator/vaporizer, at which point it is vaporized to a gas. If you connect vapor LPG to a liquid LPG fuel system, you may starve the engine for fuel, causing it to produce low power and excessive emissions.

Vapor LPG is drawn off of the top side of a LPG tank or cylinder and is a gas from the tank/cylinder through to the engine intake. If you connect liquid LPG to a vapor LPG fuel system the fuel will not vaporize properly, causing the engine to run rich, produce low power and excessive emissions.

### 2.2.3 Before Starting

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Accidental starting.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

To prevent possible injury or damage to equipment, carefully read and understand all information in this Operation Manual before starting the engine. Follow the checklist below prior to each start up:

- Perform a walk-around inspection, checking for damage, fluid leaks, loose or missing fasteners, or debris.
- Check pipe and hose connections to make sure that they are tight.
- Check engine oil level; add oil as needed. Inspect engine oil for signs of deterioration or contamination. See the maintenance procedure for checking the engine oil.
- Check engine coolant level; add coolant as needed. Inspect coolant for contamination. See the maintenance procedure for checking the coolant level and condition.
- Check battery connections to ensure that they are tight with no visible corrosion. Check level of battery electrolyte and add fluid if necessary. See the maintenance procedure for checking the electrical system.
- Check and clean cooling areas, air intake areas, and external surfaces of the engine, particularly if the engine has been stored for a long period of time.
- Check to make sure that air cleaner components, shrouds, equipment covers, and guards are in place and securely fastened.
- Check all electrical connections to make sure that they are tight, including those at the alternator, starter, spark plug, and ignition coil. Repair damaged or loose wires or connectors before starting the engine.
- Check the fuel system. Make sure that all connections are secure at the fuel supply line and at all fuel system components. **Do not start the engine if you can smell leaking gas.**
- LPG only: check the fuel level in the fuel tank, and refill if necessary.

## 2.2.4 Starting

The specific engine starting sequence varies depending on the equipment that this engine powers. For more information, refer to the Operation Manual for the equipment using this engine.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Carbon monoxide.</b><br><b>Can cause severe nausea, fainting, or death.</b><br>The exhaust system must be leakproof and routinely inspected. |
|                 |   |

**Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death.** Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Moving parts.</b><br><b>Can cause severe injury or death.</b><br>Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation. |
|                 |   |

**Servicing the engine when it is operating. Exposed moving parts can cause severe injury or death.** Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Explosive fuel vapors.</b><br><b>Can cause fires and severe burns.</b><br>If a gaseous odor is detected, ventilate the area and contact an authorized service technician. |
|                 |  |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

If the engine does not start after 15 seconds of cranking, wait at least 15 seconds before trying again. Do not crank the starter longer than three crank cycles. After three crank cycles, the controller will display faults. Longer crank times can overheat the starter and drain the battery.

If the engine does not start after three attempts, discontinue the starting procedure. Perform troubleshooting to locate the problem(s) and correct them before trying again.

### 2.2.5 Cold Weather Starting

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Handling caustic engine fluids and chemical products.</b><br><b>Can cause severe chemical burns, nausea, fainting, or death.</b>   |
|                 | Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations. |

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Explosive fuel vapors.</b><br><b>Can cause fires and severe burns.</b>                       |
|                 | If a gaseous odor is detected, ventilate the area and contact an authorized service technician. |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

Cold weather puts added stress on the engine during start up. To start the engine in cold weather:

- Make sure that the engine oil is appropriate for the ambient operating temperature. See the maintenance section for fluid specifications. Drain and replace the engine oil if necessary.
- Disconnect all applied loads and/or equipment before cranking the starter.
- Allow the engine to run, unloaded, for about 5 minutes after cold weather start up.

## 2.2.6 Monitoring Engine Operation

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Carbon monoxide.</b><br><b>Can cause severe nausea, fainting, or death.</b><br>The exhaust system must be leakproof and routinely inspected. |
|                 |   |

**Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death.** Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

|  |   |
|--|---|
|  <b>CAUTION</b> | <b>Hazardous voltage.</b><br><b>Electrical shock can cause injury.</b><br>Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine. |
|                 |   |

Check for the following items as the engine runs.

- **Gas/air leaks:** check for leakage from fuel pipes, cooling pipes, or air pipes.
- **Exhaust:** check for detonation, backfire, or knocking. Watch for excessive smoke or abnormal color.
- **Noise:** listen for rattles or other abnormal noise.
- **Electrical:** check for burnt smell from hot electrical equipment.
- **Fluid leaks:** check for leaking oil or coolant.
- **Gauges:** check oil pressure, coolant temperature, and other operating parameters.

If any abnormal or unusual conditions are detected, stop the engine immediately and perform troubleshooting diagnostics before resuming operation.

## 2.2.7 Stopping

1. Disconnect all applied loads if possible, along with power take-off (PTO) attachments, before stopping the engine.
2. If the engine has been running under a heavy load, reduce engine speed and allow it to run for an additional 2-3 minutes before stopping. This action will help to cool the engine slightly before shutdown.

The specific engine-stopping sequence varies depending on the equipment that this engine powers. For more information, refer to the Operation Manual for the equipment using this engine.

### 3.1 Introduction

Preventive maintenance is critical to prolonging the life of the engine and keeping it in optimum working condition. As the engine runs, fasteners may loosen, parts may become worn, clearances change, and oil picks up dirt and contaminants. The engine may eventually become hard to start, or may exhibit other symptoms such as decreased power output or increased fuel consumption.

Regularly scheduled maintenance will help to prevent or reduce the impact of these performance issues. To keep the engine working reliably, perform all preventive maintenance tasks described in this section.

### 3.2 Safety Precautions and Instructions

|  |   |
|--|---|
|  <b>WARNING</b> | <p><b>Accidental starting.</b><br/><b>Can cause severe injury or death.</b></p> <p>Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.</p> |
|                 |   |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Handling caustic engine fluids and chemical products.</b><br/><b>Can cause severe chemical burns, nausea, fainting, or death.</b></p> <p>Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.</p> |
|               |  |

**Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks.** Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Hot engine and exhaust system.</b><br/><b>Can cause severe injury or death.</b></p> <p>Do not work on the engine until it cools.</p> |
|                 |  |

**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Hot coolant and steam.</b><br/><b>Can cause severe injury or death.</b></p> <p>Before removing the pressure cap, stop the engine and allow it to cool. Then loosen the pressure cap to relieve pressure.</p> |
|                 |  |

|  |   |
|--|---|
|  <b>CAUTION</b> | <b>Hazardous voltage.</b><br><b>Electrical shock can cause injury.</b>  |
|                 | Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine. |

**Servicing the engine when it is operating. Exposed moving parts can cause severe injury or death.** Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Moving parts.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation. |

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Explosive fuel vapors.</b><br><b>Can cause severe injury or death.</b> |
|                 | Use extreme care when handling, storing, and using fuels.                 |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

**Gas fuel leaks. Explosive fuel vapors can cause severe injury or death.** Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

### 3.3 Fluid Specifications

#### 3.3.1 Oil Recommendations

Origin Engines recommends a High Quality Conventional Motor Oil, 10W-40 preferably types specifically engineered for gaseous-fueled (NG/LPG) engines.

The oil must meet the specifications for zinc, phosphorus and ash content listed in Figure 19.

| Oil Specifications  |                          |
|---------------------|--------------------------|
| Oil Type            | Conventional Oil, 10W-40 |
| Zinc                | 1000-1200 ppm            |
| Phosphorous         | 1000-1200 ppm            |
| Sulfate Ash Content | 1.0% or lower            |

Figure 19 Engine Oil Requirements

**Note:**

- Do not mix different brands or types of oil.
- Do not overfill or underfill the engine's lubrication system. See "Engine Specifications."

#### 3.3.2 Coolant Recommendations

Use only a mixture of 50% long life coolant and 50% clean, softened water to inhibit rust/corrosion and prevent freezing.

A solution of 50% long life coolant provides freezing protection to  $-37^{\circ}\text{C}$  ( $-34^{\circ}\text{F}$ ) and overheating protections to  $149^{\circ}\text{C}$  ( $300^{\circ}\text{F}$ ). A coolant solution with less than 50% long life coolant may not provide adequate freezing and overheating protection. Do not mix long life coolants and conventional coolants. **Do not mix different types and/or colors of long life coolants.**



## 3.5 Engine

### 3.5.1 Check Engine Oil

Check the engine oil level daily before starting the engine. Inspect the oil for signs of deterioration, discoloration, thinning, or water contamination. If any of these conditions exist, the oil quality has been compromised and should be replaced.

#### Required materials:

- Clean, dry cloth.
- Fresh engine oil. (See the section "Oil Recommendations")

#### Procedure:

1. Stop the engine and allow it to cool.
2. Pull out the oil dipstick. See Figure 20.

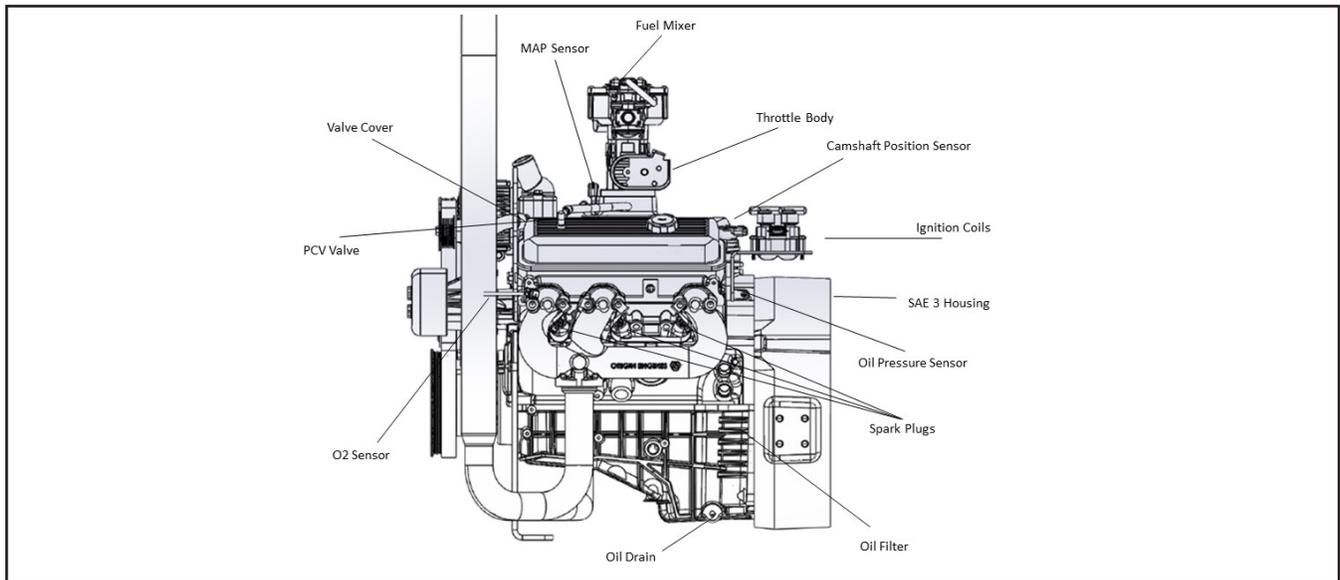


Figure 20 Oil Dipstick Location

3. Wipe the end of the dipstick with a clean, dry cloth.
4. Insert the dipstick into the engine.
5. Pull out the dipstick again to check the oil level. The oil level should be maintained between the Full and Add marks. See Figure 21.

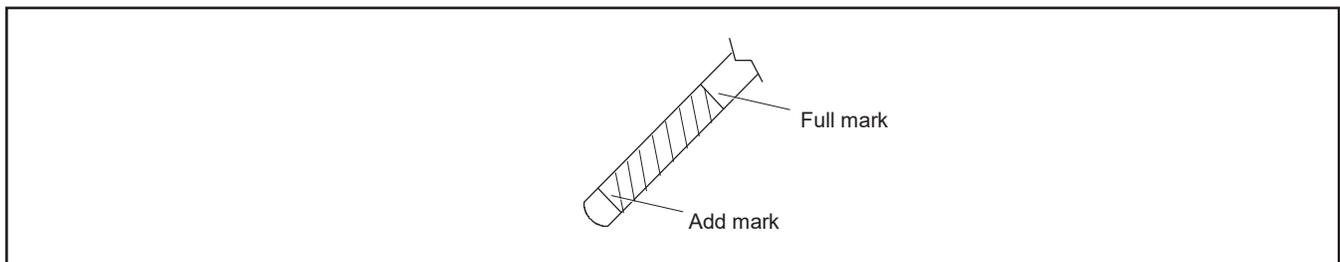


Figure 21 Oil Dipstick

6. If the oil level is below the add mark, check for leaks. If no leaks are found, open the oil fill cap. Wipe the oil fill cap clean, and add oil up to the Full mark. See Figure 22.
7. If oil leaks are found, repair them before operating the engine.

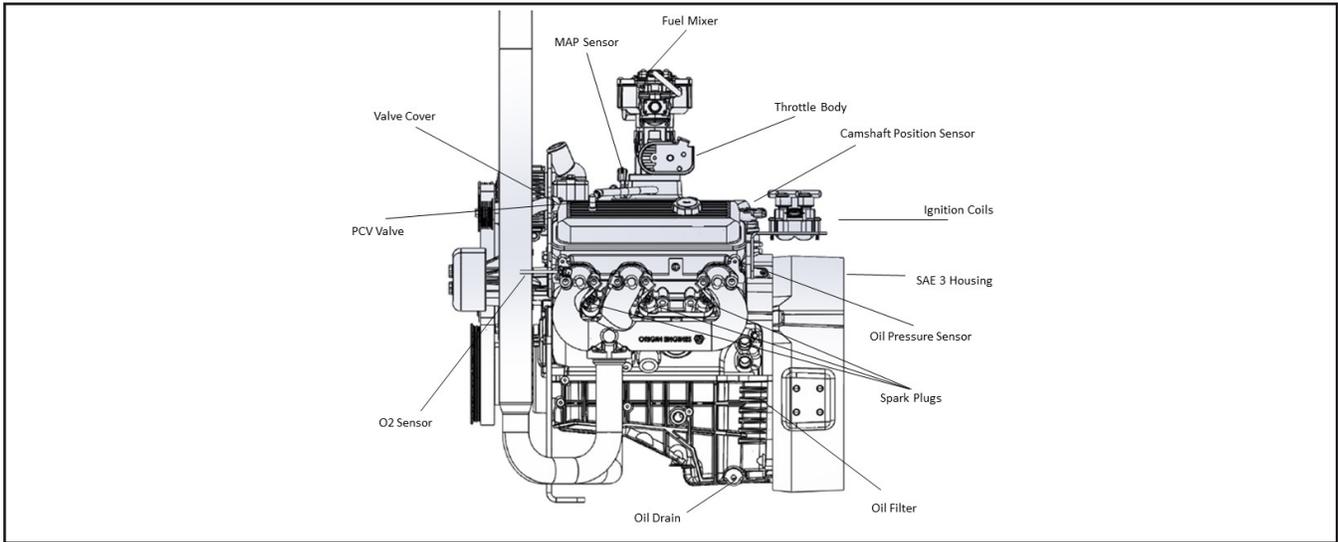


Figure 22 Oil Fill Cap

### 3.5.2 Change Engine Oil and Oil Filter

Change the engine oil and filter every 150 hours of operation. Replace the engine oil and filter more often if the machine is being run in excessively dirty or dusty conditions.

|  |  |
|--|--|
|  <b>WARNING</b> | <p><b>Accidental starting.</b><br/> <b>Can cause severe injury or death.</b></p> <p>Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.</p> |
|                |  |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

|  |   |
|--|---|
|  <b>WARNING</b> | <p><b>Handling caustic engine fluids and chemical products.</b><br/> <b>Can cause severe chemical burns, nausea, fainting, or death.</b></p> <p>Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.</p> |
|                 |   |

**Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks.** Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Explosive fuel vapors.<br/>Can cause fires and severe burns.</b>                             |
|                 | If a gaseous odor is detected, ventilate the area and contact an authorized service technician. |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Hot engine and exhaust system.<br/>Can cause severe injury or death.</b> |
|                 | Do not work on the engine until it cools.                                   |

**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

**Required materials:**

- Fresh engine oil (refer to the oil recommendations in the maintenance section)
- Collection container for drained oil
- Replacement oil filter
- Oil filter wrench
- Clean, dry cloth
- Drop cloth to protect work surface

### Change the engine oil and oil filter:

1. Stop the engine and allow it to cool.
2. Place a drop cloth and collection container beneath the oil drain valve. See Figure 23.

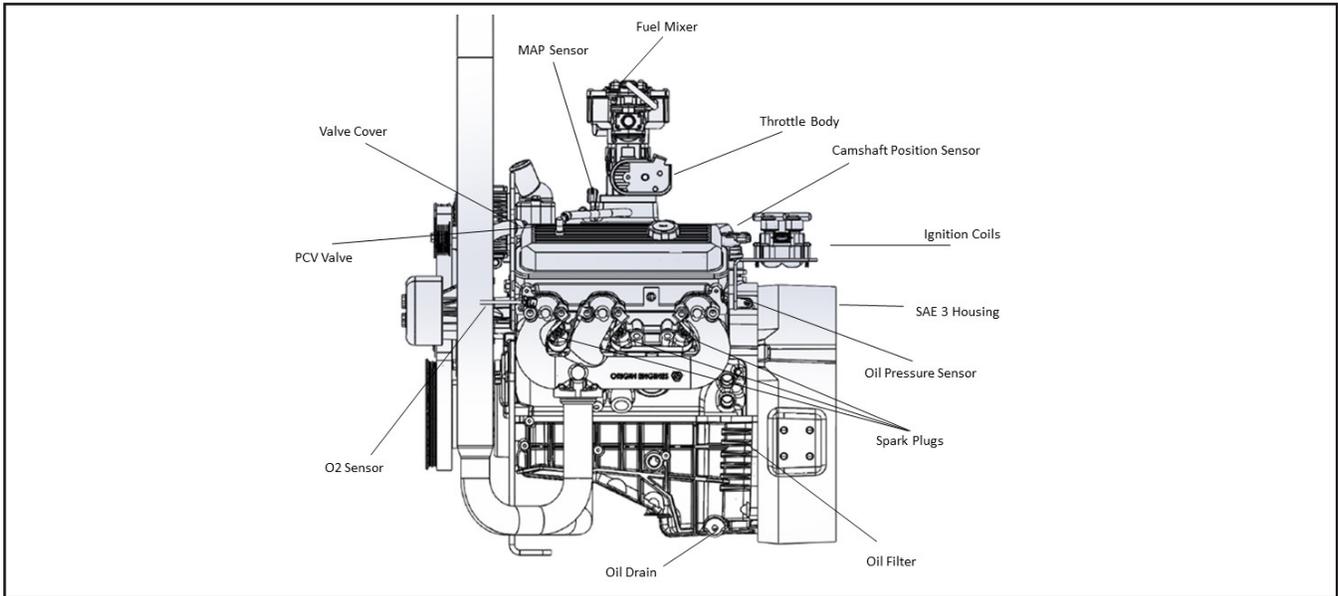


Figure 23 Oil Fill and Drain Valve Location

3. Open the oil drain valve and allow the oil to drain into the container.
4. Using an oil filter wrench, remove the old oil filter.
5. Wipe the oil filter installation surface clean with a dry cloth. Inspect the installation surface for damage. See Figure 24.

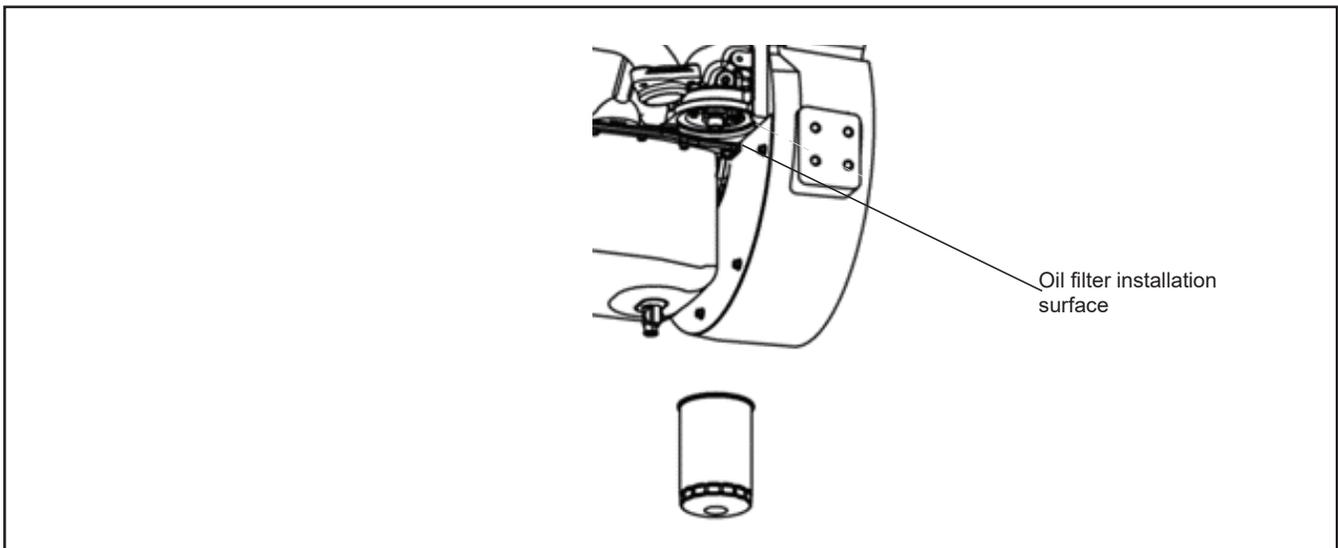


Figure 24 Oil Filter Installation Location

6. Apply a thin film of fresh oil to the gasket of the new oil filter.
7. Lightly screw in the new oil filter by hand until you feel resistance and then tighten the filter an additional 3/4 turn.
8. Close the oil drain valve.
9. Add fresh oil through the oil fill cap.
10. Check engine oil level, making sure that the level lies between the Full and Add marks on the dipstick. See Figure 25.
11. Install and tighten the oil fill cap.

12. Start and run the engine without load for approximately 5 minutes. This will ensure that the fresh engine oil is distributed to each friction surface.

**Note:**

Dispose of used engine oil and oil filters in accordance with local environmental regulations.

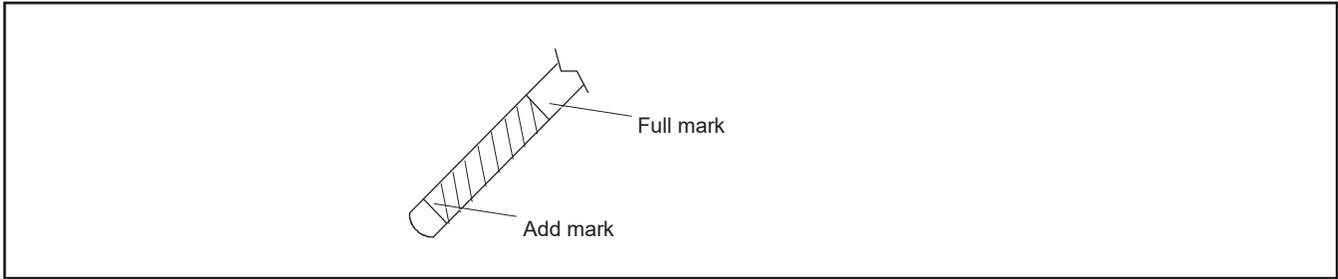


Figure 25 Oil Dipstick

### 3.5.3 Check and Clean the Air Filter

Refer to the Operation Manual for the equipment using this engine.

### 3.5.4 Replace the Air Filter

Refer to the Operation Manual for the equipment using this engine.

### 3.5.5 Check, Adjust and Replace the Spark Plugs

Damaged, loose, or improperly adjusted spark plugs can overheat or cause engine problems such as misfiring, hesitation, or knocking. Check the spark plugs after every 500 hours of operation

|  |  |
|--|--|
|  <b>CAUTION</b> | <p><b>Hazardous voltage.</b><br/> <b>Electrical shock can cause injury.</b></p> <p>Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.</p> |
|                 |  |

|  |   |
|--|---|
|  <b>WARNING</b> | <p><b>Hot engine and exhaust system.</b><br/> <b>Can cause severe injury or death.</b></p> <p>Do not work on the engine until it cools.</p> |
|                 |   |

**Servicing the exhaust system. Hot parts can cause severe injury or death.** Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

**Required materials:**

- Spark plug wrench
- Torque wrench
- Spark plug gap tool
- Clean, dry cloth
- Replacement spark plugs. See spark plug specifications in the Specifications section.

**Procedure:**

1. Stop the engine and allow it to cool.

**Note:**

Label or mark spark plug wires before disconnecting. Spark plug wires must be reconnected in the same order as removed.

2. Use a cloth to wipe dirt and oil away from the area around each of the four spark plug wires. See Figure 26.

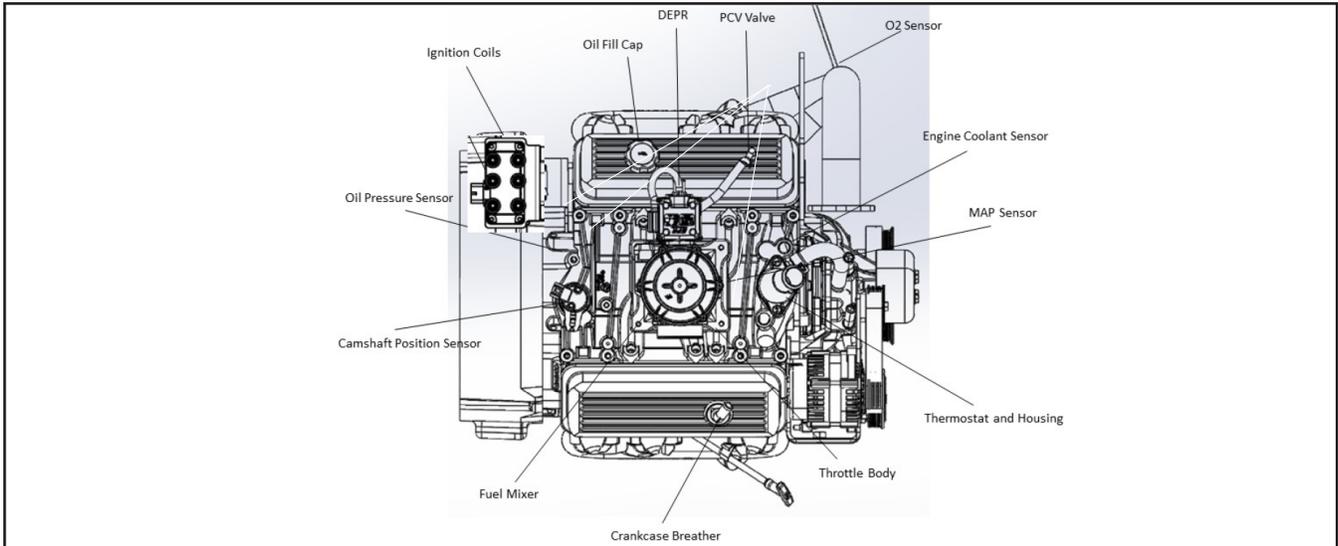


Figure 26 Spark Plug Wires

3. Disconnect the spark plug wires.
4. Use a spark plug wrench to remove the spark plugs.
5. Inspect the body of each spark plug for cracks, damage, or discoloration and check that the spark plug washer is in good condition.
6. Inspect the electrodes on each spark plug. See Figure 27. The electrodes should be light brown. If the electrode appears to be burned, covered with soot, or fouled with oil, replace the spark plug.

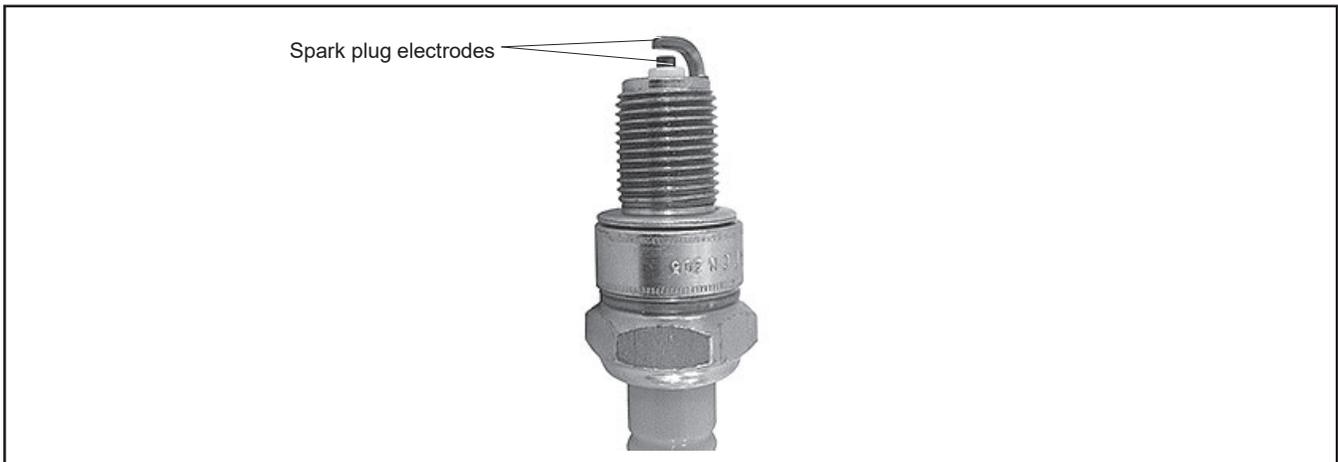


Figure 27 Spark Plug Electrodes

7. Use a spark plug gap tool to measure the gap on each spark plug. Adjust the gap to specification. See Figure 28.

| Spark Plug Gap |                    |
|----------------|--------------------|
| LORGB04.3PNA   | 0.76 mm (0.03 in.) |

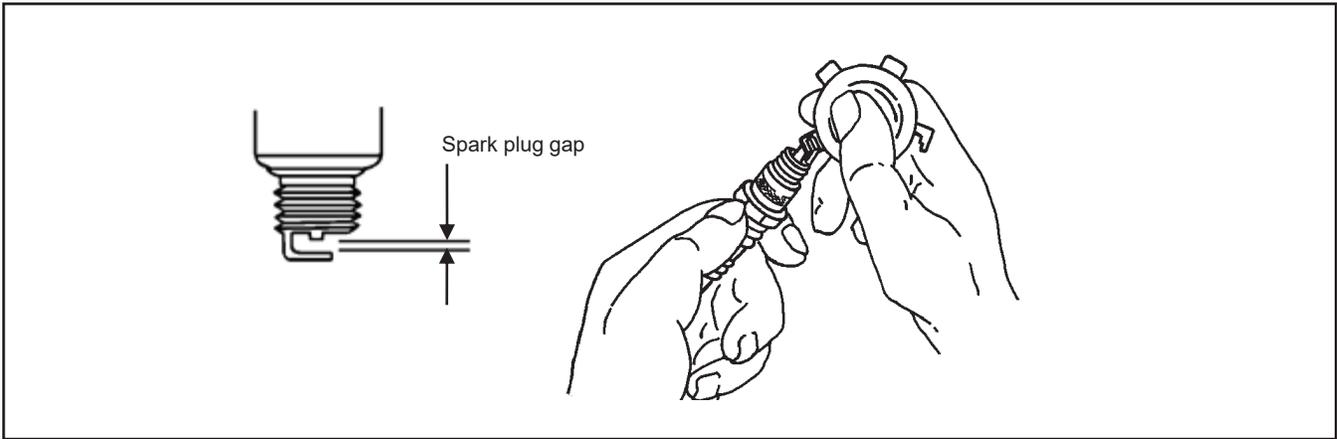


Figure 28 Spark Plug Gap

8. Thread the spark plugs into the cylinder head.
9. Tighten the spark plugs to specification.

| Spark Plug Torque   |                    |
|---------------------|--------------------|
| <b>LORGB04.3PNA</b> | 15 Nm (11 ft. lb.) |

10. Reconnect the spark plug wires to the spark plugs.

### 3.5.6 Ignition Timing

The 4.3L, **LORGB04.3PNA**, the ignition system consists of a single ignition coil pack which provide voltage to the spark plugs. The ECM uses information from the crankshaft position sensors to optimize ignition timing. Ignition timing is not adjustable.

Contact your Origin authorized distributor/dealer for assistance with ignition-related performance issues.

## 3.6 Electrical System

### 3.6.1 Check Battery and Connections

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Sulfuric acid in batteries.</b><br><b>Can cause severe injury or death.</b><br>Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.  |
|                 |  |
|  <b>WARNING</b> | <b>Explosion.</b><br><b>Can cause severe injury or death.</b><br><b>Relays in the battery charger cause arcs or sparks.</b><br>Locate the battery in a well-ventilated area. Isolate the battery charger from explosive fumes. |
|                 |  |

**Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death.** Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

**Battery acid cleanup. Battery acid can cause severe injury or death.** Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

**Battery gases. Explosion can cause severe injury or death.** Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

**Battery short circuits. Explosion can cause severe injury or death.** Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

Check the condition of the battery and connections according to the intervals specified in "Periodic Maintenance Schedule." Specific items to look for are:

- Loose or missing fasteners on the battery hold-down.
- Loose cable connections.
- Frayed, cut, or broken cables.
- Cracks in battery cell cover or case.
- Dirt, oil, or water contamination.
- Corrosion at battery terminals.
- Reduction in voltage or ability to hold a charge.

Repair or replace the battery and/or components as needed. Use only replacement parts that are equivalent to the original equipment. Contact your Origin Engines authorized distributor/dealer for assistance.

### 3.6.2 Check and Adjust the Drive Belt

A worn, stretched, or damaged drive belt may fail, especially under heavy loads. Check the condition of the drive belt regularly and adjust belt tension as needed.

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Accidental starting.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Moving parts.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation. |

**Servicing the engine when it is operating. Exposed moving parts can cause severe injury or death.** Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

**Check drive belt condition:**

1. Stop the engine and allow it to cool.
2. Locate the drive belt. See Figure 29.

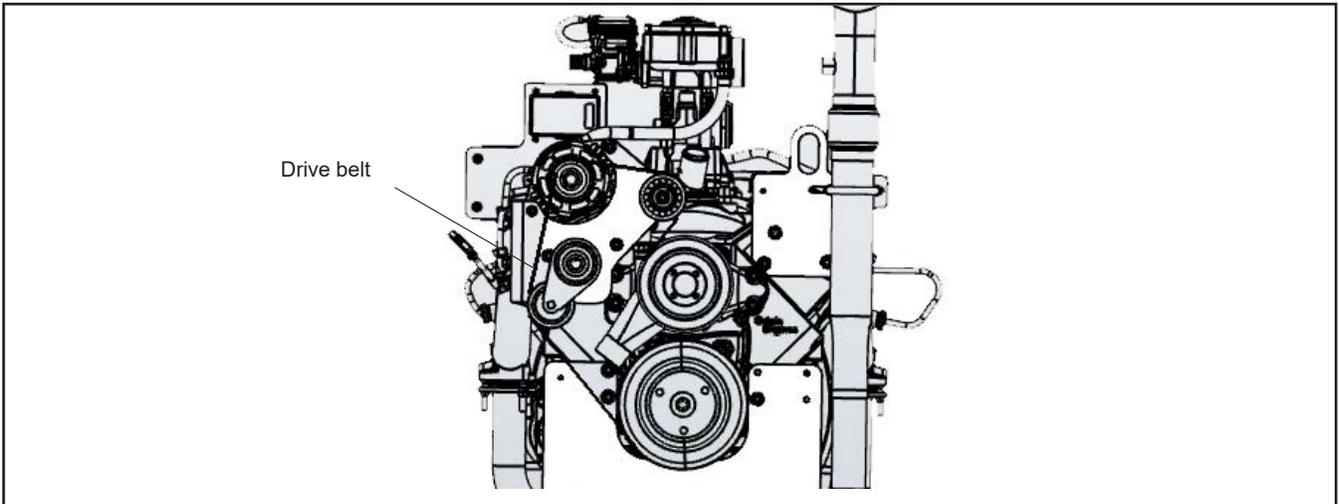


Figure 29 Drive Belt Location

3. Inspect the drive belt. Look for signs of cracking, separation, cuts, or other damage. See Figure 30.
4. If any abnormality is found, replace the drive belt.

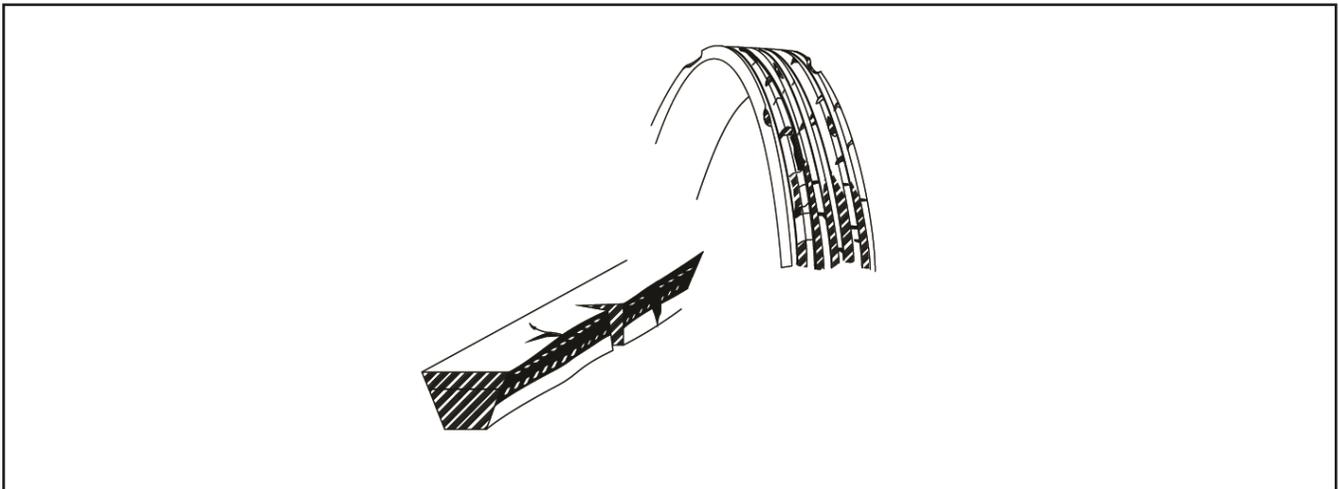


Figure 30 Drive Belt Damage

### 3.6.3 Replace the Drive Belt

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Accidental starting.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery. |

**Disabling the engine. Accidental starting can cause severe injury or death.** Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Moving parts.</b><br><b>Can cause severe injury or death.</b>  |
|                 | Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation. |

**Servicing the engine when it is operating. Exposed moving parts can cause severe injury or death.** Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

#### Required materials:

- Replacement drive belt.
- 14 mm socket and wrench

|   |
|---|
| <b>NOTICE</b>   |
| Do not replace a drive belt with one that is old or worn. An old or worn replacement may not last as long as a new drive belt and may not hold consistent tension, especially under load. |

#### Procedure

1. Use a 3/8" ratchet wrench to turn the tensioner pulley counter-clockwise against the spring force. See Figure 31.

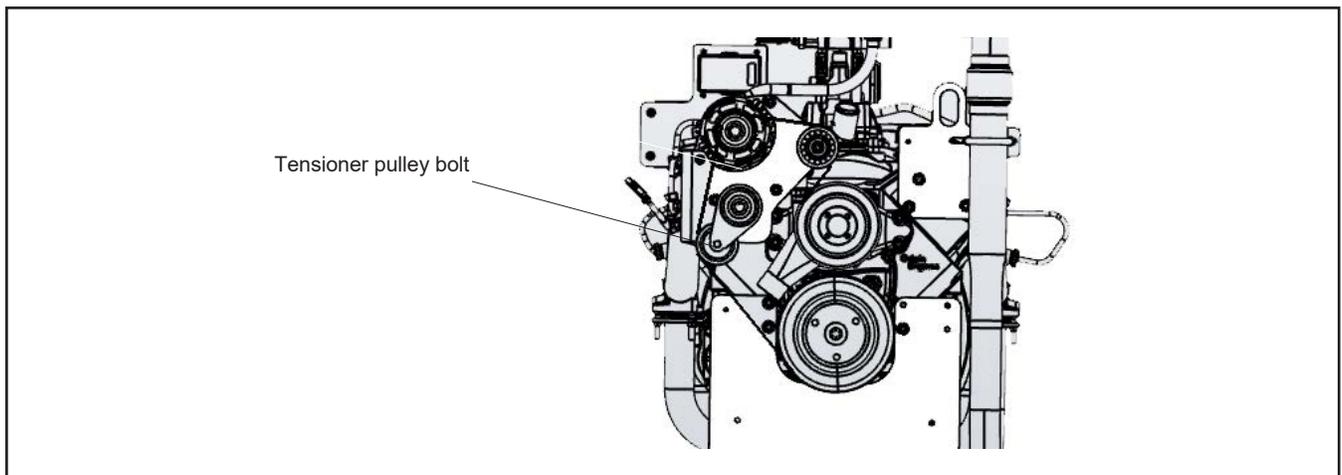


Figure 31 Tensioner Location

2. With the tensioner pulley disengaged, remove and discard the drive belt and then release the tensioner.
3. Route a new drive belt following the diagram shown in Figure 32.

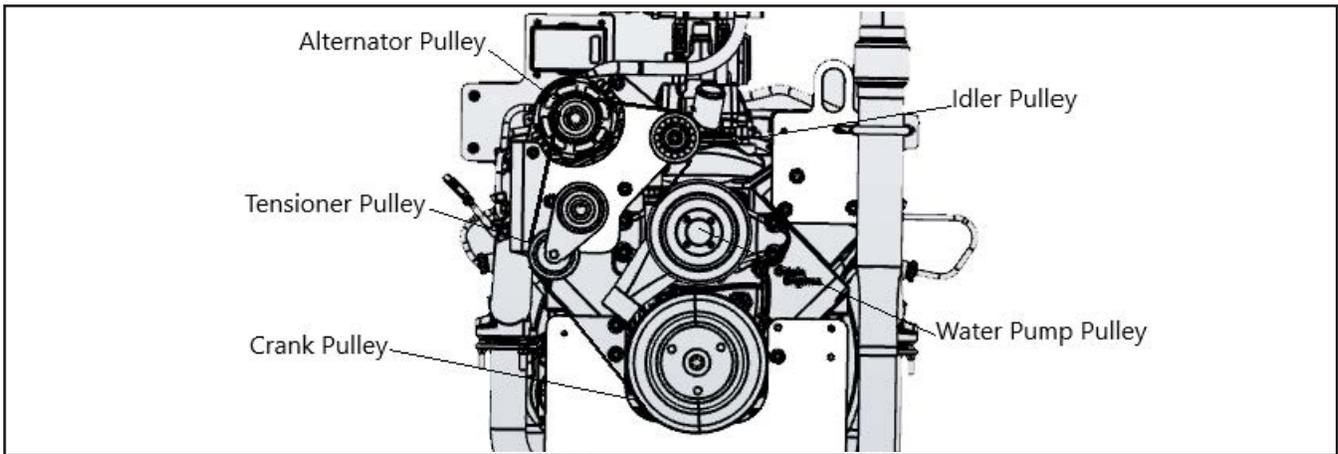


Figure 32 Drive Belt Diagram

4. While using the socket wrench to turn the tensioner pulley clockwise, slip the belt around the tensioner pulley. Release the tensioner.
5. Make sure that the belt is properly aligned with the grooves on each pulley. See Figure 33.

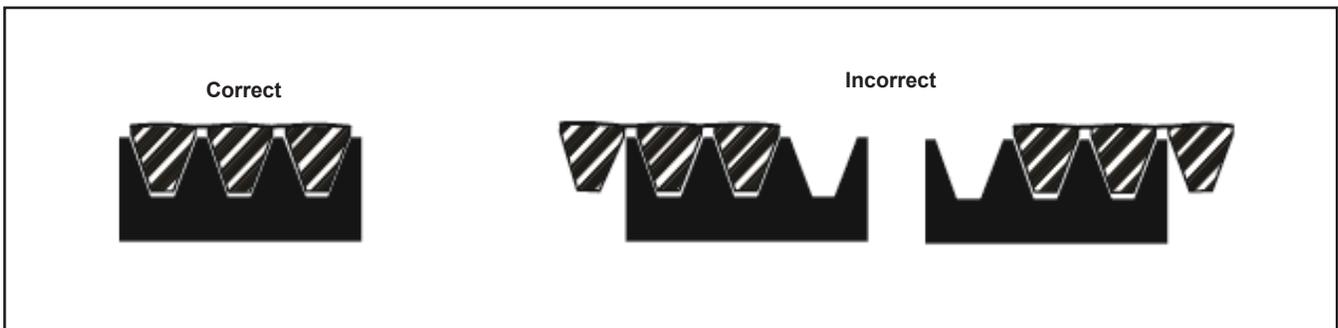


Figure 33 Belt Alignment

### 3.6.4 Check Wiring and Electrical Connections

|  |  |
|--|--|
|  <b>CAUTION</b> | <p><b>Hazardous voltage.</b><br/> <b>Electrical shock can cause injury.</b></p> <p>Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.</p> |
|                 |  |

Check the condition of the wiring and electrical connections after every 10 hours of operation. Specific items to look for are:

- Exposed (bare) wires.
- Cuts or abrasions in wire insulation.
- Loose connections at screw terminals.
- Loose, dirty, or cracked electrical connectors.
- Melted or scorched wiring, insulation, or connectors.

Repair or replace faulty electrical components before operating the machine.

### 3.7 Cooling System

|   |  |
|---|--|
| <b>⚠ WARNING</b>  | <b>Hot coolant and steam.<br/>Can cause severe injury or death.</b><br>Before removing the pressure cap, stop the engine and allow it to cool. Then loosen the pressure cap to relieve pressure. |
|  |  |

The engine is equipped with a unit-mounted radiator common cooling system. Add coolant before starting the engine.

The system's major components include either two electric fans or an engine-mounted fan (depending on the application), a circulating water pump, a radiator, and a thermostat. The pump circulates water through the engine until it reaches operating temperature. Then the engine thermostat opens, allowing water circulation through the radiator. The thermostat restricts water flow as necessary to prevent overcooling. The fans blow air through the radiator across the cooling surface.

Some engines are equipped with an optional block heater.

**Note:**

**Block Heater Damage.** The block heater will fail if the energized heater element is not immersed in coolant. Fill the cooling system before turning on the block heater. Run the engine until it is warm and refill the radiator to purge the air from the system before energizing the block heater.

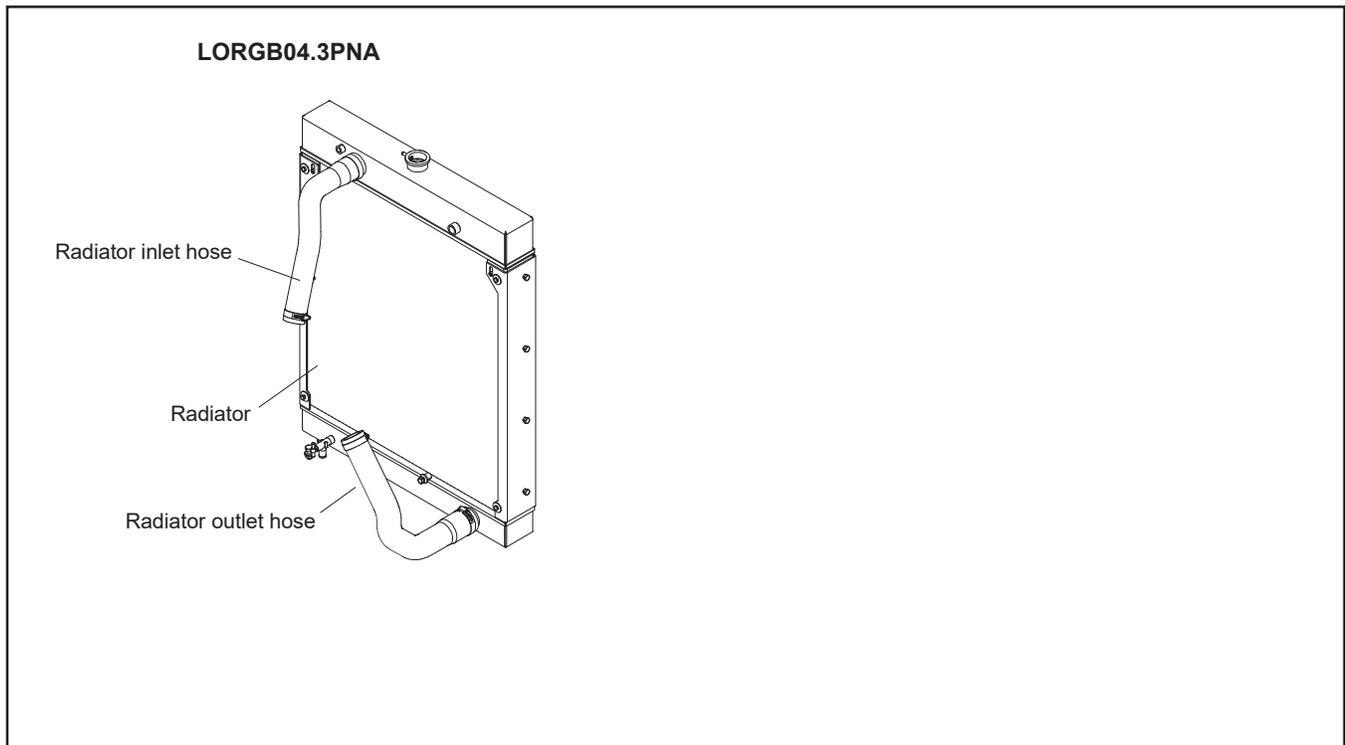


Figure 34 Cooling Systems

### 3.7.1 Check Coolant Level and Condition

The engine coolant level should be checked daily before starting the engine. Insufficient coolant will cause the engine to overheat.

1. Open the radiator cap slowly in order to release the pressure in the system.
2. Maintain the coolant level in the coolant overflow bottle between the High and Low markings. See “Coolant Recommendations.”

**Note:**

Periodically check the coolant level by removing the radiator’s pressure cap. Do not rely solely on the level in the coolant overflow bottle.

3. Install and tighten the radiator cap.

**Check coolant condition:**

Engine coolant should be uniformly colored and transparent. Replace the coolant if it is dirty, discolored, or fouled with oil or rust particles.

Rusty coolant may indicate corrosion inside the radiator. Oil in the coolant indicates a leak somewhere in the lubrication system. Contact a Origin authorized distributor/dealer if either of these conditions exist.

### 3.7.2 Check Hoses and Clamps

Check the condition of the coolant system hoses and clamps every 10 hours of operation.

**Hoses:**

- Inspect the hoses for cracks, abrasions, cuts, bulges, swollen ends, or leaks.
- Squeeze the hoses. They should yield slightly to moderate pressure and not feel too hard, too soft, or spongy.
- Replace faulty hoses before operating the engine.

**Clamps:**

- Verify that all clamps are in place.
- Adjust and tighten clamps as needed.

### 3.7.3 Draining and Replacing the Coolant

There are no coolant plugs or drainage valves on the engine. To drain and replace the coolant, refer to the radiator procedures in the Operation Manual for the equipment using this engine.

### 3.8 Fuel System

|  |   |
|--|---|
|  <b>WARNING</b> | <b>Explosive fuel vapors.<br/>Can cause severe injury or death.</b> |
|                 | Use extreme care when handling, storing, and using fuels.           |

**The fuel system. Explosive fuel vapors can cause severe injury or death.** Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

**Gas fuel leaks. Explosive fuel vapors can cause severe injury or death.** Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

**Note:**

Fuel system components are not adjustable and cannot be serviced. Contact your authorized Origin Engines authorized distributor/dealer for replacements.

#### 3.8.1 Check Fuel Supply Pipe and Connections

With the fuel valve fully opened and the engine stopped, check all fuel system connections and lines for leaks using a soapy water solution. Correct any leaks before restarting the engine. **Do not start the engine if you can smell leaking gas.** Have any necessary service performed by a Origin Engines authorized distributor/dealer.

#### 3.8.2 Check Fuel Level (LPG only)

With the fuel valve on the LPG tank fully closed and the engine stopped, check the fuel gauge on the LPG tank. Make sure that the tank contains enough fuel for sustained operation. If not, refill the tank before restarting the engine.

Fully open the fuel valve on the LPG tank. Check all fuel supply connections and lines for leaks using a soapy water solution. Correct any leaks before restarting the engine. Have any necessary service performed by a Origin authorized distributor/dealer or qualified LPG/NG technician only.

## Section 4. Troubleshooting

### 4.1 Introduction

The following chart will help you to identify and solve some of the basic operating problems that may occur while operating this engine. Do not attempt to service or replace major engine components, or any items that require special timing or adjustment procedures. This work should be performed only by a Origin Engines authorized distributor/dealer.

A comprehensive DTC (Diagnostic Trouble Code) List is on page 54-55 of this manual.

### 4.2 Troubleshooting

| Problem            | Possible Cause                            | Solution  |
|--------------------|---|---|
| Will Not Start     | No fuel                                   | Check fuel supply.  |
|                    | Incorrect fuel                            | Make sure fuel system is configured properly for LPG or NG supply.                            |
|                    | Dirty/restricted fuel system              | Check fuel system and clean components as needed.   |
|                    | Incorrect oil level                       | Check engine oil level; add as needed.  |
|                    | Engine overloaded                         | Disconnect or reduce loads.   |
|                    | Faulty spark plug, wire, or ignition coil | Inspect, adjust, or replace as needed.  |
|                    | Dirty/restricted air cleaner element      | Clean or replace.   |
|                    | Exhaust restricted                        | Check for exhaust obstructions.   |
| Hard Starting      | No fuel                                   | Check fuel supply.  |
|                    | Incorrect fuel                            | Make sure fuel system is configured properly for LPG or NG supply.                            |
|                    | Restricted fuel flow                      | Make sure fuel supply valves are open; check for air intake system leakage.                   |
|                    | Dirty/restricted fuel system              | Check fuel system and clean components as needed.   |
|                    | Incorrect oil level                       | Check engine oil level; add as needed.  |
|                    | Engine overloaded                         | Disconnect or reduce loads.   |
|                    | Faulty spark plug, wire, or ignition coil | Inspect, adjust, or replace as needed.  |
|                    | Dirty/restricted air cleaner element      | Clean or replace.   |
| Exhaust restricted | Check for exhaust obstructions.           |   |
| Stops Suddenly     | No fuel                                   | Check fuel supply.  |
|                    | Dirty/restricted fuel system              | Check fuel system and clean components as needed.   |
|                    | Incorrect oil level                       | Check engine oil level; add as needed.  |
|                    | Engine overloaded                         | Disconnect or reduce loads.   |
|                    | Dirty/restricted air cleaner element      | Clean or replace.   |
|                    | Exhaust restricted                        | Check for exhaust obstructions.   |
| Lacks Power        | Incorrect fuel                            | Make sure fuel system is configured properly for LPG or NG supply.                            |
|                    | Low fuel pressure                         | Check and adjust fuel pressure.   |
|                    | Incorrect oil level                       | Check engine oil level; add as needed.  |
|                    | Engine overloaded                         | Disconnect or reduce loads.   |
|                    | Faulty spark plug, wire, or ignition coil | Inspect, adjust, or replace as needed.  |
|                    | Dirty/restricted fuel system              | Check fuel system and clean components as needed.   |
|                    | Air induction system leak                 | Inspect air induction system.   |
|                    | Damaged turbocharger (If applicable)      | Inspect turbocharger compressor and turbine blades for damage and/or contact against housing. |

| <b>Problem</b>                   | <b>Possible Cause</b>                                | <b>Solution</b>  |
|----------------------------------|--|--|
| Operates Erratically or Unevenly | Incorrect fuel                                       | Make sure fuel system is configured properly for LPG or NG supply.                       |
|                                  | Dirty/restricted fuel system                         | Check fuel system and clean components as needed.  |
|                                  | Low fuel supply pressure                             | Check and adjust.  |
|                                  | Engine overloaded                                    | Disconnect or reduce loads.  |
|                                  | Loose wiring at shut-off valve(s)                    | Check wiring and repair connections.   |
|                                  | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Dirty air filter                                     | Inspect and replace as needed.   |
| Knocks or Pings                  | Incorrect fuel                                       | Make sure fuel system is configured properly for LPG or NG supply.                       |
|                                  | Engine overloaded                                    | Disconnect or reduce loads.  |
|                                  | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Dirty/restricted fuel system                         | Check fuel system and clean components as needed.  |
|                                  | Dirty air filter                                     | Inspect and replace as needed.   |
|                                  | Boost pressure too high (if applicable)              | Check for stuck wastegate, check for leak in wastegate boost line (if applicable).       |
|                                  | Excessive intake manifold temperature                | Check charge air cooler for debris and clean as needed (if applicable).                  |
| Skips or Misfires                | Incorrect fuel                                       | Make sure fuel system is configured properly for LPG or NG supply.                       |
|                                  | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Dirty/restricted fuel system                         | Check fuel system and clean components as needed.  |
|                                  | Dirty air filter                                     | Inspect and replace as needed.   |
| Backfires                        | Incorrect fuel                                       | Make sure fuel system is configured properly for LPG or NG supply.                       |
|                                  | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Dirty/restricted fuel system                         | Check fuel system and clean components as needed.  |
|                                  | Dirty air filter                                     | Inspect and replace as needed.   |
| Overheats                        | Incorrect fuel                                       | Make sure fuel system is configured properly for LPG or NG supply.                       |
|                                  | Dirty/restricted fuel system                         | Check fuel system and clean components as needed.  |
|                                  | Incorrect oil level                                  | Check engine oil level; add as needed.   |
|                                  | Engine overloaded                                    | Disconnect or reduce loads.  |
|                                  | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Faulty engine coolant temperature sender             | Inspect the engine coolant temperature sender and wires and replace or repair as needed. |
| Consumes Excess Fuel             | Faulty spark plug, wire, or ignition coil            | Inspect, adjust, or replace as needed.   |
|                                  | Dirty/restricted air cleaner element                 | Clean or replace.  |
|                                  | Incorrect fuel pressure                              | Check and adjust fuel pressure.  |
| ECM Does Not Store DTC           | Faulty electrical connections, components, or wiring | Contact an authorized Origin Engines distributor/dealer.                                 |
| Erratic operation                | Air induction system leak                            | Inspect air induction system.  |

## Section 5. Storage

|  |  |
|--|--|
|  <b>WARNING</b> | <b>Hot engine and exhaust system.</b><br><b>Can cause severe injury or death.</b><br>Do not work on the engine until it cools.   |
|                 |  |
|  <b>WARNING</b> | <b>Moving parts.</b><br><b>Can cause severe injury or death.</b><br>Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.  |
|                 |  |
|  <b>CAUTION</b> | <b>Hazardous voltage.</b><br><b>Electrical shock can cause injury.</b><br>Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.  |
|                 |  |
|  <b>WARNING</b> | <b>Handling caustic engine fluids and chemical products.</b><br><b>Can cause severe chemical burns, nausea, fainting, or death.</b><br>Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations. |
|                |  |

### 5.1 Preparation

If you plan to take the engine out of service for an extended period of time, prepare the engine according to the procedures described in this section. These preventive measures will help to protect your engine from the cumulative effects of rust and deterioration while it is not being used.

- Perform scheduled periodic maintenance tasks.
- Make all necessary repairs and adjustments.
- Close the fuel valves and disconnect the fuel supply.
- Clean the outside of the engine. Wipe away all visible dirt, dust, and oil.
- Remove the starting key.

### 5.2 Short-Term Storage (Less than 30 Days)

- Disconnect and remove the battery.
- Cover or cap all intake and exhaust ports, including fuel lines, air filter, and engine exhaust.
- Cover the engine with a clean, dry cloth.
- Store the engine in a secure, dry location away from trespassers, children, and animals.

### 5.3 Long-Term Storage (More than 30 Days)

In addition to the short-term tasks, perform the following tasks before placing the engine in storage:

- Change the engine oil and filter.
- Remove the drive belt.
- Protect the cylinders from rust:
  - Disconnect the spark plug wires and remove the spark plugs.
  - Squirt approximately 30 ml (1 ounce) of fresh engine oil into each cylinder.
  - Manually rotate the crankshaft 10–15 times to distribute the oil evenly in the cylinders.
  - Install the spark plugs and reconnect the spark plug wires.
- Cover all exposed metal parts with a suitable protectant.
- Coat all electrical connectors with a suitable protectant.

### 5.4 Maintenance while in Storage

- Inspect the engine regularly (at least once a month). Check for signs of rust or leaks.
- Periodically test the battery voltage and recharge as needed. The battery may lose charge even when disconnected.

### 5.5 Removal from Storage

- Remove protective cloths, covers, and caps from the engine.
- Clean protectant from exposed metal parts and electrical components.
- Reinstall the drive belt.
- Check fluid levels and fill as needed.
- Connect the battery.
- Connect the fuel supply and open fuel valves.
- Start the engine and allow it to run for several minutes without load. Check for leaks and watch for signs of abnormal operation.

**NOTE:**

The engine may smoke when started for the first time after being taken out of storage. This is normal and occurs as the engine burns away the protective oil coating inside the cylinders.

- Check oil pressure and fuel pressure gauges to make sure that the engine is operating normally.

## Section 6. Specifications

### 6.1 Engine Specifications

| Item                             | Specifications   |
|----------------------------------|--|
| Engine Model                     | <b>LORGB04.3PNA</b>                                      |
| Block Type                       | V-6  |
| Number of Cylinders              | 6  |
| Cylinder Bore                    | 101.6 mm (4 in.)   |
| Piston Stroke                    | 88.39 mm (3.48 in.)                                      |
| Displacement                     | 4.3 L (262 in. <sup>3</sup> )                            |
| Rated Output @ 2800 rpm          | <b>LORGB04.3PNA</b>                                      |
|                                  | 117 HP (LPG) 104 HP (NG)                                 |
| Fuel Type                        | NG & LPG See "Fuel Specifications"                       |
| Oil Type / Weight                | See "Oil Recommendations" in the Maintenance section.    |
| Oil Dry Fill Capacity            | 4.3 L (4.5 qt.) (includes filter capacity)               |
| Rotating Direction of Crankshaft | Counterclockwise (face to flywheel)                      |
| Compression Ratio                | 9.6:1  |
| Cylinder Fire Order              | 1-6-5-4-3-2  |
| Lubricating Style                | Pressurized  |
| Starting Style                   | Electric   |
| Net Weight (Dry)                 | 359.7 kg (793 lb.)                                       |
| Overall Dimensions               | 536 mm x 838 mm x 711 mm (29 in. L x 33 in. T x 28 in.W) |
| Aspiration                       | Natural  |

### 6.2 Main Components Specifications

| Item   | Specifications   |
|--|--|
|  | <b>LORGB04.3PNA</b>                                      |
| Oil Pump   | Gear type  |
| Water Pump   | Centrifugal type; no fan                                 |
| Flywheel   | Flywheel with attachment provisions for flywheel adapter |
| Thermostat Settings, Fully Open at                         | 82°C (180°F)   |
| Alternator   | Rated voltage 14 V, rated current 130 A                  |
| Electric Starter   | 1.2 kW, speed reduction type                             |
| Ignition System  | Ignition Coil Pack                                       |
| Spark Plug (use only genuine Origin Engines service parts) | ME18151070   |
| Crankcase Ventilation                                      | Closed crankcase ventilation                             |

### 6.3 Adjustment Specifications

| Item                                       | Specifications                |
|--|-------------------------------|
|  | <b>LORGB04.3PNA</b>           |
| Spark Plug Gap, mm (in.)                   | 0.762 (0.030)                 |
| Electronic Fuel Pressure Regulator         | Nonadjustable                 |
| Throttle                                   | Nonadjustable, ECM controlled |
| Fuel Injection System (Rail and Injectors) | Tamper-proof; nonadjustable   |

## 6.4 Fastener Tightening Specifications

| Application   | Specification |              |
|---|---------------|--------------|
|   | Metric        | English      |
| Camshaft Position Sensor Bolt                                   | 14 N•m        | 10 lbs. ft.  |
| Camshaft Retainer Bolt  | 12 N•m        | 9 lbs. ft.   |
| Camshaft Sprocket Bolt  | 24 N•m        | 18 lbs. ft.  |
| Connecting Rod Nut  | 61 N•m        | 45 lbs. ft.  |
| Coolant Drain Hole Plug   |               |              |
| Left  | 27 N•m        | 20 lbs. ft.  |
| Crankshaft Balancer Bolt  | 108 N•m       | 80 lbs. ft.  |
| Crankshaft Bearing Cap Inner Bolt                               | 102 N•m       | 75 lbs. ft.  |
| Crankshaft Bearing Cap Outer Bolt                               | 47 N•m        | 35 lbs. ft.  |
| Crankshaft Position Sensor Bolt                                 | 9 N•m         | 80 lbs. in.  |
| Cylinder Head Bolt (In Sequence)                                |               |              |
| First Pass  | 61 N•m        | 45 lbs. ft.  |
| Second Pass   | 74 N•m        | 55 lbs. ft.  |
| Third Pass  | 88 N•m        | 65 lbs. ft.  |
| Fourth Pass- Back off One at a Time & Retorque to Specification | 88 N•m        | 65 lbs. ft.  |
| Cylinder Head Coolant Hole Plug                                 | 23 N•m        | 17 lbs. ft.  |
| Exhaust Manifold  |               |              |
| Bolts   | 29 N•m        | 22 lbs. ft.  |
| Flywheel Bolt   | 88 N•m        | 65 lbs. ft.  |
| Front Cover Bolt  | 14 N•m        | 10 lbs. ft.  |
| Ignition Coil Bolt  | 10 N•m        | 96 lbs. in   |
| Intake Manifold Bolt (In Sequence)                              |               |              |
| First Pass  | 3 N•m         | 27 lbs. in.  |
| Second Pass   | 12 N•m        | 106 lbs. in. |
| Third Pass  | 15 N•m        | 11 lbs. ft.  |
| Fourth Pass   | 24 N•m        | 18 lbs. ft.  |
| MAP Sensor Bolt   | 13 N•m        | 10 lbs. ft.  |
| Oil Cooler Hose Fittings  | N/A           | N/A          |
| Oil Filter  | 38 N•m        | 12 lbs. ft.  |
| Oil Filter Adapter  | 54 N•m        | 40 lbs. ft.  |
| Oil Pan Bolt  | 25 N•m        | 18 lbs. ft.  |
| Oil Pan Drain Plug  | 24 N•m        | 18 lbs. ft.  |
| Oil Pump Bolt   | 88 N•m        | 65 lbs. ft.  |
| Oil Pump Cover Bolt   | 12 N•m        | 106 lbs. in  |
| Oil Pump Drive Bolt   | 24 N•m        | 18 lbs. ft.  |
| Spark Plug  | 15 N•m        | 11 lbs. ft.  |
| Thermostat Housing Bolt   | 24 N•m        | 18 lbs. ft.  |
| Valve Lifter Guide Retainer Bolt                                | 24 N•m        | 18 lbs. ft.  |
| Valve Rocker Arm Cover Bolt                                     | 10 N•m        | 89 lbs. in   |
| Valve Rocker Arm Stud   | 61 N•m        | 45 lbs. ft.  |
| Water Pump Bolt   | 47 N•m        | 35 lbs. ft.  |
| Water Pump Pulley Bolt  | 25 N•m        | 19 lbs. ft.  |

## 6.5 Engine Mechanical Specifications

| Application   | Specification                    |                                  |
|---|----------------------------------|----------------------------------|
|   | Metric                           | English                          |
| <b>General Data</b>   |                                  |                                  |
| Engine Type   | Origin V-6                       |                                  |
| Displacement  | 4.3L                             | 262CID                           |
| Bore  | 101.60 mm                        | 4.00 in                          |
| Stroke  | 88.4 mm                          | 3.48 in                          |
| Compression Ratio   | 9.6:1                            |                                  |
| Firing Order  | 1-6-5-4-3-2                      |                                  |
| Spark Plug Gap  | 1.14mm                           | 0.045 in                         |
| <b>Cylinder Head</b>  |                                  |                                  |
| Surface Flatness  | 0.050 mm                         | 0.002 in                         |
| <b>Exhaust Manifold</b>                                       |                                  |                                  |
| Surface Flatness  | 0.254 mm                         | 0.010 in                         |
| <b>Lubrication System</b>                                     |                                  |                                  |
| Oil Capacity without Filter Change                            | 3.78 L                           | 4.0 qt                           |
| Oil Pressure (Minimum)  | 103 kPa @ 1,000 RPM              | 15 psi @ 1,000 RPM               |
| Oil Pump Type   | Gear Driven                      |                                  |
| <b>Cylinder Bore</b>  |                                  |                                  |
| Diameter – Production   | 101.600-101.6127 mm              | 4.000-4.0005 in                  |
| Diameter - Service  | 101.600-101.643 mm               | 4.000-4.0017 in                  |
| Out-of-Round Production (Maximum Minus Minimum Bore Diameter) | 0.0127 mm (Maximum)              | 0.0005 in (Maximum)              |
| Out-of-Round Service (Maximum Minus Minimum Bore Diameter)    | 0.050 mm (Maximum)               | 0.002 IN (Maximum)               |
| Taper Production  | 0.0127 mm (Maximum)              | 0.0005 in (Maximum)              |
| Taper Service - Thrust Axis                                   | 0.050 mm (Maximum)               | 0.002 in (Maximum)               |
| Taper Service - Pin Axis                                      | 0.050 mm (Maximum)               | 0.002 in (Maximum)               |
| <b>Engine Block (Production Specifications)</b>               |                                  |                                  |
| Main Bearing Bore Diameter                                    | 67.0610-67.0814 mm               | 2.6402-2.6410 in                 |
| Lifter Bore Diameter  | 21.417-21.443 mm                 | 0.843-0.844 in                   |
| Deck Height from Crankshaft Bore                              | 195.0466 +/- .0254 mm            | 7.679 +/- .001 in                |
| Head Deck Surface Flatness (entire face)                      | 0.100 mm                         | 0.004 in                         |
| Head Deck Surface Flatness within 150 mm (6 in)               | 0.050 mm                         | 0.002 in                         |
| <b>Piston</b>   |                                  |                                  |
| Piston Diameter   | 101.559-101.575                  | 3.9983-3.999 in                  |
| Clearance Production  |                                  | 0.0015-0.0017 in                 |
| <b>Piston Ring Compression</b>                                |                                  |                                  |
| Top Groove Clearance  | 0.031-0.074 mm                   | 0.0012-0.0029 in                 |
| Second Groove Clearance                                       | 0.031-0.074 mm                   | 0.0012-0.0029 in                 |
| Top Ring Production Gap                                       | 0.254-0.406 mm                   | .010-.016 in                     |
| Top Ring Service Limit Gap                                    | 0.483 mm                         | .019 in (Maximum)                |
| Second Ring Production Gap                                    | 0.381-0.584 mm                   | .015-.023 in                     |
| Second Ring Service Limit Gap                                 | 0.787mm                          | .031 in (Maximum)                |
| <b>Piston Ring Oil Control</b>                                |                                  |                                  |
| Ring Groove Clearance   | 0.051-0.114 mm                   | 0.002-0.0045 in                  |
| Production Gap  | 0.635-0.686 mm                   | .025-.027 in                     |
| Service Limit Gap   | 0.373-1.138 mm                   | .029-.031 in                     |
| <b>Piston Pin</b>   |                                  |                                  |
| Diameter  | 23.56 mm                         | 0.9275 in                        |
| Fit in Connecting Rod   | 0.0381-0.0635 mm<br>Interference | 0.0015-0.0025 in<br>Interference |
| <b>Crankshaft</b>   |                                  |                                  |

## 6.5 Engine Mechanical Specifications (Continued)

|   |                             |                     |
|---|-----------------------------|---------------------|
| Crankshaft Main Journal Runout - Production               | 0.0254 mm (Maximum)         | 0.0010 in (Maximum) |
| Crankshaft Main Journal Runout - Service                  | 0.0254 mm (Maximum)         | 0.0010 in (Maximum) |
| Crankshaft Journal Diameter #1, #2, #3, #4                | 62.1766-62.1967 mm          | 2.4479-2.4487 in    |
| Crankshaft Journal Taper Production                       | 0.0102 mm (Maximum)         | 0.0004 in (Maximum) |
| Crankshaft Journal Out-of-Round Production                | 0.0051 mm (Maximum)         | 0.0002 in (Maximum) |
| Crankshaft Journal Out-of-Round Service Limit             | 0.0254mm (Maximum)          | 0.0010in (Maximum)  |
| Crankshaft Bearing Clearance #1, #2, #3, #4 Production    | 0.038-0.0635 mm             | 0.0015-0.0025 in    |
| Crankshaft Bearing Clearance #1, #2, #3, #4 Service Limit | 0.025-0.089 mm              | 0.0010-0.0035 in    |
| Crankshaft End Play                                       | 0.050-0.203 mm              | 0.0020-0.0080 in    |
| Crankpin Diameter   | 57.119-57.139 mm            | 2.2488-2.2496 in    |
| Crankpin Taper Production                                 | 0.0102 mm (Maximum)         | 0.0004 in (Maximum) |
| Crankpin Out-of-Round Production                          | 0.0102 mm (Maximum)         | 0.0004 in (Maximum) |
| Rod Bearing Clearance Production                          | 0.0254-0.038 mm             | 0.0010-0.0015 in    |
| Rod Bearing Clearance Service Limit                       | 0.0254-0.0635 mm            | 0.0010-0.0025 in    |
| Connecting Rod Side Clearance                             | 0.152-0.432 mm              | 0.0060-0.0170 in    |
| <b>Camshaft</b>   |                             |                     |
| Camshaft Runout - Production                              | 0.051 mm (Maximum)          | 0.002 in (Maximum)  |
| Camshaft Runout - Service                                 | 0.076 mm (Maximum)          | 0.003 in (Maximum)  |
| Lobe Lift Intake  | 7.239 mm                    | .285 in             |
| Lobe Lift Exhaust   | 7.010 mm                    | .276 in             |
| Journal Diameter  | 47.439-47.490 mm            | 1.8677-1.8697 in    |
| Camshaft Bearing Inside Diameter                          | 49.5480-49.5730 mm          | 1.9507-1.9517 in    |
| Camshaft End Play   | 0.0254 - 0.2286 mm          | 0.0010 - 0.0090 in  |
| <b>Balance Shaft</b>                                      |                             |                     |
| Rear Bearing Journal Clearance                            | 0.050 - 0.088 mm            | 0.0020 - 0.0035 in  |
| Rear Bearing Journal Diameter                             | 38.085 - 38.100 mm          | 1.4994 - 1.500 in   |
| Front Bearing Journal Diameter                            |                             | 2.1648-2.1654 in    |
| <b>Valve System</b>                                       |                             |                     |
| Lifter  | Hydraulic, Roller Followers |                     |
| Rocker Arm Ratio  | 1.50:1                      |                     |
| Valve Lash Intake   | Net Lash                    |                     |
| Valve Lash Exhaust  | Net Lash                    |                     |
| Face Angle (Intake/Exhaust)                               | 45 degrees                  |                     |
| Seat Angle (Intake/Exhaust)                               | 45 degrees                  |                     |
| Seat Runout (Intake/Exhaust)                              | 0.050 mm (Maximum)          | 0.002 in (Maximum)  |
| Seat Width Intake   | 0.800-1.200 mm              | 0.030-0.060 in      |
| Seat Width Exhaust  | 1.651-2.159 mm              | 0.060-0.095 in      |
| Stem Clearance Production Intake                          | 0.0254-0.0508 mm            | 0.0010-0.0020 in    |
| Stem Clearance Production Exhaust                         | 0.0508-0.0762 mm            | 0.0020-0.0030 in    |
| Valve Spring Pressure Closed                              | 178-222 N@<br>43.18 mm      | 40-50lb @ 1.700"    |
| Valve Spring Pressure Open                                | 556-600 N@<br>32.33 mm      | 125-135lb @ 1.273"  |
| Valve Spring Installed Height                             | 42.926-43.434 mm            | 1.690-1.710 in      |
| Valve Spring Free Length                                  | 49.40 mm                    | 1.945 in            |
| Valve Head Diameter Intake                                | 49.80 mm                    | 1.940               |
| Valve Head Diameter Exhaust                               | 38.10 mm                    | 1.50 in             |
| Valve Stem Diameter Intake                                | 8.659-8.672 mm              | 0.3409-0.3414in     |
| Valve Stem Diameter Exhaust                               | 8.656-8.669 mm              | 0.3408-0.3413in     |

## 6.6 Standard Torque Specifications

| American Standard Fasteners Torque Specifications |                    |                                   |             |              |                                      |  |
|---|--------------------|-----------------------------------|-------------|--------------|--------------------------------------|--|
| Size  | Torque Measurement | Assembled into Cast Iron or Steel |             |              | Assembled into Aluminum Grade 2 or 5 |  |
|   |                    | Grade 2                           | Grade 5     | Grade 8      |                                      |  |
| 8-32  | Nm (in. lb.)       | 1.8 (16)                          | 2.3 (20)    | -            | See Note 3                           |  |
| 10-24   | Nm (in. lb.)       | 2.9 (26)                          | 3.6 (32)    | -            |                                      |  |
| 10-32   | Nm (in. lb.)       | 2.9 (26)                          | 3.6 (32)    | -            |                                      |  |
| 1/4-20  | Nm (in. lb.)       | 6.8 (60)                          | 10.8 (96)   | 14.9 (132)   |                                      |  |
| 1/4-28  | Nm (in. lb.)       | 8.1 (72)                          | 12.2 (108)  | 16.3 (144)   |                                      |  |
| 5/16-18   | Nm (in. lb.)       | 13.6 (120)                        | 21.7 (192)  | 29.8 (264)   |                                      |  |
| 5/16-24   | Nm (in. lb.)       | 14.9 (132)                        | 23.1 (204)  | 32.5 (288)   |                                      |  |
| 3/8-16  | Nm (ft. lb.)       | 24.0 (18)                         | 38.0 (28)   | 53.0 (39)    |                                      |  |
| 3/8-24  | Nm (ft. lb.)       | 27.0 (20)                         | 42.0 (31)   | 60.0 (44)    |                                      |  |
| 7/16-14   | Nm (ft. lb.)       | 39.0 (29)                         | 60.0 (44)   | 85.0 (63)    |                                      |  |
| 7/16-20   | Nm (ft. lb.)       | 43.0 (32)                         | 68.0 (50)   | 95.0 (70)    |                                      |  |
| 1/2-13  | Nm (ft. lb.)       | 60.0 (44)                         | 92.0 (68)   | 130.0 (96)   |                                      |  |
| 1/2-20  | Nm (ft. lb.)       | 66.0 (49)                         | 103.0 (76)  | 146.0 (108)  |                                      |  |
| 9/16-12   | Nm (ft. lb.)       | 81.0 (60)                         | 133.0 (98)  | 187.0 (138)  |                                      |  |
| 9/16-18   | Nm (ft. lb.)       | 91.0 (67)                         | 148.0 (109) | 209.0 (154)  |                                      |  |
| 5/8-11  | Nm (ft. lb.)       | 113.0 (83)                        | 183.0 (135) | 259.0 (191)  |                                      |  |
| 5/8-18  | Nm (ft. lb.)       | 128.0 (94)                        | 208.0 (153) | 293.0 (216)  |                                      |  |
| 3/4-10  | Nm (ft. lb.)       | 199.0 (147)                       | 325.0 (240) | 458.0 (338)  |                                      |  |
| 3/4-16  | Nm (ft. lb.)       | 222.0 (164)                       | 363.0 (268) | 513.0 (378)  |                                      |  |
| 1-8   | Nm (ft. lb.)       | 259.0 (191)                       | 721.0 (532) | 1109.0 (818) |                                      |  |
| 1-12  | Nm (ft. lb.)       | 283.0 (209)                       | 789.0 (582) | 1214.0 (895) |                                      |  |
| Metric Fasteners Torque Specifications            |                    |                                   |             |              |                                      |  |
| Size  | Torque Measurement | Assembled into Cast Iron or Steel |             |              |                                      | Assembled into Aluminum Grade 5.8 or 8.8 |
|   |                    | Grade 5.8                         | Grade 8.8   | Grade 10.9   |                                      |  |
| M6 x 1.00   | Nm (ft. lb.)       | 6.2 (4.6)                         | 12 (9)      | 13.6 (10)    | See Note 3                           |  |
| M8 x 1.25   | Nm (ft. lb.)       | 15.0 (11)                         | 29.6 (22)   | 33.0 (24)    |                                      |  |
| M8 x 1.00   | Nm (ft. lb.)       | 16.0 (11)                         | 24.0 (18)   | 34.0 (25)    |                                      |  |
| M10 x 1.50  | Nm (ft. lb.)       | 30.0 (22)                         | 52.5 (39)   | 65.0 (48)    |                                      |  |
| M10 x 1.25  | Nm (ft. lb.)       | 31.0 (23)                         | 47.0 (35)   | 68.0 (50)    |                                      |  |
| M12 x 1.75  | Nm (ft. lb.)       | 53.0 (39)                         | 80.0 (59)   | 115.0 (85)   |                                      |  |
| M12 x 1.50  | Nm (ft. lb.)       | 56.0 (41)                         | 85.0 (63)   | 122.0 (90)   |                                      |  |
| M14 x 2.00  | Nm (ft. lb.)       | 83.0 (61)                         | 135.0 (100) | 180.0 (133)  |                                      |  |
| M14 x 1.50  | Nm (ft. lb.)       | 87.0 (64)                         | 133.0 (98)  | 190.0 (140)  |                                      |  |
| M16 x 2.00  | Nm (ft. lb.)       | 127.0 (94)                        | 194.0 (143) | 278.0 (205)  |                                      |  |
| M16 x 1.50  | Nm (ft. lb.)       | 132.0 (97)                        | 201.0 (148) | 287.0 (212)  |                                      |  |
| M18 x 2.50  | Nm (ft. lb.)       | 179.0 (132)                       | 273.0 (201) | 390.0 (288)  |                                      |  |
| M18 x 1.50  | Nm (ft. lb.)       | 189.0 (140)                       | 289.0 (213) | 413.0 (305)  |                                      |  |

**Note:**

1. The torque values above are general guidelines. Always use the torque values specified in the service manuals and/or assembly drawings when they differ from above torque values.
2. The torque values above are based on new plated threads. Increase torque values by 15% if non-plated threads are used.
3. Hardware threaded into aluminum must have either two diameters of thread engagement or a 30% or more reduction in the torque to prevent stripped threads.
4. Torque values are calculated as equivalent stress loading on American hardware with an approximate preload of 90% of the yield strength and a friction coefficient of 0.125.

## 6.7 Maintenance Log

Maintenance intervals are based on hour-meter time or calendar time. Both are based from initial date of operation. Enter Date of initial operation here: \_\_\_\_\_

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 250 Hours or 4 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 500 Hours or 8 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Inspect Air Filter<br><input type="checkbox"/> Inspect PCV System |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 750 Hours or 12 Months/1 yr.</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 1000 Hours or 16 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Replace Air Filter<br><input type="checkbox"/> Replace Spark Plugs and Wires<br><input type="checkbox"/> Inspect Ignition Coils and all Electronic Sensors |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 1250 Hours or 20 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 1500 Hours or 24 Months/2 yr.</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Inspect Air Filter<br><input type="checkbox"/> Inspect PCV System |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

## 6.6 Maintenance Log (Continued)

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 1750 Hours or 28 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 2000 Hours or 32 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Replace Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Replace Air Filter<br><input type="checkbox"/> Replace Spark Plugs and Wires<br><input type="checkbox"/> Inspect Ignition Coils and all Electronic Sensors |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 2250 Hours or 36 Months/3 yr</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 2500 Hours or 40 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Inspect Air Filter<br><input type="checkbox"/> Inspect PCV System |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 2750 Hours or 44 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 3000 Hours or 48 Months/4 yr</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Replace Air Filter<br><input type="checkbox"/> Replace Spark Plugs and Wires<br><input type="checkbox"/> Inspect Ignition Coils and all Electronic Sensors |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

## 6.6 Maintenance Log (Continued)

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 3250 Hours or 52 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 3500 Hours or 56 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Inspect Air Filter<br><input type="checkbox"/> Inspect PCV System |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 3750 Hours or 60 Months/5 yr</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 4000 Hours or 64 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Replace Air Filter<br><input type="checkbox"/> Replace Spark Plugs and Wires<br><input type="checkbox"/> Inspect Ignition Coils and all Electronic Sensors |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 4250 Hours or 68 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 4500 Hours or 72 Months/6 yr</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Inspect Air Filter<br><input type="checkbox"/> Inspect PCV System |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

## 6.6 Maintenance Log (Continued)

| MAINTENANCE LOG   |  |
|---|--|
| <b>Service Interval: 4750 Hours or 78 Months</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>   |  |
| <input type="checkbox"/> Inspect Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Inspect Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply |  |
| Date  |  |
| Engine Hours  |  |
| Mechanic  |  |

| MAINTENANCE LOG  |  |
|--|--|
| <b>Service Interval: 5000 Hours or 84 Months/7yr</b><br><i>*Hours of Operation or Time from Date of Initial Operation</i>  |  |
| <input type="checkbox"/> Replace Alternator/Fan/Water Pump Belt<br><input type="checkbox"/> Inspect Battery<br><input type="checkbox"/> Replace Engine Coolant<br><input type="checkbox"/> Clean Exterior of Radiator<br><input type="checkbox"/> Replace Engine Oil and Filter<br><input type="checkbox"/> Inspect Fuel Lines, Hoses, Fittings and Fuel Supply<br><input type="checkbox"/> Replace Air Filter<br><input type="checkbox"/> Replace Spark Plugs and Wires<br><input type="checkbox"/> Inspect Ignition Coils and all Electronic Sensors |  |
| Date   |  |
| Engine Hours   |  |
| Mechanic   |  |

## 7. Diagnostic Trouble Code (DTC) List

| Fault Description               | Enabled | J1939 DTC |     | J2012 DTC                |                 |
|---------------------------------|---------|-----------|-----|--------------------------|-----------------|
|                                 |         | SPN       | FMI | ISO 15031-5 / Flash Code | ISO 14229 (UDS) |
|                                 |         |           |     | 2-byte DTC               | 3-byte DTC      |
| 5VE1 high voltage               | x       | 1079      | 3   | P0643                    | P0641-12        |
| 5VE1 low voltage                | x       | 1079      | 4   | P0642                    | P0641-11        |
| A/D loss                        | x       | 629       | 31  | P1615                    | P1615-0         |
| AL high gasoline bank1          | x       | 4237      | 0   | P0171                    | P0171-0         |
| AL high gasoline bank2          | x       | 4239      | 0   | P0174                    | P0174-0         |
| AL high LPG                     | x       | 4237      | 0   | P1161                    | P1161-0         |
| AL high NG                      | x       | 4237      | 0   | P1163                    | P1163-0         |
| AL low gasoline bank1           | x       | 4237      | 1   | P0172                    | P0172-0         |
| AL low gasoline bank2           | x       | 4239      | 1   | P0175                    | P0175-0         |
| AL low LPG                      | x       | 4237      | 1   | P1162                    | P1162-0         |
| AL low NG                       | x       | 4237      | 1   | P1164                    | P1164-0         |
| BP high pressure                | x       | 108       | 0   | P2229                    | P2226-12        |
| BP low pressure                 | x       | 108       | 1   | P2228                    | P2226-11        |
| Calibration Configuration Error | x       | 1634      | 13  | P1673                    | P1673-0         |
| Cam sync noise                  | x       | 723       | 2   | P0341                    | P0340-1C        |
| Cam1 loss (intake)              | x       | 723       | 4   | P0342                    | P0340-11        |
| CHT higher than expected 1      | x       | 110       | 16  | P1521                    | P1521-0         |
| CHT higher than expected 2      | x       | 110       | 0   | P1522                    | P1522-0         |
| CL high gasoline bank1          | x       | 4236      | 0   | P1155                    | P1155-0         |
| CL high gasoline bank2          | x       | 4238      | 0   | P1157                    | P1157-0         |
| CL high LPG                     | x       | 4236      | 0   | P1151                    | P1151-0         |
| CL high NG                      | x       | 4236      | 0   | P1153                    | P1153-0         |
| CL low gasoline bank1           | x       | 4236      | 1   | P1156                    | P1156-0         |
| CL low gasoline bank2           | x       | 4238      | 1   | P1158                    | P1158-0         |
| CL low LPG                      | x       | 4236      | 1   | P1152                    | P1152-0         |
| CL low NG                       | x       | 4236      | 1   | P1154                    | P1154-0         |
| COP failure                     | x       | 629       | 31  | P0606                    | P0607-49        |
| Crank sync noise                | x       | 636       | 2   | P0336                    | P0335-1C        |
| ECT / CHT high voltage          | x       | 110       | 3   | P0118                    | P0115-12        |
| ECT / CHT low voltage           | x       | 110       | 4   | P0117                    | P0115-11        |
| Envirotech receipt lost         | x       | 4490      | 18  | U1601                    | U1601-0         |
| Flash checksum invalid          | x       | 628       | 13  | P0601                    | P0607-41        |
| FPP1 high voltage               | x       | 91        | 3   | P2123                    | P2120-12        |
| FPP1 higher than IVS limit      | x       | 91        | 0   | P2115                    | P2115-0         |
| FPP1 low voltage                | x       | 91        | 4   | P2122                    | P2120-11        |
| FPP1 lower than IVS limit       | x       | 91        | 1   | P2139                    | P2139-0         |
| FPP2 high voltage               | x       | 29        | 3   | P2128                    | P2125-12        |
| FPP2 low voltage                | x       | 29        | 4   | P2127                    | P2125-11        |

## 7. Diagnostic Trouble Code (DTC) List (Continued)

| Fault Description                      | Enabled | J1939 DTC |     | J2012 DTC                |                 |
|--|---------|-----------|-----|--------------------------|-----------------|
|  |         | SPN       | FMI | ISO 15031-5 / Flash Code | ISO 14229 (UDS) |
|  |         |           |     | 2-byte DTC               | 3-byte DTC      |
| FT gaseous fuel extremely low          | x       | 3468      | 1   | P0187                    | P0185-11        |
| Fuel rev limit                         | x       | 515       | 16  | P1111                    | P1111-0         |
| Hardware ID Failure                    | x       | 1634      | 2   | P1674                    | P1674-0         |
| IAT high voltage                       | x       | 105       | 3   | P0113                    | P0110-12        |
| IAT higher than expected 1             | x       | 105       | 15  | P0111                    | P0110-1C        |
| IAT higher than expected 2             | x       | 105       | 0   | P0127                    | P0127-0         |
| IAT low voltage                        | x       | 105       | 4   | P0112                    | P0110-11        |
| Invalid interrupt                      | x       | 629       | 31  | P1616                    | P1616-0         |
| IVS/Brake/Trans-Park interlock failure | x       | 0         | 31  | P1531                    | P1531-0         |
| MAP high pressure                      | x       | 106       | 16  | P0108                    | P0105-12        |
| MAP low voltage                        | x       | 106       | 4   | P0107                    | P0105-11        |
| Max govern speed override              | x       | 515       | 15  | P0219                    | P0219-0         |
| Never crank synced at start            | x       | 636       | 8   | P0016                    | P0016-0         |
| Oil pressure low (switch)              | x       | 100       | 1   | P0524                    | P0524-0         |
| RAM failure                            | x       | 630       | 12  | P0604                    | P0607-44        |
| RTI 1 loss                             | x       | 629       | 31  | P1612                    | P1612-0         |
| RTI 2 loss                             | x       | 629       | 31  | P1613                    | P1613-0         |
| RTI 3 loss                             | x       | 629       | 31  | P1614                    | P1614-0         |
| Spark Plug or Coil Pack Failure - 1    | x       | 1268      | 11  | P1351                    | P1351-0         |
| Spark Plug or Coil Pack Failure - 10   | x       | 1277      | 11  | P1360                    | P1360-0         |
| Spark Plug or Coil Pack Failure - 2    | x       | 1269      | 11  | P1352                    | P1352-0         |
| Spark Plug or Coil Pack Failure - 3    | x       | 1270      | 11  | P1353                    | P1353-0         |
| Spark Plug or Coil Pack Failure - 4    | x       | 1271      | 11  | P1354                    | P1354-0         |
| Spark Plug or Coil Pack Failure - 5    | x       | 1272      | 11  | P1355                    | P1355-0         |
| Spark Plug or Coil Pack Failure - 6    | x       | 1273      | 11  | P1356                    | P1356-0         |
| Spark Plug or Coil Pack Failure - 7    | x       | 1274      | 11  | P1357                    | P1357-0         |
| Spark Plug or Coil Pack Failure - 8    | x       | 1275      | 11  | P1358                    | P1358-0         |
| Spark Plug or Coil Pack Failure - 9    | x       | 1276      | 11  | P1359                    | P1359-0         |
| Spark rev limit                        | x       | 515       | 0   | P1112                    | P1112-0         |
| TPS1 high voltage                      | x       | 51        | 3   | P0123                    | P0120-12        |
| TPS1 higher than TPS2                  | x       | 51        | 0   | P0221                    | P0220-1C        |
| TPS1 low voltage                       | x       | 51        | 4   | P0122                    | P0120-11        |
| TPS1 lower than TPS2                   | x       | 51        | 1   | P0121                    | P0120-1C        |
| TPS2 high voltage                      | x       | 3673      | 3   | P0223                    | P0220-12        |
| TPS2 low voltage                       | x       | 3673      | 4   | P0222                    | P0220-11        |
| Unable to reach higher TPS             | x       | 51        | 7   | P2112                    | P2112-0         |
| Unable to reach lower TPS              | x       | 51        | 7   | P2111                    | P2111-0         |
| Voltage high                           | x       | 168       | 15  | P0563                    | P0560-A3        |
| Voltage low                            | x       | 168       | 17  | P0562                    | P0560-A2        |

## 8. Engine and Emissions Warranty

# EMISSION CONTROL WARRANTY STATEMENT

## YOUR WARRANTY RIGHTS AND OBLIGATIONS

The U.S. EPA and Origin Engines, Inc. (Origin) are pleased to explain the emission control system warranty on your 2020 Off-Road Large Spark Ignition certified engine. New off-road Large Spark-Ignition (LSI) engines must be designed, built and equipped to meet stringent Federal anti-smog standards. Origin must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the carburetor, regulator or fuel injection system, ignition system, engine computer unit (ECM), catalytic converter and air induction system. Also included may be sensors, hoses, belts, connectors and other emission-related assemblies. See below the complete Emissions Warranty Parts List.

Where a warrantable condition exists, Origin Engines will repair your LSI engine, including diagnosis, parts and labor, per Origin's approved labor rate and applicable diagnosis and repair times.

### **MANUFACTURER'S WARRANTY COVERAGE:**

The warranty period begins on the date the engine or equipment is placed into service. Operating hours will be determined by the Engine Control Module's (ECM's) internal hour meter.

### **General Emissions-Related Components:**

3 (three) years or 2,500 hours for LSI (Large Spark Ignition) engines, whichever occurs first as per items listed in the "General Emissions Warranty Parts List".

### **High-Cost Emissions-Related Components:**

5 (five) years or 3,500 hours, whichever occurs first

### **OWNER'S WARRANTY RESPONSIBILITIES:**

- a) As the off-road LSI engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. Origin recommends that you retain all receipts covering maintenance of your off-road engine, but Origin cannot deny warranty solely for the lack of receipts or for failure to ensure the performance of all scheduled maintenance.
- b) As the off-road LSI engine owner, you should be aware that Origin may deny your warranty coverage if your off-road engine or a part has failed due to abuse, accidents, neglect, misuse, improper service or maintenance, wrong or contaminated fuel, use of any starting aid, improper cooling concentration or unapproved modifications.
- c) Origin 4.3L prime engines are designed to operate on commercial-grade gasoline (Ethanol content NOT to Exceed 10%), LPG and pipeline-quality natural gas. Use of any other fuels may result in your engine package no longer operating in compliance with EPA emissions requirements and may void your warranty.
- d) You are responsible for initiating the warranty process. Origin suggests that you present your off-road LSI engine to

an Origin Authorized Distributor (dealer) as soon as any problem exists. The warranty repairs should be completed by the Distributor (dealer) as expeditiously as possible.

## **Component Lists**

### **Components Covered under the 2500 hour/3 year Warranty**

- CAM sensor
- CRANK sensor
- Digital Electronic Pressure Regulator (DEPR) (4.3L)
- Engine Control Module (ECM)
- Engine Coolant Temperature (ECT) sensor
- Electronic throttle
- Exhaust manifolds
- Gasoline fuel injector rail
- Gasoline fuel injector
- Gasoline fuel pump
- Gasoline fuel pressure regulator
- Ignition coil pack
- Ignition wires
- Intake manifold(s)
- Manifold Absolute Pressure / Intake Air Temp (TMAP) sensor
- Mixer / Air Valve Carburetor (4.3L)
- Positive Crankcase Ventilation (PCV) valve
- Pre-catalyst oxygen sensor
- Post-catalyst oxygen sensor
- Spark plugs for first 1000 hours of operation
- Wiring Harness

### **Components Covered under the 3500 hour/5 year Warranty**

- Catalyst

If you have any questions regarding your warranty rights or responsibilities, contact Origin Engines at 877-667-6360.

**June 2021**



Origin Engines  
Kearney, Nebraska  
877.667.6360  
[www.OriginEngines.com](http://www.OriginEngines.com)