



SHOCK MOUNTS

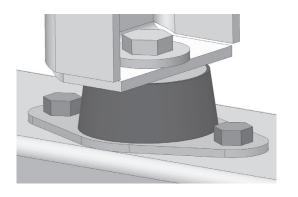



RUBBER VIBRATION ISOLATION Prevents transfer of excessive vibration to base and housing


> FAIL SAFE DESIGN Prevents separation if rubber fails


HEAVY DUTY All shock mounts are robust enough for mobile applications

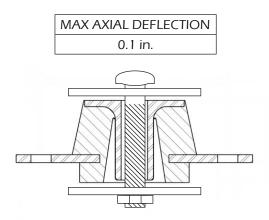

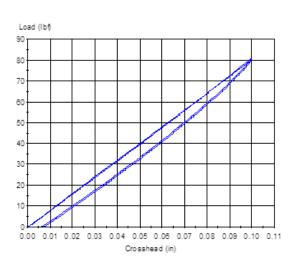





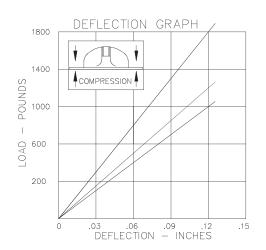

Specifications are subject to change without notice

1-800-733-2112 • www.wincogen.com