




REPLACEMENT PARTS LIST
PORTABLE GENERATOR
MODEL 3W014M

FORM
5S2154
03666

DAYTON ELECTRIC MANUFACTURING CO. CHICAGO 60648

0386/120/1M

XL4000

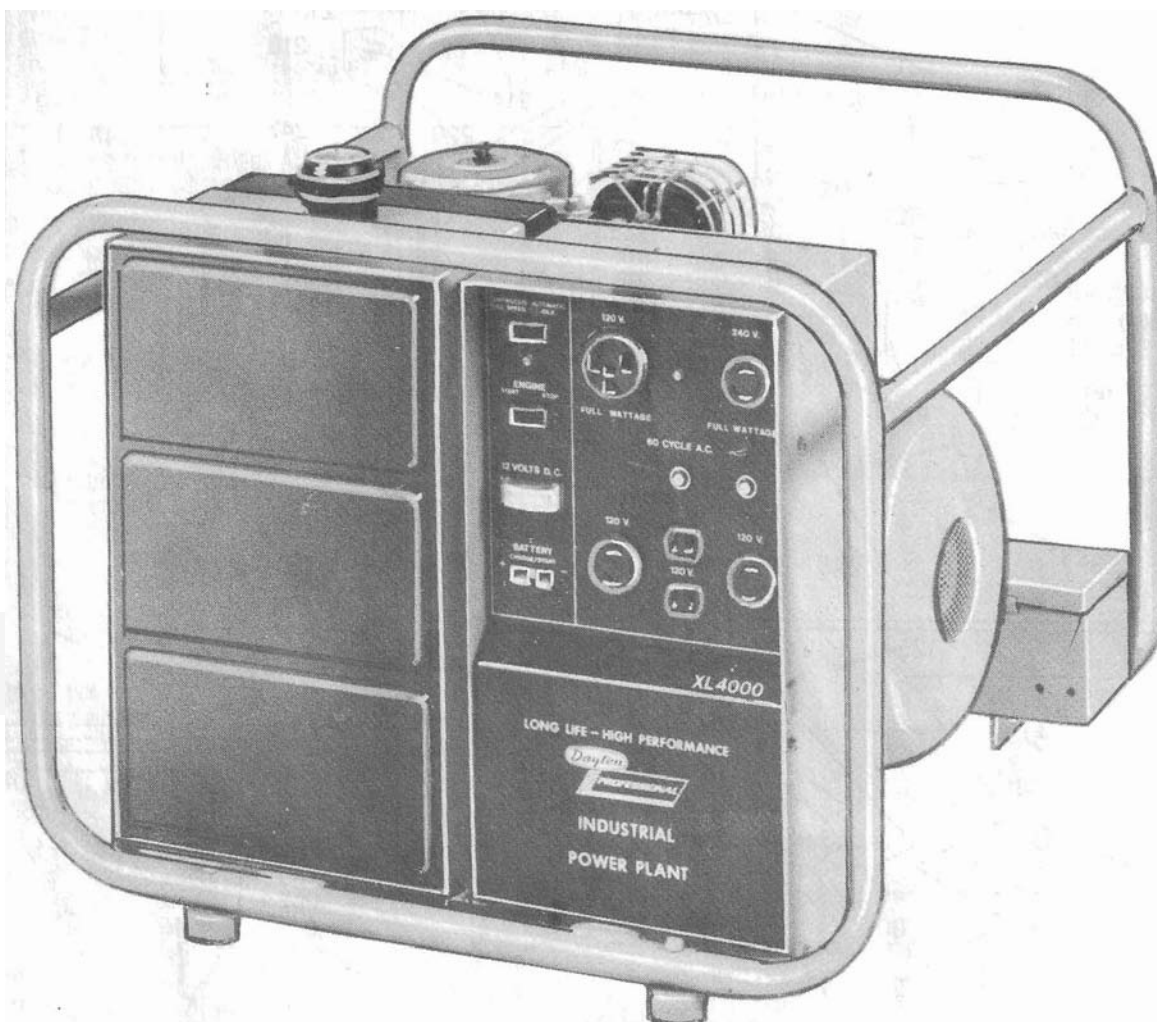

**ORDER REPLACEMENT PARTS THROUGH DEALER
FROM WHOM PRODUCT WAS PURCHASED**

Please provide following information:

- Model Number
- Serial Number (if any)
- Part Description and Number as shown in parts list.

If dealer cannot supply,
order from:
Dayton Electric Mfg. Co.
Parts Department
5959 W. Howard St.
Chicago, Illinois 60648

Figure 1

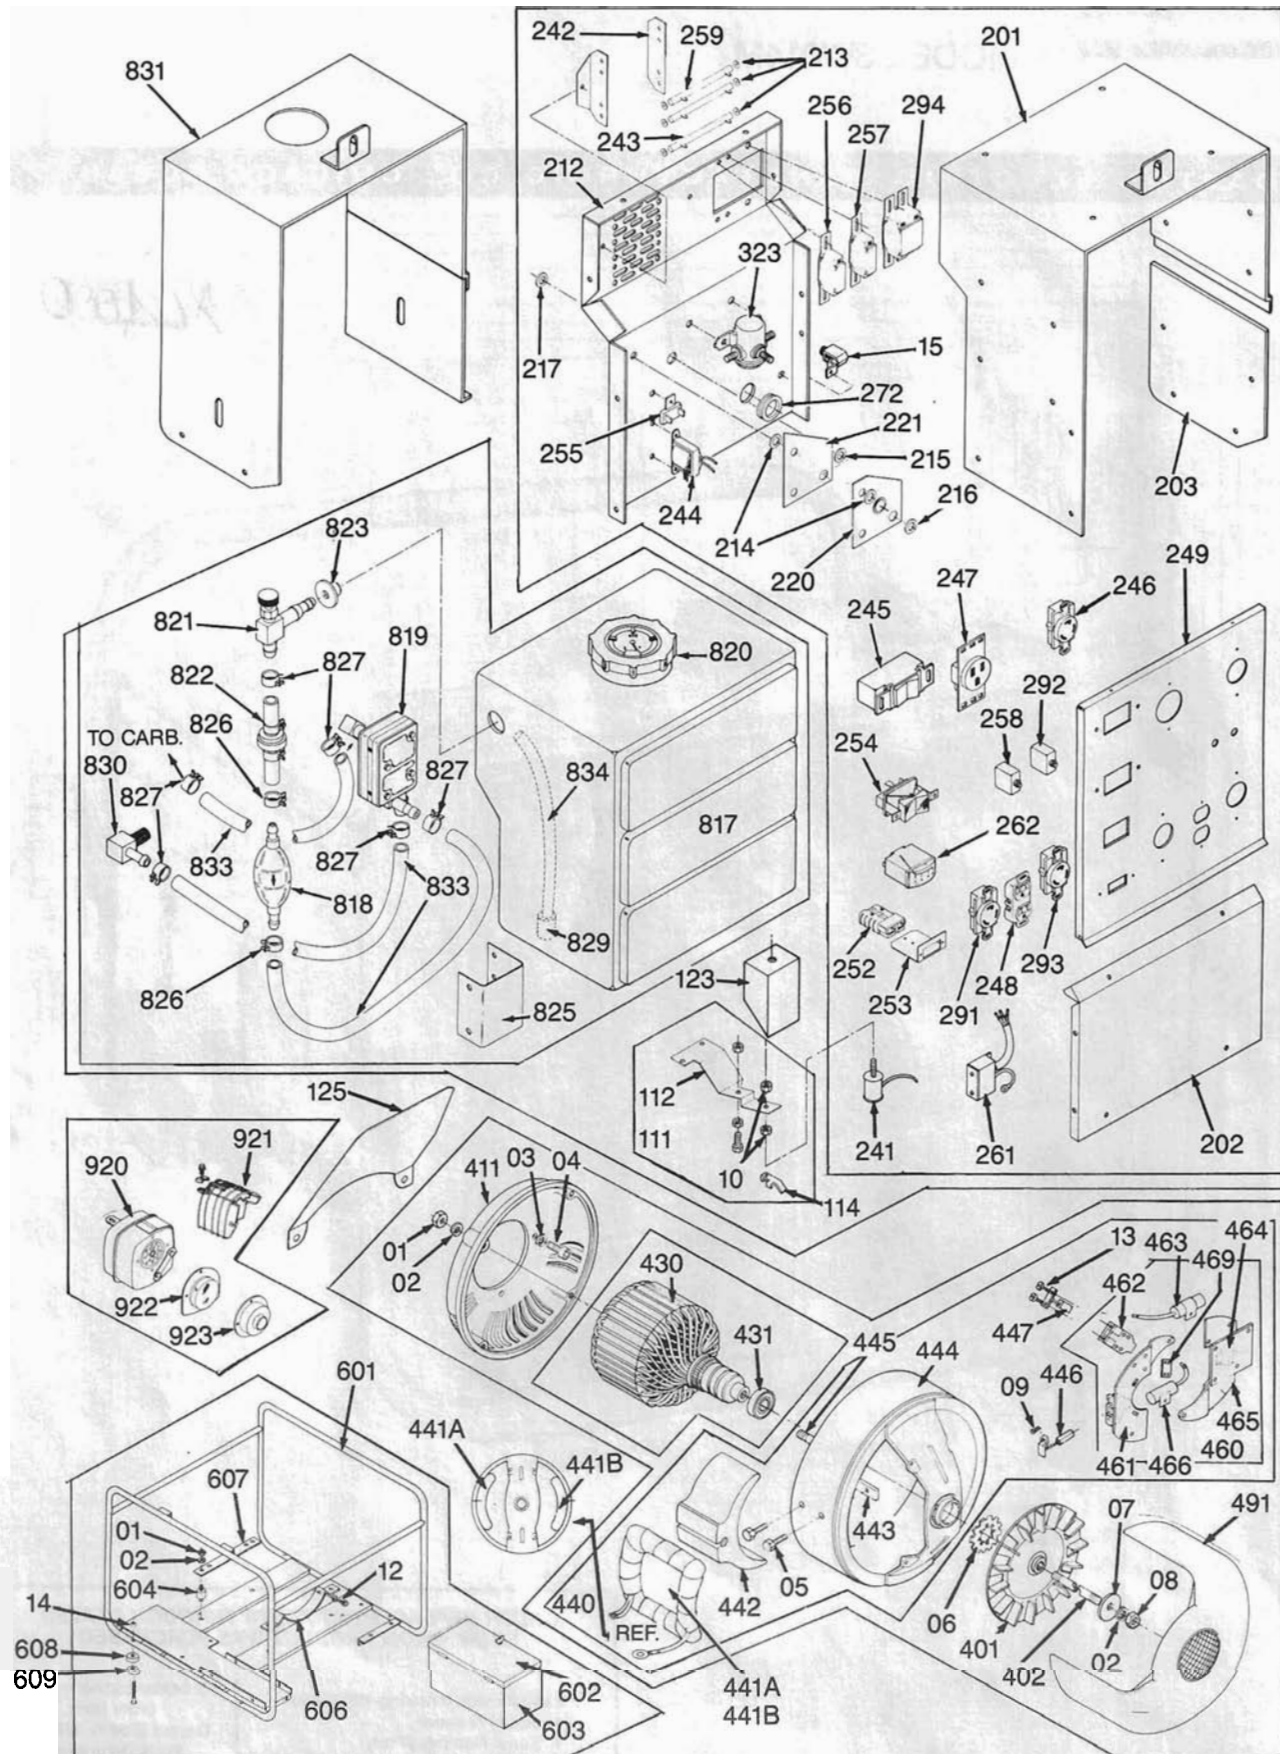


Figure 2 — Replacement Parts Illustration

03666

Replacement Parts List

REF. NO.	DESCRIPTION	PART NO.	QTY.	REF. NO.	DESCRIPTION	PART NO.	QTY.
01	Hex nut, 5/16-18	458*	15	293	Receptacle, NEMA L5 - 20R	56279	1
02	Lockwasher, split, 5/16	480*	16	294	Circuit breaker, 20 amp, 240 V	57030-1	1
03	Lockwasher, split, 3/8	481*	4				
04	Cap screw, hx. hd. 3/8 - 16 x 1 1/4	3290*	4	323	Start solenoid	24061	1
05	Cap screw, hx. hd., GR5, 5/16 - 18 x 1 3/4	9416*	4				
06	Lockwasher, int./ext. tooth, 5/16	55224	1	401	Fan assy	55101	1
07	Washer, flat, 5/16	23558	1	402	Thru bolt	23197-2	1
08	Hex nut, 5/16 - 24	23605*	1	411	End bracket	54178	1
09	Machine screw, B.H., 10 - 04 x 3/8	4637*	4	430	Armature & bearing assy	63233	1
10	Jam nut, 5/16 - 24	44894	2	431	Bearing	55223	1
12	Screw, self tapping, 5/16 - 18 x 3/4	62173	2	440	Field shell & coil assy, less brushes	56915-3	1
13	Machine screw, B.H., 8 - 32 x 5/16	40746*	16	441A	Field coil assy (LH)	54752	1
14	Hex nut, 1/4 - 20	638*	4	441B	Field coil assy (RH)	54752-1	1
15	Ground lug	48042	1	442	Pole shoe assy	24851	2
16	Machine screw, rd. hd., 1/4 - 20 x 1 1/4	487*	4	443	Pole shoe retainer	24849	2
				444	Field shell & bracket assy	62164	1
				445	Stud	23451	4
△	Type drive engine - Briggs & Stratton Model 195432 Type 073501	†	1	446	Brush assy, DC	41393	2
				447	Brush assy, AC	55536	8
111	Conserver parts	Ref. Only	1	460	Brush rack assy (LH), less brushes	63631	1
112	Formed bracket	44827	1	△	Brush rack assy (RH), less brushes	63631-1	1
114	Steel extension	44832	1	461	Mounting plate, LH	41745	1
123	Cover	44891	1	462	Brush holder	59690	8
125	Air deflector	62383	1	463	Capacitor assy	41221	2
				464	Module bracket	62460	1
201	Control box cover assy	63378	1	465	Mounting plate, RH	61093	1
202	Lower front panel	63375	1	466	Capacitor assy	41180	1
203	Lower control box cover	63450	1	469	Barrier spacer	59688	8
212	Back panel (bare)	63376	1	491	End cover assy	55438-13	1
213	Fiber washer	1376	6				
214	Shoulder washer, 1/4	21313	1	601	Cradle assy	63386	1
215	Shoulder washer, 5/16	21981	1	602	Box assy	61992	1
216	Washer, brass, 5/16	8068	1	603	Battery cable assy	62499	1
217	Insulated washer	6892	1	604	Shock mount	23623	4
220	Heat sink diode	54776	1	606	Formed bracket	43291	1
221	Insulator	54798	1	607	Flat bar	43292	1
241	Electromagnet	44889	1	608	Cap	21077	4
242	Bracket, resistor mounting	62050	2	609	Foot	20191	4
243	Resistor	48583	1				
244	Transformer	54196	1	817	Fuel tank	63439	1
245	Switch, conserver	62392	1	818	Primer	62391	1
246	Receptacle, NEMA L6-20R	56281	1	819	Fuel pump	62395-1	1
247	Receptacle, NEMA 5-50R	54545	1	820	Fuel tank cap/gauge	62396-2	1
248	Receptacle, duplex, NEMA 5-15R	24749	1	821	Elbow/shut off valve	63467	1
249	Control panel (bare)	63374	1	822	Fuel filter assy, supplied with engine	Ref. Only	1
251	Conserver module	48574	1	823	Bushing	62409	1
252	Receptacle, DC	56148	1	825	Mounting bracket, fuel pump	63531	1
253	Bracket, DC receptacle	62051	1	826	Clamp, primer	62999-2	2
254	Switch, start/stop	62393	1	827	Clamp, hose	62999-1	6
255	Circuit breaker	91940	1	829	Fuel pickup	63465	1
256	Circuit breaker, 45 amp, 120 V	91977-6	1	830	Elbow, supplied with engine	Ref. Only	1
257	Circuit breaker, 30 amp, 120 V	91977-5	1	831	Fuel tank cover assy	63449	1
258	Circuit breaker, 15 amp, 120 V	63661	1	833	Hose, 1/4 I.D. x 74"	40078	1
259	Resistor	24870	2	834	Hose, fuel tank, 1/4 I.D. x 20"	63466	1
262	DC Ammeter W/Mtg. clip, 0-15 amp	62394	1				
272	Rubber grommet	62486	2	920	Muffler assy	56923	1
291	Receptacle, NEMA L5 - 30R	56359	1	921	Muffler guard	58597	1
292	Circuit breaker, 20 amp	63661-1	1	922	Spark arrestor	58596	1
				923	Deflector	58935	1

*Standard hardware item, available locally.

△Not shown.

†Engine and engine parts available from engine manufacturer.

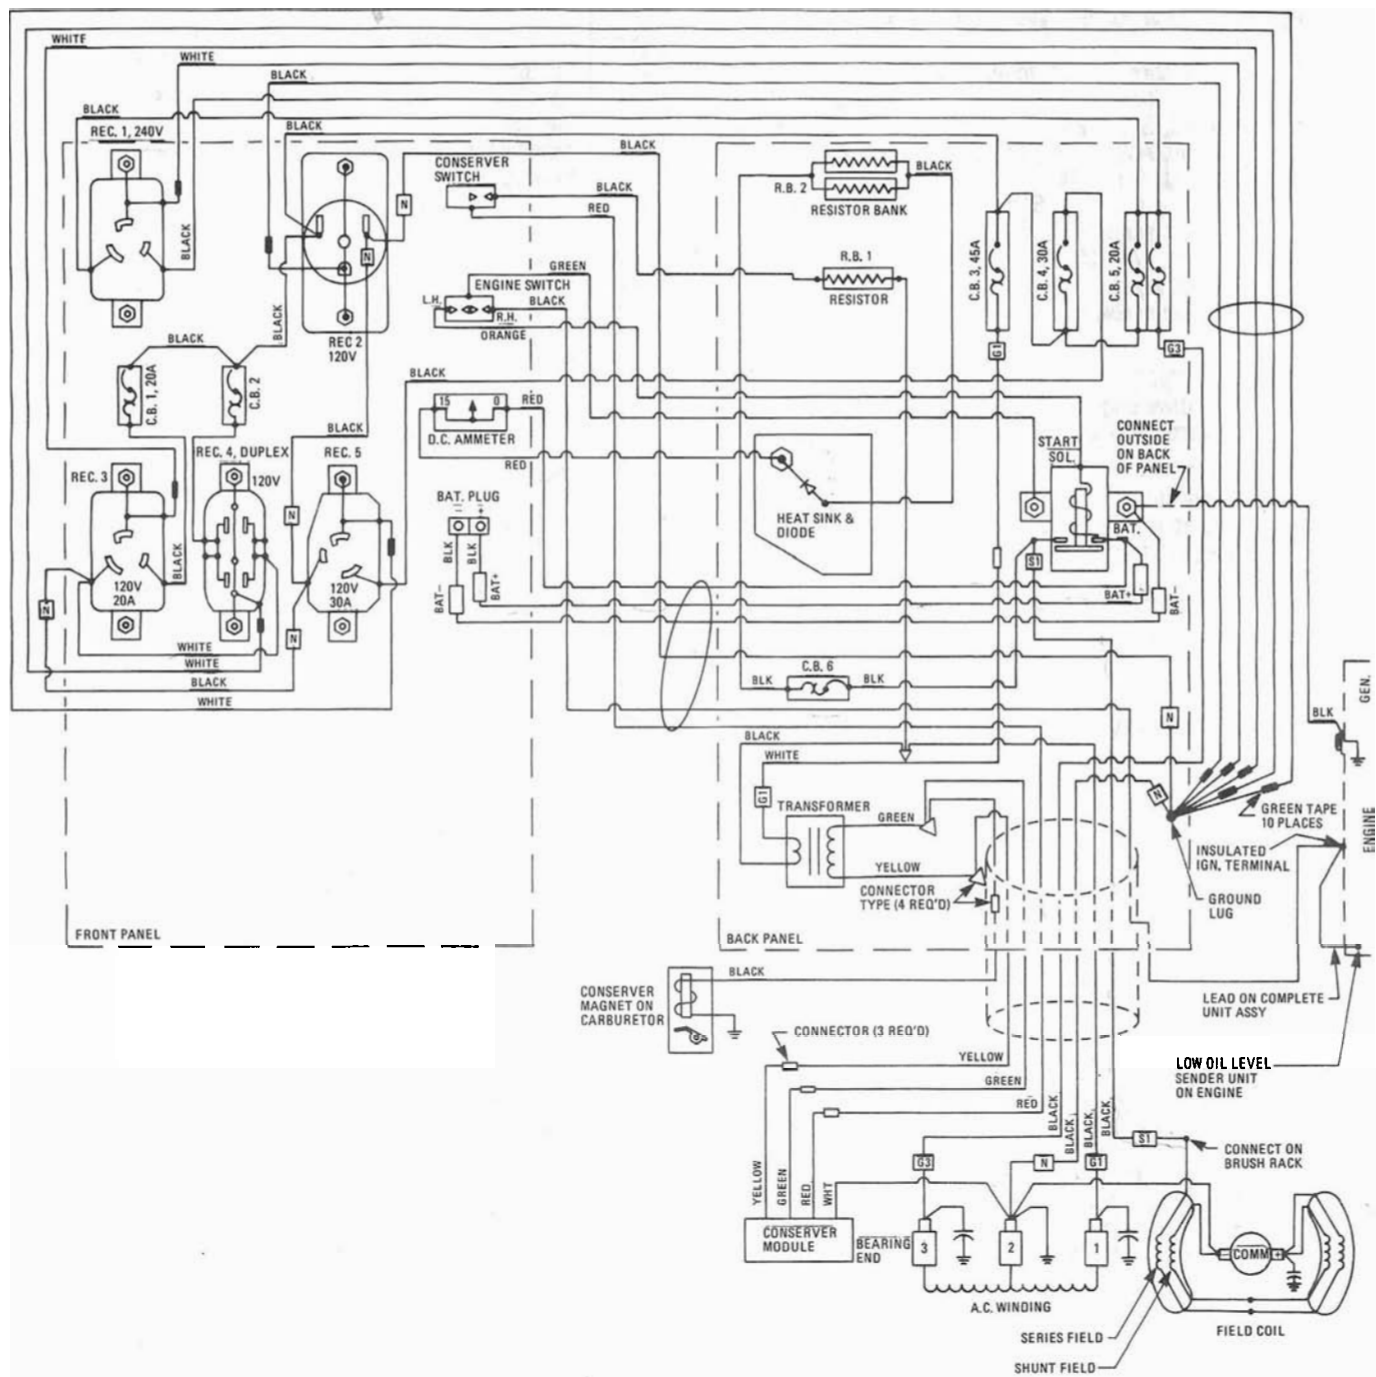


Figure 3 — Wiring Diagram